

**Note: Not under revision control except for FAA distribution.**

**Goodrich Corp.**

**Fuel and Utility Systems, FAA Repair Station No. CV1R074K**

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
042368-01	CONN.PLUG	EUROCOPTER FRANCE AS-350B1/B2; AS-355N,	PMA
042382-01	BACKSHELL,CONN DTU	EUROCOPTER FRANCE AS-350B1/B2, AS-355N,	PMA
043493-01	SWITCH	EUROCOPTER FRANCE AS-350B1/B2, AS-355N,	PMA
043494-01	ACTUAOR,SWITCH	EUROCOPTER FRANCE AS-350B1/B2, AS-355N,	PMA
054146-01	ACCELEROMETER	AGUSTA A109K2,	PMA
054162-01	ACCELEROMETER,B1 AXIAL	AGUSTA A109K2,	PMA
054163-01	ACCELEROMETER,TR IAXIAL	AGUSTA A109K2,	PMA
10010-0000-01	Fuel Quantity Indicator	SF340	CMM
10010-0000-02	INDICATOR FQ SAAB	SAAB SF340A, SF340	PMA
10013-0000-02	INDICATOR	DEHAVILLAND DHC-8-101, DHC-8-100, -200, -300, DEHAVILLAND DHC-8	PMA
10014-0000-02	IND REPEATER	DEHAVILLAND DHC-8-101, DHC-8-100, -200, -300, DEHAVILLAND DHC-8	PMA
10026-0000-01	IND MASTER	EMB-120EMBRAER EMB-120,	PMA
10026-0000-02	INDICATOR FQ EMB	EMBRAER EMB-120, 120	PMA
10027-0000-01	IND REPEATER	EMBRAER EMB-120, EMBRAER EMB-120	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
10031-0000-01	IND ENG OIL-GAL BOEING 737-300	BOEING 737,	PMA
10033-0000-01	INDICATOR HYDRAULIC OIL QTY	BOEING 737,	PMA
10033-0000-02	INDICATOR	BOEING 737,	PMA
10034-0000-01	INDICATOR HYDRAULIC OIL QTY	BOEING 737,	PMA
10034-0000-02	INDICATOR HYD BELLOWS FALLS	BOEING 737,	PMA
10035-2000-01	FUEL SUM UNIT C	BOEING 727-100, -200,	PMA
10035-2000-02	FUEL SUM UN COM	BOEING 737-300, -200, -400, -500,	PMA
10035-2000-03	FUEL SUMM UNIT BOEING 737	BOEING 737-200, -300, -400, -500,	PMA
10035-4000-01	VTO COMP	BOEING 727-100, -200,	PMA
10037-0750	INDICATOR, REFUEL PANEL - STANDARD	BOEING 737-700, -800,	PMA
10037-0770	INDICATOR, REFUEL PANEL - PRESELECT	BOEING 737-600,-700,800,	PMA
10037-1000-0101	IND CFQGS	BOEING 727-100, -200,	PMA
10037-1000-0102	IND CFQGS	BOEING 727-100, -200,	PMA
10037-1000-0103	IND CFQG	BOEING 727-100, -200,	PMA
10037-1000-0104	IND CFQG	BOEING 727-100, -200,	PMA
10037-1000-0105	Fuel Quantity Indicator	Boeing 727-100, -200	CMM
10037-1000-0106	Fuel Quantity Indicator	Boeing 727-100, -200	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
10037-1000-0107	IND CFQG	BOEING 727-100, -200,	PMA
10037-1000-0108	IND CFQG	BOEING 727-100, -200,	PMA
10037-1000-0109	IND CFQG	BOEING 727-100, -200,	PMA
10037-1000-0110	IND CFQG	BOEING 727-100, -200,	PMA
10037-1000-0111	IND CFQGS	BOEING 727-100, -200,	PMA
10037-1000-0151	IND CFQG	BOEING 737-100, -200, -300, -500,	PMA
10037-1000-0152	IND CFQG	BOEING 737-300, -200, -500,	PMA
10037-1000-0153	IND CFQGS 737-300 LBS LLW	BOEING 737-300, -400, -500,	PMA
10037-1000-0154	IND CFQG	BOEING 737-300, -400, -500,	PMA
10037-1000-0155	IND CFQG 737 LBS LLW PMA		BOEING 737-300, -200, -400, -500,
10037-1000-0156	IND CFQG	BOEING 737-300, -200, -400, -500,	PMA
10037-1000-0157	IND CFQG	BOEING 737-300, -200, -500,	PMA
10037-1000-0158	IND CFQG	BOEING 727/737, 737-500,	PMA
10037-1000-0159	IND CFQG	BOEING 737/727, 737-500,	PMA
10037-1000-0160	IND CFQG	BOEING 737/727, 737-500,	PMA
10037-1000-0161	IND CFQG	BOEING 737-100, -200,	PMA
10037-1000-0162	Fuel Quantity Inidicator	Boeing 737-100,-200,	CMM
10037-1000-0163	IND CFQG	BOEING 737-100, -200,	PMA
10037-1000-0164	Fuel Quantity Inidicator	Boeing 737-100,-200,	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
10037-1000-0165	IND CFQG	BOEING 737-100, -200,	PMA
10037-1000-0166	IND CFQG	BOEING 737-100, -200,	PMA
10037-1000-0201	IND WING TANK BOEING 727 LBS LLW	BOEING 727-100, -200,	PMA
10037-1000-0202	IND CENTER TANK 727 LBS LLW	BOEING 727-100, -200,	PMA
10037-1000-0203	IND FUEL QTY	BOEING 727-100, -200,	PMA
10037-1000-0204	IND FUEL QTY	BOEING 727-100, -200,	PMA
10037-1000-0207	IND FUEL QTY	BOEING 727-100, -200,	PMA
10037-1000-0208	IND FUEL QTY	BOEING 727-100, -200,	PMA
10037-1000-0211	IND FUEL QTY	BOEING 727-100, -200,	PMA
10037-4000-0101	727 WING TANK INDICATOR	BOEING 727-100, -200,	PMA
10037-4000-0102	727 CENTER TANK INDICATOR	BOEING 727-100, -200,	PMA
10037-4000-0111	727 CENTER TANK INDICATOR (3 CELL)	BOEING 727-100, -200,	PMA
10037-4000-0201	FUEL QTY INDICATOR	727-100C, 727-200F, BOEING 727-100, -200, 727, 727C.,	PMA
10037-4000-0202	FUEL QTY INDICATOR	727-100C, 727-200F, BOEING 727-100, -200, 727, 727C.,	PMA
10037-4000-0211	FUEL QTY INDICATOR 727	727-100C, 727-200F, BOEING 727-100, -200, 727, 727C.,	PMA
10037-4000-0212	INDICATOR 2 CELL CTR TK B727	727-100C, 727-200F, BOEING 727-100, -200, 727, 727C.,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
10037-4000-0213	FUEL QUANTITY INDICATOR	BOEING 727-100, -200,	PMA
10037-4000-0214	FUEL QUANTITY INDICATOR	BOEING 727-100, -200,	PMA
10040-1000-0101	IND PRIMARY LOCKHEED C-130	LOCKHEED 382G,	PMA
10040-3000-0101	IND TOTALIZER LOCKHEED C-130	LOCKHEED 382G,	PMA
10040-5000-0101	IND REPEATER LOCKHEED C-130	LOCKHEED 382G,	PMA
10042-0000-0101	Torque Indicator	G222	CMM
10044-0000-01	IND METRIC SAAB SF340	SAAB SF340A,	PMA
10048-0000-01	IND PRIMARY DEHAVILLAND DHC-8LR	DEHAVILLAND DHC-8ER-100, DHC-8-100, -200, -300,	PMA
10049-0000-01	IND REPEATER DEHAVILLAND DHC-8LR	DEHAVILLAND DHC-8ER-100, DHC-8-100, -200, -300,	PMA
10051-0000-01	IND ENG OIL-LIT BOEING 737-300	BOEING 737,	PMA
10054-0000-01	IND OIL-GAL/AID BOEING 737/300	BOEING 737,	PMA
10055-0000-01	Fuel Quantity Master Indicator	Embraer EMB-120	CMM
10055-0000-02	INDICATOR FQ EMB-120 METRIC	EMBRAER EMB-120,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
10056-0000-01	IND REPEATER EMB- 120 METRIC	EMBRAER EMB-120,	PMA
10065-1000-0202	FUELING PANEL INDICATOR	BOEING 747-400,	PMA
10065-1000-0303	FUELING PANEL INDICATOR	BOEING 747-400,	PMA
10065-1000-0403	FUELING PANEL INDICATOR	BOEING 747-400,	PMA
10065-1000-0505	INDICATOR FUEL QUANTITY	BOEING 747-400 SERIES,	PMA
10065-2000-0202	PROCESSOR	BOEING 747-400,	PMA
10065-2000-0303	Processor	Boeing 747-400	CMM
10065-2000-0304	PROCESSOR ASSEMBLY FUEL QUANTITY	BOEING 747-400,	PMA
10065-2000-0405	PROCESSOR ASSY FUEL QTY	BOEING 747-400,	PMA
10065-2000-0506	Processor	Boeing 747-400	CMM
10065-2022-02	Chassis Assembly	Boeing 747-400	CMM
10065-2022-03	Chassis Assembly	Boeing 747-400	CMM
10065-2022-04	CHASSIS ASSEMBLY	BOEING 747-400 SERIES,	PMA
10065-2202-02	SCHEMATIC	BOEING 747-400,	PMA
10065-2202-03	SCHEMATIC DIAGRAM		BOEING 747-400, PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
10065-2403-02	FUELING RELAY MODULE	BOEING 747-400,	PMA
10065-2403-04	CIRCUIT CARD ASSEMBLY	BOEING 747-400 SERIES,	PMA
10065-2470-0202	INDIV FUEL QTY CHANNEL MODULE	BOEING 747-400,	PMA
10065-2470-0303	IFQC Circuit Card Assembly	Boeing 747-400	CMM
10065-2470-0304	INDIV FUEL QTY CHANNEL	BOEING 747-400,	PMA
10065-2470-0405	INDIV FUEL QTY CHANNEL	BOEING 747-400,	PMA
10065-2470-0406	IFQC PROGRAMMED ASSEMBLY	BOEING 747-400 SERIES,	PMA
10065-2471-0202	INPUT/OUTPUT CHANNEL MODULE	BOEING 747-400,	PMA
10065-2471-0303	INPUT/OUTPUT CHANNEL	BOEING 747-400,	PMA
10065-2471-0404	INPUT/OUTPUT CHANNEL	BOEING 747-400,	PMA
10065-2471-0405	IOC PROGRAMMED ASSEMBLY	BOEING 747-400 SERIES,	PMA
10065-3000-01	PRESELECT CONTROL UNIT BOEING 747-400	BOEING 747-400,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
10065-3000-02	PRESELECT CONTROL UNIT 747-400	BOEING 747-400 SERIES, 747-400F SERIES,	PMA
10065-4000-0202	REMOTE ELECTRONIC UNIT	BOEING 747-400,	PMA
10065-4000-0303	Remote Electronics Unit	Boeing 747-400	CMM
10065-4000-0304	REMOTE ELECTRONIC UNIT	BOEING 747-400,	PMA
10065-4000-0405	REMOTE ELECT UNIT	BOEING 747-400,	PMA
10065-4000-0406	Remote Electronics Unit	Boeing 747-400	CMM
10065-4001-02	REMOTE ELECT UNIT HOUSING	BOEING 747-400,	PMA
10065-4102-02	HOUSING, CHASSIS	BOEING 747-400,	PMA
10065-5000-01	DENSITOMETER	BOEING 747-400, 757-200,	PMA
	BOEING 747-400		
10065-5000-02	DENSITOMETER BOEING 747/757/767 (E)	747-200B SERIES, 747-200F SERIES, 747-300 SERIES,, 747-400 SERIES, 747-400D SERIES, 747-400F SERIES,, 757-200 SERIES, 757-200PF SERIES, 757-300 SERIES,, 767-200 SERIES, 767-300 SERIES, 767-300F SERIES,, 767-400ER SERIES, BOEING 737-600 SERIES, 737-700 SER	PMA
10066-0000-01	IND OIL QTY LIT	BOEING 737,	PMA
	BOEING 737-200		
10072-04 312, A330-301,	INDICATOR	A330/A340	AIRBUS A340, -211, -311, -212, -
	PMA		
10073-0101	INDICATOR, PRIMARY	LOCKHEED 382G,	PMA

PARTNO	DESCRIPTION	AIRCRAFT	Source
10074-0101	INDICATOR, REPEATOR	LOCKHEED 382G,	PMA
10075-0101	INDICATOR, TOTALIZER	LOCKHEED 382G,	PMA
10078-0101	LOAD SELECT INDICATOR BOEING 757/767	BOEING 757-200, 767-300,	PMA
10079-01	LOAD SELECT CONTROL UNIT BOEING 757/767	BOEING 757-200, 767-300,	PMA
10080-0101	INDICATOR FUEL QUANTITY BOEING 757	BOEING 757-200, 767-300,	PMA
10080-0201	FUEL QUANTITY IND MODULE BOEING 757/767	BOEING 757-200, 767-200, -300,	PMA
10084-01	FUELING PANEL	SAAB 2000,	PMA
10084-02	PANEL, REFUELING	SAAB 2000,	PMA
10084-03	PANEL, REFUELING	SAAB 2000,	PMA
10085-01	Fuel Quantity Master Indicator	Lockheed L-1011-500	CMM
10086-01	Fuel Quantity Repeater Indicator	Lockheed L-1011-500	CMM
10087-0101	INDICATOR A321	A321-111,-112,-131,	PMA
10087-0102	INDICATOR	A321-111,-112,-131,	PMA
10088-0101	PRESELECTOR A321	A321-111,-112,-131,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
10088-0102	PRESELECTOR A321	A321-111,-112,-131,	PMA
10090-01	Fueling Panel	IPTN N250	CMM
10091-01	PRIMARY INDICATOR DHC-8	DEHAVILLAND DHC-8ER-100, DHC-8-100, -200, -300,	PMA
10092-01	REPEATER INDICATOR DEHAVILLAND DHC-8	DEHAVILLAND DHC-8ER-100, DHC-8-100, -200, -300,	PMA
10106-01	IND FUEL QTY 747 CLASSIC (E)	BOEING 747-100, -200, -300,	PMA
10106-03	Fuel Quantity Indicator	Boeing 747 Classics	CMM
10107-01	FUEL QTY IND 747 CLASSIC (E)	200B, 200C, 200F, (7 & 9 TANK), BOEING 747-100, -200, -300, 100B, SUD,,	PMA
10107-03	FUEL QTY INDICATOR	200B, 200C, 200F, -300, BOEING 747-100, -200, 100B, 100B SUD,,	PMA
10107-04	Fuel Quantity Totalizer	Boeing 747 Classics	CMM
10115-01	INDICATOR LRKGS	DHC-8, -300 (MODEL 311),	PMA
10116-01	INDICATOR LRKGS	DHC-8, -300 (MODEL 311),	PMA
10118-01	SELECTOR SWITCH 747 CLASSICS (E)	200B, 200C, 200F, -300, BOEING 747-100, -100B, -100B SUD,,	PMA
10140-01	CDU	EUROCOPTER FRANCE AS-355N,	PMA
10141-01	INDICATOR, REFUEL PANEL	BOEING MD-10-10F,MD-10-30F,	PMA
10147-0101	INDICATOR, REFUEL PANEL	BOEING 737-700(IGW),	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
10148-0101	INDICATOR, REFUEL PANEL	BOEING 737-700(IGW),	PMA
104257-3	RECEPTACLE ASSEMBLY	-300 SEVEN AND NINE TANK CONFIGURATION, BOEING 747-100,- 100B,-100B SUD,-200B,-200C,-200F,	PMA
106-B0-W-1		BOEING 707,	PMA
106-BO-W	Water Gage	BOEING 707,	PMA
106-BO-W-1	Liquid Level Gage	Boeing 707	CMM
20016-0000-01	TANK UNIT OIL CANADAIR CL-601	CANADAIR CL600-1A11, 2A12, 2B16/2B19,	PMA
20016-0000-02	OIL LEVEL PROBE	CANADAIR CL600-2B19 (REGIONAL JET SERIES 100),	PMA
20022-0000-0101	TRANSMITTERWG#1 DEHAV DHC-8	DEHAVILLAND DHC-8-101,	PMA
20022-0000-0102	TRANSMITTERWG#2 DEHAV DHC-8	DEHAVILLAND DHC-8-101,	PMA
20022-0000-0103	TRANSMITTERWG#3 DEHAV DHC-8	DEHAVILLAND DHC-8-101,	PMA
20022-0000-0104	TRANSMITTERWG#4 DEHAV DHC-8	DEHAVILLAND DHC-8-101,	PMA
20022-0000-0105	TRANSMITTERWG#5 DEHAV DHC-8	DEHAVILLAND DHC-8-101,	PMA
20022-0000-0106	TRANSMITTERWG#6 DEHAV DHC-8	DEHAVILLAND DHC-8-101,	PMA
20022-0000-0107	TRANSMITTER LIQ	DEHAVILLAND DHC-8-300,	PMA
20022-0000-0108	TRANSMITTER LIQ	DEHAVILLAND DHC-8-300,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
20025-0000-0101	TRANSMITTER #1 EMBRAER EMB-120	EMBRAER EMB-120,	PMA
20025-0000-0102	TRANSMITTER #2 EMBRAER EMB-120	EMBRAER EMB-120,	PMA
20025-0000-0103	TRANSMITTER #3 EMBRAER EMB-120	EMBRAER EMB-120,	PMA
20025-0000-0104	TRANSMITTER #4 EMBRAER EMB-120	EMBRAER EMB-120,	PMA
20025-0000-0105	TRANSMITTER #5 EMBRAER EMB-120	EMBRAER EMB-120,	PMA
20025-0000-0106	TANK UNIT #6 EMBRAER EMB-120	EMBRAER EMB-120,	PMA
20032-0000-0101	TRANSMITTER COM LOCKHEED C-130	LOCKHEED 382G,	PMA
20032-0000-0102	TRANSMITTER COM LOCKHEED C-130	LOCKHEED 382G,	PMA
20033-0000-0101	TRANSMITTER COM LOCKHEED C-130	LOCKHEED 382G,	PMA
20033-0000-0102	TRANSMITTER COM LOCKHEED C-130	LOCKHEED 382G,	PMA
20033-0000-0103	TRANSMITTER COM LOCKHEED C-130	LOCKHEED 382G,	PMA
20033-0000-0104	TRANSMITTER COM LOCKHEED C-130	LOCKHEED 382G,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
20033-0000-0105	TANK UNITS LOCKHEED C-130	LOCKHEED 382G,	PMA
20033-0000-0106	TANK UNITS LOCKHEED C-130	LOCKHEED 382G,	PMA
20033-0000-0107	TANK UNITS LOCKHEED C-130	LOCKHEED 382G,	PMA
20033-0000-0108	TANK UNITS LOCKHEED C-130	LOCKHEED 382G,	PMA
20033-0000-0109	TANK UNITS LOCKHEED C-130	LOCKHEED 382G,	PMA
20041-0000-01	TANK UNITENGOIL BOEING 737-300	BOEING 737,	PMA
20041-0000-03	TANK UNITENGOIL BOEING 737-300	BOEING 737,	PMA
20043-0000-01	XMTR	BOEING 737,	PMA
20044-0000-01	XMTR	BOEING 737,	PMA
20055-0000-0101	Tank Unit	Cessna 550	CMM
20055-0000-0102	Tank Unit	Cessna 550	CMM
20055-0000-0103	Tank Unit	Cessna 550	CMM
20055-0000-0104	Tank Unit	Cessna 550	CMM
20055-0000-0105	Tank Unit	Cessna 550	CMM
20055-0000-0106	Tank Unit	Cessna 550	CMM
20055-0000-0107	Tank Unit	Cessna 550	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
20067-0000-0101	TANK UNITS LR	DHC-8 DEHAVILLAND DHC-8ER-100, DHC-8-100, -200, -300,	PMA
20068-0000-0101	TANK UNITS LR	DHC-8 DEHAVILLAND DHC-8ER-100, DHC-100, -200, -300,	PMA
20079-0000-0101	XMTR FQIS HRZ S BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0102	XMTR FQIS HRZ S BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0103	XMTR FQIS CTR BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0104	XMTR FQIS CTR BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0105	XMTR FQIS CTR BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0106	XMTR FQIS CTR BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0107	XMTR FQIS CTR BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0108	XMTR FQIS RSRV BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0109	XMTR FQIS RSRV BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0110	XMTR FQIS RSRV BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0111	XMTR FQIS RSRV BOEING 747-400	BOEING 747-400 SERIES,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
20079-0000-0112	XMTR FQIS RSRV BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0113	XMTR FQIS RSRV BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0114	XMTR FQIS MN1/4 BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0115	XMTR FQIS MN1/4 BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0116	XMTR FQIS MN1/4 BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0117	XMTR FQIS MN1/4 BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0118	XMTR FQIS MN1/4 BOEING 747-400	BOEING 747-400 SERIES,	PMA
20079-0000-0119	XMTR FQIS MN1/4 BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0120	XMTR FQIS MN1/4 BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0121	XMTR FQIS MN1/4 BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0122	XMTR FQIS MN1/4 BOEING 747-400	BOEING 747-400 SERIES,	PMA
20079-0000-0123	XMTR FQIS MN1/4 BOEING 747-400	BOEING 747-400 SERIES,	PMA
20079-0000-0124	TANK UNIT BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
20079-0000-0125	XMTR FQIS MN1/4 BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0126	XMTR FQIS MN1/4 BOEING 747-400	BOEING 747-400 SERIES,	PMA
20079-0000-0127	XMTR FQIS MN2/3 BOEING 747-400	BOEING 747-400 SERIES,	PMA
20079-0000-0128	XMTR FQIS MN2/3 BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, RIES,	PMA
20079-0000-0129	XMTR FQIS MN2/3 BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0130	XMTR FQIS MN2/3 BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0131	XMTR FQIS MN2/3 BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0132	XMTR FQIS MN2/3 BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0133	XMTR FQIS MN2/3 BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0134	XMTR FQIS MN2/3 BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0135	XMTR FQIS MN2/3 BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0136	XMTR FQIS MN2/3 BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA
20079-0000-0137	XMTR FQIS MN2/3 BOEING 747-400	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
20079-0000-0138	XMTR FQIS	BOEING BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES, 747-400	PMA
20079-0000-0139	XMTR FQIS	BOEING BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES, 747-400	PMA
20079-0000-0140	Fuel Quantity Transmitter	Boeing 747-400	CMM
20081-0000-0201	CMPNSATR NARROW BOE 747,757,767(E)	200B, 200C, 200F, -300, -400 SERIES,, 747-400D SERIES, 747-400F SERIES, BOEING 747-100, -100B, -100B SUD,,	PMA
20081-0000-0202	COMPENSATOR WIDE GAP	BOEING 747-400 SERIES, 747-400D SERIES, 747-400F S, ERIES, 757-200 SERIES, 757-200PF SERIES, 757-300 S, ERIES, 767-200 SERIES, 767-300 SERIES, 767-300F SE, RIES, 767-400ER SERIES,	PMA
20095-01	TRANSMITTER	BOEING 737,	PMA
20096-0101	TRANS LIQ QTY A330/A340	AIRBUS A340, -211, -311, -212, -312,	PMA
20096-0102	TRANS LIQ QTY A330/A340	AIRBUS A340, -211, -311, -212, -312,	PMA
20096-0103	TRANS LIQ QTY A330/A340	AIRBUS A340, -211, -311, -212, -312,	PMA
20096-0202	FUEL PROBE, CENTRE TANK	312,313, AIRBUS A330-202,223,243,301, A340-211,212,213,311,,	PMA
20096-0203	FUEL PROBE, CENTRE TANK	11,312,313, AIRBUS A330- 202, 301,223,243, A340- 211,212,213,3,	PMA
20097-0101	COMPENSATOR A330/A340	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20097-0201	COMPENSATOR	AIRBUS A330-301,-202, -223, -243, AIRBUS A340-211,-212,-213,-311,-312,313,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
20119-0101	FUEL, PROBE ACT A330/A340	AIRBUS A340, -211, -311, -212, -312,	PMA
20128-0101	LIQUID QTY TRANS BOEING 757/767	BOEING 757-200, 767-300,	PMA
20128-0103	LIQUID QTY TRANS BOEING 757/767	BOEING 757-200,	PMA
20128-0104	LIQUID QTY TRANSMITTERS BOEING 757/767	BOEING 767-300,	PMA
20128-0105	LIQUID QTY TRANSMITTERS BOEING 757/767	BOEING 757-200, 767-300,	PMA
20128-0107	LIQUID QTY TRANSMITTERS BOEING 757/767	BOEING 757-200,	PMA
20128-0108	LIQUID QTY TRANSMITTERS BOEING 757/767	BOEING 757-200,	PMA
20128-0109	LIQUID QTY TRANSMITTERS BOEING 757/767	BOEING 767-300,	PMA
20128-0110	LIQUID QTY TRANSMITTERS BOEING 757/767	BOEING 757-200, 767-300,	PMA
20128-0112	LIQUID QTY TRANS BOEING 757/767	BOEING 767-300,	PMA
20128-0113	LIQUID QTY TRANSMITTERS BOEING 757/767	BOEING 757-200, 767-300,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
20128-0115	LIQUID QTY TRANSMITTERS BOEING 757/767	BOEING 757-200,	PMA
20128-0116	LIQUID QUANTITY TRANSMITTERS BOE 757/767	BOEING 767-300,	PMA
20128-0117	LIQUID QTY TRANSMITTERS BOEING 757/767	BOEING 757-200,	PMA
20128-0118	LIQUID QTY TRANSMITTERS BOEING 757/767	BOEING 757-200,	PMA
20128-0119	LIQUID QTY TRANSMITTERS BOEING 757/767	BOEING 757-200,	PMA
20128-0120	LIQUID QTY TRANSMITTERS BOEING 757/767	BOEING 757-200,	PMA
20128-0121	LIQUID QTY TRANSMITTERS BOEING 757/767	BOEING 767-300,	PMA
20128-0122	LIQUID QTY TRANSMITTERS BOEING 757/767	BOEING 767-300,	PMA
20128-0123	LIQUID QTY TRANS BOEING 757/767	BOEING 767-300,	PMA
20128-0124	LIQUID QTY TRANS BOEING 757/767	BOEING 757-200,	PMA

PARTNO	DESCRIPTION	AIRCRAFT	Source
20128-0125	LIQUID QTY TRANS BOEING 757/767	BOEING 757-200, 767-300,	PMA
20128-0127	LIQUID QTY TRANS BOEING 757/767	BOEING 767-300,	PMA
20128-0128	LIQUID QTY TRANS BOEING 757/767	BOEING 757-200,	PMA
20128-0129	LIQUID QTY TRANS BOEING 757/767	BOEING 767-300,	PMA
20128-0130	LIQUID QTY TRANS BOEING 757/767	BOEING 767-300,	PMA
20128-0131	LIQUID QTY TRANS BOEING 757/767	BOEING 767-300,	PMA
20128-0132	LIQUID QTY TRANS BOEING 757/767	BOEING 767-300,	PMA
20128-0133	TANK UNIT BOEING 757/767	BOEING 767-400ER SERIES,	PMA
20130-0101	TRANSMITTER, FUEL QTY A330/A340	AIRBUS A340, -211, -311, -212, -312,A330-301,	PMA
20130-0102	FUEL PROBE A330 / A340	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20130-0103	TRANSMITTER, FUEL QTY A330/A340	AIRBUS A340, -211, -311, -212, -312,A330-301,	PMA
20130-0104	TRANSMITTER, FUEL QTY A330/A340	AIRBUS A340, -211, -311, -212, -312,A330-301,	PMA
20130-0105	TRANSMITTER, FUEL QTY A330/A340	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
20130-0106	TRANSMITTER, FUEL QTY A330/A340	AIRBUS A340, -211, -311, -212, -312,A330/301,	PMA
20130-0107	TRANSMITTER, FUEL QTY A330/A340	AIRBUS A340, -211, -311, -212, -312,A330-301,	PMA
20130-0108	TRANSMITTER, FUEL QTY A330/A340	AIRBUS A340, -211, -311, -212, -312,A330-301,	PMA
20130-0109	TRANSMITTER, FUEL QTY A330/A340	AIRBUS A340, -211, -311, -212, -312,A330-301,	PMA
20130-0110	TRANSMITTER, FUEL QTY A330/A340	AIRBUS A340, -211, -311, -212, -312A330-301,	PMA
20130-0111	WING, FUEL PROBE A330/A340	AIRBUS A340, -211, -311, -212, -312,A330-301,	PMA
20130-0112	WING, FUEL PROBE A330/A340	AIRBUS A340, -211, -311, -212, -312; A330-301,	PMA
20130-0113	WING, FUEL PROBE A330/A340	AIRBUS A340, -211, -311, -212, -312,A330-301,	PMA
20130-0114	WING, FUEL PROBE A330/A340	AIRBUS A340, -211, -311, -212, -312,A330-301,	PMA
20130-0115	WING, FUEL PROBE A330/A340	AIRBUS A340, -211, -311, -212, -312,A330-301,	PMA
20130-0116	WING, FUEL PROBE A330/A340	AIRBUS A340, -211, -311, -212, -312,A330-301,	PMA
20130-0117	WING, FUEL PROBE A330/A340	AIRBUS A340, -211, -311, -212, -312,A330-301,	PMA
20130-0118	WING, FUEL PROBE A330/A340	AIRBUS A340, -211, -311, -212, -312,A330-301,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
20130-0119	WING, FUEL PROBE A330/A340	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20130-0215	WING PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20130-0218	WING PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20136-0101	TANK UNIT SAAB 2000	SAAB 2000,	PMA
20136-0102	TANK UNIT SAAB 2000	SAAB 2000,	PMA
20136-0103	TANK UNIT SAAB 2000	SAAB 2000,	PMA
20136-0104	TANK UNIT SAAB 2000	SAAB 2000,	PMA
20136-0105	TANK UNIT SAAB 2000	SAAB 2000,	PMA
20136-0106	TANK UNIT SAAB 2000	SAAB 2000,	PMA
20137-0101	LEVEL SENSOR SAAB 2000		SAAB 2000, PMA
20138-1000-0101	SYSTEM TRANSMITTER "A"	BOEING 737-300, -400, -500,	PMA
20138-1000-0201	SYTSEM TRANSMITTER BOEING	BOEING 737-300, -400, -500,	PMA
20139-1000-0101	SYSTEM TRANSMITTER "B"	BOEING 737-300, -400, -500,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
20139-1000-0201	SYSTEM TRANSMITTER BOEING	BOEING 737-300, -400, -500,	PMA
20140-1000-0101	SYSTEM TRANSMITTER 'B' w/LOW LEVEL S	BOEING 737-300, -400, -500,	PMA
20140-1000-0201	SYTSEM TRANSMITTER BOEING	BOEING 737-300, -400, -500,	PMA
20145-0101	FUEL PROBE	AIRBUS A321-111,-112,-131,	PMA
20146-0101	FUEL PROBE, WING MOUNT	AIRBUS A321-111,-112,-131,	PMA
20146-0102	FUEL PROBE, WING MOUNT	AIRBUS A321-111, 112, 131,	PMA
20146-0103	FUEL PROBE, WING MOUNT	AIRBUS A321-111, -112, -131,	PMA
20146-0104	FUEL PROBE, WING MOUNT	AIRBUS A321-111,-112,-131,	PMA
20146-0105	FUEL PROBE, WING MOUNT	AIRBUS A321-111, -112,-131,	PMA
20146-0106	FUEL PROBE, WING MOUNT	AIRBUS A321-111,-112,-131,	PMA
20146-0107	FUEL PROBE, WING MOUNT	AIRBUS A321-111,-112,-131,	PMA
20146-0108	FUEL PROBE, WING MOUNT	AIRBUS A321-111,-112,-131,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
20146-0109	FUEL PROBE, WING MOUNT	AIRBUS A321-111,-112,-131,	PMA
20146-0110	FUEL PROBE, WING MOUNT	AIRBUS A321-111,-112,-131,	PMA
20147-0101	FUEL PROBE	AIRBUS A321-111,-112,-131,	PMA
20147-0102	FUEL PROBE	AIRBUS A-321-111,-112,-131,	PMA
20147-0103	FUEL PROBE	AIRBUS A-321-111,-112,-131,	PMA
20149-0101	DUAL COMPENSATOR	AIRBUS A321-111,-112,-131,	PMA
20150-0101	ULTRA COMP	AIRBUS A321-111,-112,-131,	PMA
20151-0101	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20151-0102	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20151-0103	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20151-0104	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20151-0105	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20151-0106	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20151-0107	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20151-0108	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20151-0109	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20151-0110	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20151-0111	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20151-0112	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
20151-0113	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20151-0114	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20151-0115	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20151-0116	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20151-0117	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20151-0118	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20151-0119	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20151-0120	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20151-0121	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20151-0122	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20151-0123	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20151-0124	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20151-0125	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20151-0204	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20151-0205	FUEL PROBE TRIM TANK A330/A340	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20151-0219	FUEL PROBE	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
20174-0108	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0109	Fuel Quantity Transmitter	Boeing 747 Classic	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
20174-0110	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0111	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0112	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0113	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0114	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0115	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0116	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0117	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0118	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0119	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0120	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0121	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0122	Fuel Quantity Transmitter	Boeing 747 Classic	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
20174-0123	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0124	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0125	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0126	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0129	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0130	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0131	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0132	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0133	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0134	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0135	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0136	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0137	Fuel Quantity Transmitter	Boeing 747 Classic	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
20174-0138	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0139	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0140	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0141	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0164	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0165	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0166	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20174-0172	Fuel Quantity Transmitter	Boeing 747 Classic	CMM
20191-0101	REMOTE FUEL MEASURING STICK	-200B, -200C, -200F, -300,, -400, -400D, -400F, 747SR, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA
20191-0102	REMOTE FUEL MEASURING STICK	-200B, -200C, -200F, -300,, -400, -400D, -400F, 747SR, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA
20191-0103	REMOTE FUEL MEASURING STICK	-200B, -200C, -200F, -300,, -400, -400D, -400F, 747SR, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA
20191-0104	REMOTE FUEL MEASURING STICK	-200B, -200C, -200F, -300,, -400, -400D, -400F, 747SR, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA
20191-0105	REMOTE FUEL MEASURING STICK	-200B, -200C, -200F, -300,, -400, -400D, -400F, 747SR, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
20191-0106	REMOTE FUEL MEASURING STICK	-200B, -200C, -200F, -300,, -400, -400D, -400F, 747SR, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA
20191-0107	REMOTE FUEL MEASURING STICK	-200B, -200C, -200F, -300,, -400, -400D, -400F, 747SR, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA
20191-0108	REMOTE FUEL MEASURING STICK	-200B, -200C, -200F, -300,, -400, -400D, -400F, 747SR, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA
20191-0109	REMOTE FUEL MEASURING STICK	-200B, -200C, -200F, -300,, -400, -400D, -400F, 747SR, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA
20191-0110	REMOTE FUEL MEASURING STICK	-200B, -200C, -200F, -300,, -400, -400D, -400F, 747SR, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA
20191-0111	REMOTE STICK ASSY	-200B, -200C, -200F, -300,, -400, -400D, -400F, 747SR, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA
20191-0112	REMOTE STICK ASSY	-200B, -200C, -200F, -300,, -400, -400D, -400F, 747SR, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA
20191-0113	REMOTE STICK ASSY	-200B, -200C, -200F, -300,, -400, -400D, -400F, 747SR, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA
20191-0201	747 REMOTE STICK ASSEMBLY	-200B, -200C, -200F, -300,, -400, -400D, -400F, 747SR, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA
20191-0202	747 REMOTE STICK ASSY	-200B, -200C, -200F, -300,, -400, -400D, -400F, 747SR, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA
20191-0203	REMOTE STICK ASSY	-200B, -200C, -200F, -300,, -400, -400D, -400F, 747SR, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA
20191-0204	REMOT STICK ASSY	-200B, -200C, -200F, -300,, -400, -400D, -400F, 747SR, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA
20191-0205	REMOTE STICK ASSY	-200B, -200C, -200F, -300,, -400, -400D, -400F, 747SR, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
20191-0206	REMOTE STICK ASSY	-200B, -200C, -200F, -300,, -400, -400D, -400F, 747SR, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA
20191-0207	REMOTE STICK ASSY	-200B, -200C, -200F, -300,, -400, -400D, -400F, 747SR, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA
20191-0208	REMOTE STICK ASSY	-200B, -200C, -200F, -300,, -400, -400D, -400F, 747SR, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA
20191-0209	REMOTE STICK ASSY	-200B, -200C, -200F, -300,, -400, -400D, -400F, 747SR, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA
20191-0210	REMOTE STICK ASSY	-200B, -200C, -200F, -300,, -400, -400D, -400F, 747SR, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA
20191-0211	REMOTE STICK ASSY	-200B, -200C, -200F, -300,, -400, -400D, -400F, 747SR, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA
20191-0212	REMOTE STICK ASSY	-200B, -200C, -200F, -300,, -400, -400D, -400F, 747SR, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA
20191-0213	REMOTE STICK ASSY	-200B, -200C, -200F, -300,, -400, -400D, -400F, 747SR, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA
20200-0102	Tank Unit	Boeing 737-700	CMM
20200-0103	TANK UNIT- LT/RT # 10	BOEING 737-600,-700, -800,	PMA
20200-0104	TANK UNIT - LT/RT # 9	BOEING 737-600, -700, -800,	PMA
20200-0105	Tank Unit	Boeing 737-700	CMM
20200-0106	Tank Unit	Boeing 737-700	CMM
20200-0107	Tank Unit	Boeing 737-700	CMM
20200-0108	Tank Unit	Boeing 737-700	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
20200-0109	Tank Unit	Boeing 737-700	CMM
20200-0110	Tank Unit	Boeing 737-700	CMM
20200-0111	Tank Unit	Boeing 737-700	CMM
20200-0112	Tank Unit	Boeing 737-700	CMM
20200-0113	Tank Unit	Boeing 737-700	CMM
20200-0114	Tank Unit	Boeing 737-700	CMM
20200-0115	TANK UNIT - CTR # 4 & 5 737/700	BOEING 737-600, -700, -800,	PMA
20200-0116	Tank Unit	Boeing 737-700	CMM
20200-0202	TANK UNIT - LT/RT # 12	BOEING 737-600, -700,-800,	PMA
20200-0205	TANK UNIT LT/RT # 8	BOEING 737-600, -700,-800,	PMA
20200-0206	TANK UNIT - LT/RT #7	BOEING 737-600, -700,-800,	PMA
20200-0207	TANK UNIT - LT/RT # 5	BOEING 737-600, -700,-800,	PMA
20200-0208	TANK UNIT - LT/RT # 6	BOEING 737-600, -700,-800,	PMA
20200-0209	TANK UNIT - LT/RT # 4	BOEING 737-600, -700,-800,	PMA
20200-0210	TANK UNIT - LT/RT # 2	BOEING 737-600, -700,-800,	PMA
20200-0211	TANK UNIT - LT/RT # 3	BOEING 737-600, -700,-800,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
20200-0212	TANK UNIT - LT/RT # 1	BOEING 737-600, -700,-800,	PMA
20200-0213	TANK UNIT - CTR - # 1 & 8	BOEING 737-600, -700,-800,	PMA
20200-0214	TANK UNIT - CTR - # 2 & 7 737/700	BOEING 737-600, -700,-800,	PMA
20200-0216	TANK UNIT - CTR - # 3 & 6 737/700	BOEING 737-600, -700,-800,	PMA
20202-01	COMPENSATOR - LT/RT//CTR	BOEING 737-600, -700,-800,	PMA
20217-0101	FUEL PROBE A321 ACT	AIRBUS A321-211, -231,	PMA
20219-0101	HYDRAULIC QUANTITY TRANSMITTER 737/700	BOEING 737-600,-700,-800,	PMA
20220-0101	HYDRAULIC QUANTITY TRANSMITTER 737/700	BOEING 737-600, -700,-800,	PMA
20233-0101	C-106	HUMS	TSO
20233-0102	OAT PROBE	EUROCOPTER FRANCE AS-350B1/B2, AS-355N,	PMA
20251-0101	COMPENSATOR PATS	BOEING 737-700(IGW),	PMA
20252-0101	TANK UNIT	BOEING 737-700 (IGW),	PMA
20252-0102	TANK UNIT	BOEING 737-700 (IGW),	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
20252-0103	TANK UNIT	BOEING 737-700 (IGW),	PMA
20252-0104	Tank Units	Boeing Business Jet	CMM
20252-0105	TANK UNIT	BOEING 737-700 (IGW),	PMA
20252-0106	TANK UNIT	BOEING 737-700 (IGW),	PMA
20252-0107	TANK UNIT	BOEING 737-700 (IGW),	PMA
20252-0108	Tank Units	Boeing Business Jet	CMM
20252-0109	Tank Units	Boeing Business Jet	CMM
20252-0110	TANK UNIT	BOEING 737-700 (IGW),	PMA
20253-0101	Tank Unit	Airbus A300-600 - Am	CMM
20253-0102	Tank Unit	Airbus A300-600 - Am	CMM
20253-0103	Tank Unit	Airbus A300-600 - Am	CMM
20253-0104	Tank Unit	Airbus A300-600 - Am	CMM
20253-0105	Tank Unit	Airbus A300-600 - Am	CMM
20253-0106	Tank Unit	Airbus A300-600 - Am	CMM
20256-0101	Tank Unit	Airbus A300-600 - Am	CMM
20256-0102	Tank Unit	Airbus A300-600 - Am	CMM
20256-0103	Tank Unit	Airbus A300-600 - Am	CMM
20256-0104	Tank Unit	Airbus A300-600 - Am	CMM
20256-0105	Tank Unit	Airbus A300-600 - Am	CMM
20256-0106	Tank Unit	Airbus A300-600 - Am	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
20256-0107	Tank Unit	Airbus A300-600 - Am	CMM
20256-0108	Tank Unit	Airbus A300-600 - Am	CMM
20256-0109	Tank Unit	Airbus A300-600 - Am	CMM
20256-0110	Tank Unit	Airbus A300-600 - Am	CMM
20256-0111	Tank Unit	Airbus A300-600 - Am	CMM
20257-0101	Tank Unit	Airbus A300-600 - Am	CMM
20257-0102	Tank Unit	Airbus A300-600 - Am	CMM
20257-0103	Tank Unit	Airbus A300-600 - Am	CMM
20258-0101	Compensator	Airbus A300-600 - Am	CMM
20258-0102	Compensator	Airbus A300-600 - Am	CMM
20259-0101	Tank Unit	Airbus A300-600 - Am	CMM
20259-0102	Tank Unit	Airbus A300-600 - Am	CMM
20259-0103	Tank Unit	Airbus A300-600 - Am	CMM
20260-0101	Tank Unit	Airbus A300-600 - Am	CMM
300029-01001	Liquid Quantity Compensator	Boeing 727	CMM
300029-0101	Liquid Quantity Compensator	BOEING 727-100,	PMA
30005-0000-06	SIGNAL COND	P & W PWC PW-115/120, 100	PMA
30005-0000-06(B)	Signal Conditioner	PWC PW-120,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
30005-0000-09	SIGNAL COND P & W 100 CANADA	PWC PW-120/120A,	PMA
30005-0000-10	SIGNAL COND P & W 100	PWC PW-115,	PMA
30005-0000-12	SIG COND P & W 100 CANADA	PWC PW-120/120A,	PMA
30005-0000-13	SIG CONDITIONER P & W 100	PWC PW-115/118,	PMA
30005-0000-14	SIG COND P & W 100 CANADA	PWC PW-120A,	PMA
30005-0000-15	SIG COND P & W 100	PWC PW-115/118,	PMA
30005-0000-16	SIG COND P & W 100 CANADA	PWC PW-120,	PMA
30005-0000-18	SIGNAL COND P & W 100	PWC PW-120/120A,	PMA
30005-0000-19	SIGNAL COND P & W 100	PWC PW-115/118/118A,	PMA
30005-0000-20	SIGNAL COND P & W 100	PWC PW-120/120A,	PMA
30005-0000-21	SIGNAL COND P & W 100	PWC PW120A, 121,	PMA
30005-0000-22	SIGNAL COND P & W 100	PWC PW120A, 121,	PMA
30005-0000-24	SIGNAL COND P & W 100	PWC PW-120/120A,	PMA
30005-0000-25	SIGNAL COND P & W 100	PWC PW-120/120A,	PMA

PARTNO	DESCRIPTION	AIRCRAFT	Source
30005-0000-26	SIGNAL COND P & W 100	PWC PW115/118/118A,	PMA
30005-0000-27	SIGNAL COND P & W 100	PWC PW118, 118A,	PMA
30005-0000-28	SIGNAL COND P & W 100 CANADA	PWC PW120, 121,	PMA
30005-0000-29	SIGNAL COND P & W CANADA	PWC PW118, 118A,	PMA
30005-0000-30	SIGNAL COND P & W 100	PWC PW120A, 121,	PMA
30005-0000-31	SIGNAL COND P & W 100	PWC PW120A, 121,	PMA
30005-0000-34	SIGNAL CONDITIONER TORQUE/SPEED	PWC PW120, PW120A, PW121, PW123,	PMA
30005-0000-35	SIGNAL CONDITIONER TORQUE/SPEED	PWC PW120, PW120A, PW121,	PMA
30005-0000-36	SIGNAL CONDITIONER TORQUE/SPEED	PWC PW118/PW118A,	PMA
30005-0000-38	SIGNAL CONDITIONER TORQ/SPEED P & W100	PWC PW120A, PW121, PW123,	PMA
30005-0000-39	SIGNAL CONDITIONER PW- 100	PWC PW120, 120A, 121,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
30005-0000-40	SIGNAL CONDITIONER PW- 100	PWC PW120, 120A, 121,	PMA
30005-0000-41	SIGNAL CONDITIONER PW- 100	PWC PW118, 118A,	PMA
30005-0000-42	SIGNAL CONDITIONER PW- 100	PWC PW123,	PMA
30005-0000-43	SIGNAL CONDITIONER PW- 100	PWC PW123,	PMA
30005-0000-44	SIGNAL CONDITIONER PW 100	PWC 120A, 121,	PMA
30005-0000-45	SIGNAL CONDITIONER PW 100	PW120, 120A,	PMA
30005-0000-46	SIGNAL CONDITIONER PW- 100	PW120A, 121,	PMA
30005-0000-47	SIGNAL CONDITIONER PW- 100	PW120A, 121, 123,	PMA
30005-0000-48	SIGNAL CONDITIONER PW- 100	PW123,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
30005-0000-49	SIGNAL CONDITIONER PW- 100	PW123,	PMA
30005-0000-50	SIGNAL CONDITIONER PW- 100	PW123,	PMA
30005-0000-51	SIGNAL CONDITIONER PW- 100	PW123,	PMA
30005-0000-52	SIGNAL CONDITIONER PW- 100	PW115, 118, 118A, PW119B,	PMA
30005-0000-53	SIGNAL CONDITIONER PW- 100	PW115, 118, 118A, 119B,	PMA
30005-0000-54	SIGNAL CONDITIONER, TORQ UE SPEED	PW120, 120A, 121, 121A,	PMA
30005-0000-55	SIGNAL CONDITIONER, TORQ UE SPEED	PW120A, 121,	PMA
30005-0000-56	SIGNAL CONDITIONER, TORQUE/SPEED	PW123, 123B, 123C, 123D, 123E,	PMA
30005-0000-57	SIGNAL CONDITIONER, TORQUE SPEED	PW118A, 118B, 119B, 119C,	PMA
30012-0000-03	SIGNAL COND SF340	SAAB SAAB SF340A, SF340	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
30012-0000-04	SIGNAL CONDITIONER		SAAB 340A, 340B, PMA
30027-0000-02	CONTROL UNIT CANADAIR CL-601	CANADAIR CL600-1A11, 2A12, 2B16, 2B19,	PMA
30037-0000-01	Fuel Quantity Signal Conditioner	Lockheed L-1011	CMM
30042-0000-0202	CONTROL UNIT BAE A-320	AIRBUS A320,	PMA
30042-0000-0301	CONTROL UNIT BAE A-320	AIRBUS A320-111-211,	PMA
30042-0000-0302	A-320 CONTROL UNIT	AIRBUS A320-111-211,	PMA
30042-0000-0303	A-320 CONTROL UNIT	AIRBUS A320-111-211,	PMA
30042-0000-0401	A-320 CONTROL UNIT	AIRBUS A320-111-211,	PMA
30042-0000-0402	A-320 CONTROL UNIT	AIRBUS A320-111-211,	PMA
30042-0000-0501	A-320 / A321 CONTROL UNIT	A320-111,-211,-212,-214,-231,-232,-233,, A321-111,-112,-113,-114,-131,-132, AIRBUS A319-111,-112,-113,-114,-131,-132,,	PMA
30048-0000-11	AUTOFEATHER UNIT PW-124	PWC PW125B,	PMA
30048-0000-12	AUTOFEATHER UNIT PW-124	PWC PW124A, PW124B,	PMA
30048-0000-14	AUTOFEATHER UNIT PW-124	PWC PW126A,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
30048-0000-18	AUTOFEATHER UNIT P & W 127	PWC PW127,	PMA
30048-0000-21	AUTOFEATHER UNIT	PWC PW127G,	PMA
300498-	FQIS Retrofit Kit	-300 SEVEN AND NINE TANK CONFIGURATIONS, BOEING 747-100,- 100B,-100B SUD,-200B,-200C,-200F,,	PMA
300498-001	RETROFIT KIT 747 CLASSIC FQIS 7 TANK RECT	-200B, -200C, -200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD,,	PMA
300498-001-1	RETROFIT KT 747 CLASSIC FQIS 7 TNK RECT	300; 747SP, BOEING 747-100,-100B,-100B SUD,-200B,-200C,-200F,-,	PMA
300498-001-2	RETRO KT FQIS 7 TANK RECT W/HARDWARE	-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
300498-002	RETROFIT KIT 747 CLASSIC FQIS 9 TANK RECT	-200B, -200C, -200F, -300, 747SP, BOEING 747-100, -100B, 100B SUD,,	PMA
300498-002-1	RETROFIT KT 747 CLASSIC FQIS 9 TNK RECT	300; 747SP, BOEING 747-100,-100B,-100B SUD,-200B,-200C,-200F,-,	PMA
300498-002-2	RETRO KT FQIS 9TANK W/HARDWARE	-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
300498-002-5	RETROFIT KIT 747 CLASSIC 9 TANK RECT	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
300498-002-6	RETROFIT KT 747 CLASSIC FQIS 9 TNK RECT	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-002-7	RETROFIT KIT 747CLASSIC FQIS 9 TNK RECT	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-003-1	RETROFIT KT 747 CLASSIC FQIS 10 TK RECT	-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
300498-003-2	RETRO KT FQIS 10 TANK RECT W/HARDWARE	-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
300498-003-5	RETROFIT KT 747CLASSIC FQIS 10 TNK RECT	BOEING 747-200B, -200C, -200F, -300 747SP,	PMA
300498-003-6	RETROFIT KT 747CLASSIC FQIS 10 TNK RECT	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-003-7	RETROFIT KT 747CLASSIC FQIS 10 TNK RECT	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-004	RETROFIT KIT 747 CLASSIC FQIS 7 TANK CIRC	-200B, -200C, -200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD,,	PMA
300498-004-1	RETROFIT KT 747 CLASSIC FQIS 7 TNK CIRC	300; 747SP, BOEING 747-100,-100B,-100B SUD,-200B,-200C,-200F,-,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
300498-004-3	RETROFIT CLASSIC KIT FQIS 7 TANK RECT.	-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
300498-004-5	RETROFIT KT 747CLASSIC FQIS 7 TANK CIRC	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-004-6	RETROFIT KT 747CLASSIC FQIS 7 TANK CIRC	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-004-7	RETROFIT KT 747CLASSIC FQIS 7 TANK CIRC	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-005	RETROFIT KIT 747 CLASSIC FQIS 9 TNK CIRC	-200B, -200C, -200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD,,	PMA
300498-005-1	RETROFIT KT 747 CLASSIC FQIS 9 TNK CIRC	300; 747SP, BOEING 747-100,-100B,-100B SUD,-200B,-200C,-200F,-,	PMA
300498-005-3	747 RETROFIT CLASSIC KIT FQIS 9 TK CIRC	-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,	PMA
300498-005-5	RETROFIT KT 747CLASSIC FQIS 9 TANK CIRC	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-005-6	RETROFIT KT 747CLASSIC FQIS 9 TANK CIRC	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
300498-005-7	RETROFIT KT 747CLASSIC FQIS 9 TANK CIRC	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-006-1	RETROFIT KT 747 CLASSIC FQIS 10 TK CIRC	-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
300498-006-3	747 RETROFIT CLASSIC KIT FQIS 10 CIRC	-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
300498-006-4	747 RETROFIT CLAASIC KIT FQIS 10 CIRC	-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
300498-006-5	RETROFIT KT 747CLASSIC FQIS 10 TNK CIRC	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-006-6	RETROFIT KT 747CLASSIC FQIS 10 TNK CIRC	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-006-7	RETROFIT KT 747CLASSIC FQIS 10 TNK CIRC	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-007	RETROFIT KIT 747 CLASSIC FQIS 7 TANK RECT	-300 SEVEN AND NINE TANK CONFIGURATIONS, 74, 7SP, BOEING 747-100,-100B,-100B SUD,-200B-200C,-200F,,	PMA
300498-007-1	RETROFIT KT 747 CLASSIC FQIS 7 TK RECT	300; 747SP, BOEING 747-100,-100B,-100B SUD,-200B,-200C,-200F,-,	PMA
300498-007-2	RETRO KT FQIS 7 TK RECT W/HARDWARE	-200F, -300, -747SP, BOEING 747-100, -100B, 100B SUD, -200B, -200C,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
300498-008-1	RETROFIT KT 747 CLASSIC FQIS 7 TNK RECT	300; 747SP, BOEING 747-100,-100B,-100B SUD,-200B,-200C,-200F,-,	PMA
300498-008-2	RETRO KT FQIS 7 TK RECT W/HARDWARE	-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
300498-009-1	RETROFIT KT 747 CLASSIC FQIS 7 TNK CIRC	300; 747SP, BOEING 747-100,-100B,-100B SUD,-200B,-200C,-200F,-,	PMA
300498-010	RETROFIT KIT 747 CLASSIC FQIS 7 TANK CIRC	, SEVEN AND NINE TANK CONFIGURATIONS, 747SP, 747-100, -100B, - 100BSUD, -200B, 200C, -200F, -300,	PMA
300498-010-1	RETROFIT KT 747 CLASSIC FQIS 7 TNK CIRC	300; 747SP, BOEING 747-100,-100B,-100B SUD,-200B,-200C,-200F,-,	PMA
300498-011	RETROFIT KIT 747 CLASSIC FQIS 7 TANK RECT	-200F, -300, 747SP, BOEING 747-100, -100B, -100BSUD, -200B, -200C,,	PMA
300498-011-1	RETROFIT KT 747 CLASSIC FQIS 7 TNK RECT	300; 747SP, BOEING 747-100,-100B,-100B SUD,-200B,-200C,-200F,-,	PMA
300498-011-2	RETRO KT FQIS 7 TK RECT W/HARDWARE	-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
300498-012	RETROFIT KIT 747 CLASSIC FQIS 7 TANK CIRC	-200B, -200C, -200F, -300, 747SP, BOEING RETROFIT KIT 747-100, -100B, - 100BSUD,,	PMA
300498-012-1	RETROFIT KT 747 CLASSIC FQIS 7 TNK CIRC	300; 747SP, BOEING 747-100,-100B,-100B SUD,-200B,-200C,-200F,-,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
300498-013	RETROFIT KIT 747 CLASSIC FQIS 7 TANK CIRC	-200F, -300, 747SP, BOEING 747-100, -100B, -100BSUD, -200B, -200C,,	PMA
300498-013-1	RETROFIT KT 747 CLASSIC FQIS 7 TNK CIRC	300; 747SP, BOEING 747-100,-100B,-100B SUD,-200B,-200C,-200F,-,	PMA
300498-013-2	RETRO KT FQIS 7 TK CIRC W/HARDWARE	-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
300498-014	RETROFIT KIT, 747 CLASSIC FQIS	-300, 747SP, BOEING 747-100,-100B, -100B SUD,-200B,-200C,-200F,,	PMA
300498-014-1	RETROFIT KT 747 CLASSIC FQIS RECT	300; 747SP, BOEING 747-100,-100B,-100B SUD,-200B,-200C,-200F,-,	PMA
300498-014-2	RETRO KT 747 CLASSIC FQIS RECT W/HRDWRE	-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
300498-014-3	RETROFIT KIT, 747 CLASSICS, 9 TANK RECT	-200F, -300, 747SP, 747SR, BOEING 747-100, -100B, -100B SUD, -200B, - 200C,,	PMA
300498-015-1	RETROFIT KT 747 RECT W/ ALT PROC. LOC.	-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
300498-015-2	RETROFIT KIT 747 RECT W/ALT PROC LOC	-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
300498-015-5	RETROFIT KT 747 CLASSIC FQIS 9 TNK RECT	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-015-6	RETROFIT KIT, 747-SP	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
300498-015-7	RETROFIT KT 747CLASSIC FQIS 9 TANK RECT	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-016-1	RETROFIT KT 747 RECT W/ALT PROC.LOC.	-300, -747SP, BOEING 747-100,-100B,-100B SUD,-200B,-200C,-200F,,	PMA
300498-017-1	747 CLASSIC FQIS RETROFIT KIT 9 TK CIRC	-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
300498-017-5	RETROFIT KT 747CLASSIC FQIS 9 TANK CIRC	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-017-6	RETROFIT KT 747CLASSIC FQIS 9 TANK CIRC	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-017-7	RETROFIT KT 747CLASSIC FQIS 9 TANK CIRC	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-018-1	RETROFIT KIT, 747 CLASSICS, 9 TANK M5	-300,747SP, BOEING 747-100,-100B,-100B SUD,-200B,-200C,-200F,,	PMA
300498-018-2	RETROFIT KIT, 747 CLASSIC FQIS	-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
300498-018-5	RETROFIT KT 747CLASSIC FQIS 9 TANK RECT	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-018-6	RETROFIT KT 747CLASSIC FQIS 9 TANK RECT	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
300498-018-7	RETROFIT KT 747CLASSIC FQIS 9 TANK RECT	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-019-1	RETROFIT KIT, 747 CLASSICS, 9-TANK, M5	-300,747SP, BOEING 747-100,-100B,-100B SUD,-200B,-200C,-200F,,	PMA
300498-019-5	RETROFIT KT 747CLASSIC FQIS 9 TANK CIRC	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-019-6	RETROFIT KT 747CLASSIC FQIS 9 TANK CIRC	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-019-7	RETROFIT KIT, 747 CLASSICS, 9 TANK	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-020-1	RETROFIT KIT, 747 CLASSIC FQIS	-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
300498-020-2	RETROFIT KIT, 747 CLASSIC FQIS	-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
300498-020-5	RETROFIT KT 747CLASSIC FQIS 9 TANK RECT	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-020-6	RETROFIT KT 747CLASSIC FQIS 9 TANK CIRC	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-020-7	RETROFIT KT 747CLASSIC FQIS 9 TANK RECT	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-021-1	RETROFIT KIT, 747 CLASSIC FQIS	-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
300498-021-5	RETROFIT KT 747CLASSIC FQIS 9 TANK CIRC	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-021-6	RETROFIT KT 747CLASSIC FQIS 9 TANK CIRC	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-021-7	RETROFIT KT 747CLASSIC FQIS 9 TANK CIRC	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-022-1	RETROFIT KIT, 747 CLASSICS, 9 TK CIRC.	-200F, -300, 747SP, 747SR, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
300498-022-5	RETROFIT KT 747CLASSIC FQIS 9 TANK CIRC	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-022-6	RETROFIT KT 747CLASSIC FQIS 9 TANK CIRC	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-022-7	RETROFIT KT 747CLASSIC FQIS 9 TANK CIRC	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-023-1	RTROFIT KIT, 747 CLASSICS, 9 TK RECT.	-200F, -300, 747SP, 747SR, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
300498-023-5	RETROFIT KT 747CLASSIC FQIS 9 TANK RECT	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
300498-023-6	RETROFIT KT 747CLASSIC FQIS 9 TANK RECT	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-023-7	RETROFIT KT 747CLASSIC FQIS 9 TANK RECT	BOEING 747-200B, -200C, -200F, -300, 747SP,	PMA
300498-024-2	747 CLASSICS RETRO	BOEING 747SP-21, B747SP	PMA
300636	WIRING HARNESS KIT	BOEING 737-100, -200,	PMA
300636-1	WIRING HARNESS KIT	BOEING 737-100, -200,	PMA
300637	WIRING HARNESS KIT	BOEING 737-300, -400,-500,	PMA
300637-1	WIRE HARNESS KIT ROUND CONNECTER	BOEING 737-300, -400, -500,	PMA
300643-01	LGIWS RETROFIT KIT	DOUGLAS DC-9, -31, -32, -34,	PMA
300643-0101	LGIWS RETROFIT KIT	31,-32,-32F,33F,-34,34F, DOUGLAS DC-9-10,-11, -12, -13,-14,-15F,20, -21, 30,	PMA
300643-0201	RETOKIT LANDGEARIND & WARN SYS DC9 SER40	DC-9-40, -41,	PMA
300643-0301	RETRKIT LANDGEAR IND & WARN SYS DC9 SER5	DC-9-50, -51,	PMA
300661	727 FQIS KIT	BOEING 727, 727C, 727-100, -100C,	PMA

PARTNO	DESCRIPTION	AIRCRAFT	Source
300682-01	KIT, FUEL QTY DC-8 8 TANK	DC-8-62, -62F, -63, -63F, -72, -72F, -73F,	PMA
300707-01	KIT LIST FOR CLASSIC 747-100/-200	747-100, -100B, -100BSUD, 200B, 200C, 200F, -300,	PMA
30071-0101	FUEL QTY PROCESSOR UNIT BOEING 757/767	BOEING 757-200,	PMA
30071-0202	FUEL QTY PROCESSOR UNIT BOEING 757/767	BOEING 757-200,	PMA
30071-0303	FUEL QUANTITY PROCESSOR BOEING 757/767	BOEING 767-300,	PMA
30071-0404	FUEL QUANTITY PROCESSOR BOEING 757/767	BOEING 757-200, 767-200, -300,	PMA
30071-0505	757 PROCESSOR	BOEING 757-200 SERIES, -300,	PMA
30071-0606	767 PROC	BOEING 767-300 SERIES, -300F SERIES,	PMA
30071-0607	FUEL QUANTITY PROCESSOR	-400ER SERIES, BOEING 767-200 SERIES, -300 SERIES, -300F SERIES,,	PMA
30071-2411-0101	CIRCUIT CARD ASSEMBLY IFQC	BOEING 757-200,	PMA
30071-2421-0101	CIRCUIT CARD ASSEMBLY IO	BOEING 757-200,	PMA
30071-2441-0101	CIRCUIT CARD ASSEMBLY, BITE PROGRMD.	BOEING 757-200,	PMA

PARTNO	DESCRIPTION	AIRCRAFT	Source
300716-0101	FiDS Master Kit List 727	BOEING 727-200 SERIES,	PMA
300716-0202	FIDS MASTER KIT LIST 727 AUX	BOEING 727-200 SERIES,	PMA
300716-0303	B727 FIRE DETECTION SYS MASTER KIT LIST	BOEING 727-200 SERIES,	PMA
300716-XXXX PMA	FiDS Master Drawing List		BOEING 727-227 STC00089BO,
300717-0101	FiDS ELECTRICAL KIT BOEING 727-223,-227 727	STC ST00089BO,	PMA
300717-0302	FIDS,MD-82 ELECTRICAL KIT	DOUGLAS DC-9-82 STC ST00093BO,	PMA
300717-0402	FIDS,MD-83 ELECTRICAL KIT	DOUGLAS DC-9-83 STC ST00093BO,	PMA
300718-0101	FiDS WIRING/DETECTOR MTG KIT 727	BOEING 727-223,-227 STC ST00089BO,	PMA
300718-0102	FIDS,MD-82 WIRING/DETECTOR MOUNTING KIT	DOUGLAS DC-9-82 STC ST00093BO,	PMA
300718-0202	FIDS,MD-83 WIRING/DETECTOR MOUNTING KIT	DOUGLAS DC-9-83 STC ST00093BO,	PMA
300719-0101	FiDS SUPPRESSION SYSTEM KIT 727	BOEING 727-223,-227 STC ST00089BO,	PMA

PARTNO	DESCRIPTION	AIRCRAFT	Source
300719-0102	FIDS,MD-82/83 SUPPRESSION SYSTEM KIT	DOUGLAS DC-9-82,DC-9-83 STC ST00093BO,	PMA
300723-0101	SHIP SET RETRO KIT	AIRBUS A300 MODEL B4-605R STC ST00092BO,	PMA
300724-0101	FIDS STRUCTURAL COMPONENT KIT 727	BOEING 727-223,-227 STC ST00089BO,	PMA
300724-0102	FIDS,MD-82 STRUCTURAL COMPONENT KIT	DOUGLAS DC-9-82 STC ST00093BO,	PMA
300724-0202	FIDS,MD-83 STRUCTURAL COMPONENT KIT	DOUGLAS DC-9-83 STC ST00093BO,	PMA
300724-0301	FIDS STRUCTURAL COMPONENT KIT 727 AUX	BOEING 727-223 STC ST00089BO,	PMA
300729-0101	FIDS,MD-82 RETROFIT KIT	DOUGLAS DC-9-82 STC ST00093BO,	PMA
300729-0202	FIDS,MD-83 RETROFIT KIT	DC-9-83 STC ST00093BO,	PMA
300729-0303	ALITALIA,MD-82	MCDONNELL DOUGLAS DC-9-82,	PMA
300730-0101	FIDS,DC-10 RETROFIT KIT	MCDONNELL DOUGLAS DC-10-10,	PMA
30074-01	SIGNAL CONDITIONER SAAB 2000	SAAB 2000,	PMA
300761-0101	MD-82 COCKPIT MOD KIT	MCDONNELL DOUGLAS DC-9-82,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
300762-0101	MD-82 E & E BAY MOD KIT	MCDONNELL DOUGLAS DC-9-82,	PMA
300766-30-00111	TSD RETROFIT KIT 300,400 500 SERIES	BOEING 737-300,-400,-500 SERIES,	PMA
300766-30-00222	737TSD RETROFIT KIT300,400,500SERIES	BOEING 737-300, -400, -500 SERIES,	PMA
300766-33-10111	-300/400/500 SERIES	BOEING 737-300, -400, -500 SERIES,	PMA
300766-33-10222	-300/400/500 SERIES	BOEING 737-300, -400, -500 SERIES,	PMA
300766-33-10333	-300/400/500 SERIES	BOEING 737-300, -400, -500 SERIES,	PMA
300766-33-10444	-300/400/500 SERIES	BOEING 737-300, -400, -500 SERIES,	PMA
300780-0101	747 CLASSICS WIRE HARN TERMINATION KIT	-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
30079-01	Signal Conditioner	IPTN N250	CMM
300793-0101	KIT LIST, IFQT, 10 TANK, 7 PIN REFUEL	747-100B SERIES, 747-100B SUD SERIES,, 747-200B SERIES, 747-200C SERIES, 747-200F SERIES,, 747-300 SERIES, BOEING 747SP SERIES, 747SR SERIES, 747-100 SERIES,,	PMA
300793-0102	KIT LIST, IFQT, TEN TANK, 10 PIN REFUEL	747-100B SERIES, 747-100B SUD SERIES,, 747-200B SERIES, 747-200C SERIES, 747-200F SERIES,, 747-300 SERIES, BOEING 747SP SERIES, 747SR SERIES, 747-100 SERIES,,	PMA
300793-0103	KIT LIST, IFQT, 9 TANK, 7 PIN REFUEL	747-100B SERIES, 747-100B SUD SERIES,, 747-200B SERIES, 747-200C SERIES, 747-200F SERIES,, 747-300 SERIES, BOEING 747SP SERIES, 747-100 SERIES,,	PMA
300793-0104	KIT LIST, IFQT, 9 TANK, 10 PIN REFUEL	747-100B SERIES, 747-100B SUD SERIES,, 747-200B SERIES, 747-200C SERIES, 747-200F SERIES,, 747-300 SERIES, BOEING 747SP SERIES, 747-100 SERIES,,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
300793-0105	KIT LIST, IFQT, 7 TANK, 7 PIN REFUEL	747-100B SERIES, 747-100B SUD SERIES,, 747-200B SERIES, 747-200C SERIES, 747-200F SERIES,, 747-300 SERIES, BOEING 747SP SERIES, 747-100 SERIES,,	PMA
300793-0106	KIT LIST, IFQT, 7 TANK, 10 PIN REFUEL	747-100B SERIES, 747-100B SUD SERIES,, 747-200B SERIES, 747-200C SERIES, 747-200F SERIES,, 747-300 SERIES, BOEING 747SP SERIES, 747-100 SERIES,,	PMA
300793-0107	747-SP IFQT INSTALLATION KIT LIST	747-100B SERIES, 747-100B SUD SERIES,, 747-200B SERIES, 747-200C SERIES, 747-200F SERIES,, 747-300 SERIES, BOEING 747SP SERIES, 747SR SERIES, 747-100 SERIES,,	PMA
300793-0108	747-SP IFQT INSTALLATION KIT LIST	747-100B SERIES, 747-100B SUD SERIES,, 747-200B SERIES, 747-200C SERIES, 747-200F SERIES,, 747-300 SERIES, BOEING 747SP SERIES, 747SR SERIES, 747-100 SERIES,,	PMA
300793-0109	747-SP IFQT, INSTALLATION KIT LIST	747-100B SERIES, 747-100B SUD SERIES,, 747-200B SERIES, 747-200C SERIES, 747-200F SERIES,, 747-300 SERIES, BOEING 747SP SERIES, 747SR SERIES, 747-100 SERIES,,	PMA
300803-0115		BOEING 737-500 SERIES,	PMA
300803-1000-0115	KIT LIST, 737 IFQT	BOEING 737-300SERIES, -500SERIES,	PMA
300817-1000-0101	737-400 IFQT SUB-KIT LIST	BOEING 737-400 SERIES,	PMA
300817-1000-0102	737-400 IFQT SUB-LIST	BOEING 737-400 SERIES,	PMA
300817-1000-0103	737-400 IFQT SUB-KIT LIST	BOEING 737-400 SERIES,	PMA
300817-1000-0104	737-400 IFQT SUB-KIT LIST	BOEING 737-400 SERIES,	PMA
300817-1000-0105	737-400 IFQT SUB-KIT LIST	BOEING 737-400 SERIES,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
300817-1000-0106	737-400 IFQT SUB-KIT LIST	BOEING 737-400 SERIES,	PMA
300817-1000-0107	737-400 IFQT SUB-KIT LIST	BOEING 737-400 SERIES,	PMA
300817-1000-0108	737-400 IFQT SUB-KIT LIST	BOEING 737-400 SERIES,	PMA
300817-1000-0109	737-400 IFQT SUB-KIT LIST	BOEING 737-400 SERIES,	PMA
300817-1000-0110	737-400 IFQT SUB-KIT LIST	BOEING 737-400 SERIES,	PMA
300817-1000-0111	737-400 IFQT SUB-KIT LIST	BOEING 737-400 SERIES,	PMA
300817-1000-0112	737-400 IFQT SUB-KIT LIST	BOEING 737-400 SERIES,	PMA
300817-1000-0113	737-400 IFQT SUB-KIT LIST	BOEING 737-400 SERIES,	PMA
300817-1000-0114	737-400 IFQT SUB-KIT LIST	BOEING 737-400 SERIES,	PMA
300817-1000-0115	737-400 IFQT SUB-KIT LIST	BOEING 737-400 SERIES,	PMA
300817-1000-0116	737-400 IFQT SUB-KIT LIST	BOEING 737-400 SERIES,	PMA
300817-1000-0117	737-400 IFQT SUB-KIT	BOEING 737-400 SERIES,	PMA
300817-1000-0118	737-400 IFQT SUB-KIT LIST	BOEING 737-400 SERIES,	PMA
300817-1000-0119	737-400 IFQT SUB-KIT LIST	BOEING 737-400 SERIES,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
300817-1000-0120	737-400 IFQT SUB-KIT LIST	BOEING 737-400 SERIES,	PMA
300817-1000-0121	737-400 IFQT SUB-KIT LIST	BOEING 737-400 SERIES,	PMA
300817-1000-0122	737-400 IFQT SUB-KIT LIST	BOEING 737-400 SERIES,	PMA
300817-1000-0123	737-400 IFQT SUB-KIT LIST	BOEING 737-400 SERIES,	PMA
300817-1000-0124	737-400 IFQT SUB-KIT LIST	BOEING 737-400 SERIES,	PMA
300817-1000-0125	737-400 IFQT SUB-KIT LIST	BOEING 737-400 SERIES,	PMA
300817-1000-0126	737-400 IFQT SUB-KIT LIST	BOEING 737-400 SERIES,	PMA
300817-1000-0127	737-400 IFQT SUB-KIT LIST	BOEING 737-400 SERIES,	PMA
300817-1000-0128	737-400 IFQT SUB-KIT LIST	BOEING 737-400 SERIES,	PMA
300818-0104		BOEING 737-300 SERIES,	PMA
300818-1000-0101	KIT LIST, 737-300/-500	BOEING 737-300 SERIES,	PMA
300818-1000-0102	KIT LIST, 737-300/-500	BOEING 737-300 SERIES,	PMA
300818-1000-0103	KIT LIST, 737-300/-500	BOEING 737-300 SERIES,	PMA
300818-1000-0105	KIT LIST, 737-300/-500	BOEING 737-300 SERIES,	PMA
300818-1000-0106	KIT LIST, 737-300/-500	BOEING 737-300 SERIES,	PMA
300818-1000-0107	KIT LIST, 737-300/-500	BOEING 737-300 SERIES,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
300818-1000-0108	KIT LIST, 737-300/-500	BOEING 737-300 SERIES,	PMA
300818-1000-0109	KIT LIST, 737-300/-500	BOEING 737-300 SERIES,	PMA
300818-1000-0110	KIT LIST, 737-300/-500	BOEING 737-300 SERIES,	PMA
300818-1000-0111	KIT LIST, 737-300/-500	BOEING 737-300 SERIES,	PMA
300818-1000-0112	KIT LIST, 737-300/-500	BOEING 737-300 SERIES,	PMA
300818-1000-0114	KIT LIST, 737-300/-500	BOEING 737-300 SERIES,	PMA
300818-1000-0115	KIT LIST, 737-300/-500	BOEING 737-300 SERIES,	PMA
300818-1000-0116	KIT LIST, 737-300/-500	BOEING 737-300 SERIES,	PMA
300818-1000-0117	KIT LIST, 737-300/-500	BOEING 737-300 SERIES,	PMA
300818-1000-0118	KIT LIST, 737-300/-500	BOEING 737-300 SERIES,	PMA
300818-1000-0119	KIT LIST, 737-300/-500	BOEING 737-300 SERIES,	PMA
300818-1000-0120	KIT LIST, 737-300/-500	BOEING 737-300 SERIES,	PMA
300818-1000-0121	KIT LIST, 737-300/-500	BOEING 737-300 SERIES,	PMA
300818-1000-0122	KIT LIST, 737-300/-500	BOEING 737-300 SERIES,	PMA
300818-1000-0123	KIT LIST, 737-300/-500	BOEING 737-300 SERIES,	PMA
300818-1000-0124	KIT LIST, 737-300/-500	BOEING 737-300 SERIES,	PMA
300818-1000-0125	KIT LIST, 737-300/-500	BOEING 737-300 SERIES,	PMA
300818-1000-0126	KIT LIST, 737-300/-500	BOEING 737-300 SERIES,	PMA
300818-1000-0127	KIT LIST, 737-300/-500	BOEING 737-300 SERIES,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
300818-1000-0128	KIT LIST, 737-300/-500	BOEING 737-300 SERIES,	PMA
300818-1000-113		BOEING 737-300 SERIES,	PMA
300819-1000-0101	737-100/200 IFQT SUB- KIT LIST	BOEING 737-200 SERIES, 737-200C SERIES,	PMA
300819-1000-0108	737-100/200 IFQT SUB- KIT LIST	BOEING 737-200 SERIES, 737-200C SERIES,	PMA
300819-1000-0115	737-100/200 IFQT SUB- KIT LIST	BOEING 737-200 SERIES, 737-200C SERIES,	PMA
300819-1000-0122	737-100/200 IFQT SUB- KIT LIST	BOEING 737-200 SERIES, 737-200C SERIES,	PMA
300820-1000-0101	737-300/500 IFQT SUB- KIT	BOEING 737-300 SERIES, 737-500 SERIES,	PMA
300820-1000-0102	737-300/500 IFQT SUB KIT LIST	BOEING 737-300 SERIES, 737-500 SERIES,	PMA
300820-1000-0103	737-300/500 IFQT SUB- KIT LIST	BOEING 737-300 SERIES, 737-500 SERIES,	PMA
300820-1000-0104	737-300/500 IFQT SUB- KIT LIST	BOEING 737-300 SERIES, 737-500 SERIES,	PMA
300820-1000-0105	737-300/500 IFQT SUB- KIT LIST	BOEING 737-300 SERIES, 737-500 SERIES,	PMA
300820-1000-0106	737-300/500 IFQT SUB- KIT LIST	BOEING 737-300 SERIES, 737-500 SERIES,	PMA
300820-1000-0107	737-300/500 IFQT SUB- KIT LIST	BOEING 737-300 SERIES, 737-500 SERIES,	PMA
300820-1000-0108	737-300/500 IFQT SUB- KIT LIST	BOEING 737-300 SERIES, 737-500 SERIES,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
300820-1000-0109	737-300/500 IFQT SUB- KIT LIST	BOEING 737-300 SERIES, 737-500 SERIES,	PMA
300820-1000-0110	737-300/500 IFQT SUB- KIT LIST	BOEING 737-300 SERIES, 737-500 SERIES,	PMA
300820-1000-0111	737-300/500 SUB-KIT LIST	BOEING 737-300 SERIES, 737-500 SERIES,	PMA
300820-1000-0112	737-300/500 IFQT SUB- KIT	BOEING 737-300 SERIES, 737-500 SERIES,	PMA
300820-1000-0113	737-300/500 IFQT SUB- KIT LIST	BOEING 737-300 SERIES, 737-500 SERIES,	PMA
300820-1000-0114	737-300/500 IFQT SUB- KIT LIST	BOEING 737-300 SERIES, 737-500 SERIES,	PMA
300820-1000-0115	737-300/500 SUB KIT LIST	BOEING 737-300 SERIES, 737-500 SERIES,	PMA
300820-1000-0116	737-300/500 IFQT SUB- KIT LIST	BOEING 737-300 SERIES, 737-500 SERIES,	PMA
300820-1000-0117	737-300/500 IFQT SUB- KIT LIST	BOEING 737-300 SERIES, 737-500 SERIES,	PMA
300820-1000-0118	737-300/500 IFQT SUB- KIT LIST	BOEING 737-300 SERIES, 737-500 SERIES,	PMA
300820-1000-0119	737-300/500 IFQT SUB- KIT LIST	BOEING 737-300 SERIES, 737-500 SERIES,	PMA
300820-1000-0120	737-300/500 IFQT SUB- KIT LIST	BOEING 737-300 SERIES, 737-500 SERIES,	PMA
300820-1000-0121	737-300/500 IFQT SUB- KIT LIST	BOEING 737-300 SERIES, 737-500 SERIES,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
300820-1000-0122	737-300/500 IFQT SUB- KIT LIST	BOEING 737-300 SERIES, 737-500 SERIES,	PMA
300820-1000-0123	737-300/500 IFQT SUB- KIT LIST	BOEING 737-300 SERIES, 737-500 SERIES,	PMA
300820-1000-0124	737-300/500 IFQT SUB- KIT LIST	BOEING 737-300 SERIES, 737-500 SERIES,	PMA
300820-1000-0125	737-300/500 IFQT SUB- KIT LIST	BOEING 737-300 SERIES, 737-500 SERIES,	PMA
300820-1000-0126	737-300/500 IFQT SUB- KIT LIST	BOEING 737-300 SERIES, 737-500 SERIES,	PMA
300820-1000-0127	737-300/500 IFQT SUB- KIT LIST	BOEING 737-300 SERIES, 737-500 SERIES,	PMA
300820-1000-0128	737-300/500 SUB-KIT LIST	BOEING 737-300 SERIES, 737-500 SERIES,	PMA
300824-1000-0101	737 ANALOG TSD SUB KIT LIST	BOEING 737-100, -200, -300, -400, -500 SERIES,	PMA
300824-1000-0102	737 ANALOG TSD SUB-KIT LIST	BOEING 737-100, -200, -300, -400, -500 SERIES,	PMA
300824-1000-0103	737 ANALOG TSD SUB KIT LIST	BOEING 737-100, -200, -300, -400, -500 SERIES,	PMA
300824-1000-0104	737 ANALOG TSD SUB KIT LIST	BOEING 737-100,-200,-300,-400,-500 SERIES,	PMA
300824-1000-0105	737 ANALOG TSD SUB-KIT LIST	BOEING 737-100, -200, -300, -400, -500 SERIES,	PMA
300824-1000-0106	737 ANALOG TSD SUB-KIT LIST	BOEING 737-100, -200, -300, -400, -500 SERIES,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
300824-1000-0107	737 ANALOG TSD SUB-KIT LIST	BOEING 737-100, -200, -300, -400, -500 SERIES,	PMA
300824-1000-0108	737 ANALOG TSD SUB-KIT LIST	BOEING 737-100, -200, -300, -400, -500 SERIES,	PMA
300824-1000-0109	737 ANALOG TSD SUB-KIT LIST	BOEING 737-100, -200, -300, -400, -500 SERIES,	PMA
300824-1000-0110	737 ANALOG TSD SUB-KIT LIST	BOEING 737-100, -200, -300, -400, -500 SERIES,	PMA
300824-1000-0111	737 ANALOG TSD SUB-KIT LIST	BOEING 737-100, -200, -300, -400, -500 SERIES,	PMA
300824-1000-0112	737 ANALOG TSD SUB-KIT LIST	BOEING 737-100, -200, -300, -400, -500 SERIES,	PMA
300824-1000-0113	737 ANALOG TSD SUB-KIT LIST	BOEING 737-100, -200, -300, -400, -500 SERIES,	PMA
300824-1000-0114	737 ANALOG TSD SUB-KIT LIST	BOEING 737-100, -200, -300, -400, -500 SERIES,	PMA
300824-1000-0115	737 ANALOG TSD SUB-KIT LIST	BOEING 737-100, -200, -300, -400, -500 SERIES,	PMA
300824-1000-0116	737 ANALOG TSD SUB-KIT LIST	BOEING 737-100, -200, -300, -400, -500 SERIES,	PMA
300824-1000-0117	ANALOG TSD SUB- KIT LIST	BOEING 737-100, -200, -300, -400, -500 SERIES,	PMA
300836-0103	FSTSD INSTALLATION KIT, 737 NG	BOEING 737-600,-700,-700C,-800,-900 SERIES,	PMA
30092-01	Preselect Control Unit	Boeing 747 Classics	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
30093-0101	FUEL QTY PROC 747 CLASSIC (E)	200B, 200C, 200F, (7 & 9 TANK), BOEING 747-100, -300, 100B, SUD.,	PMA
30093-0102	Processor	Boeing 747 Classic	CMM
30093-2022-01	Chassis Assembly	Boeing 747 Classic	CMM
30093-2403-01	Relay/Lamp Driver Circuit Card Assembly	Boeing 747 Classics	CMM
30093-2441-0101	BITE Circuit Card Assembly	Boeing 747 Classics	CMM
30093-2470-0101	IFQC Circuit Card Assembly	Boeing 747 Classics	CMM
30093-2471-0102	I/OC Circuit Card Assembly	Boeing 747 Classics	CMM
30128-01	FUEL QTY PROCESSOR UNIT 737/700	BOEING 737-600, -700,-800,	PMA
30128-02	Fuel Quantity Processor - CMM	Boeing 737-700	CMM
30128-02	Fuel Quantity Processor - IPC	Boeing 737-700	CMM
30128-03	FUEL QTY PROCESSOR UNIT	BOEING 737-600/700/800 SERIES,	PMA
30128-50	Fuel Quantity Processor - CMM	Boeing 737-700 IGW	CMM
30128-50	Fuel Quantity Processor - IPC	Boeing 737-700 IGW	CMM
30128-51	IGW	BOEING 737-700 SERIES,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
30129-02	CONTROL UNIT FED EX 727	BOEING 727, 727C, 727-100, -100C, -200, -200F,	PMA
30135-0201	Proximity Sensor Electronics Unit	Douglas DC-9	CMM
30136-0102	WATER QUANTITY TRANSMITTER 767	BOEING 737-300, -600,	PMA
30136-0104	WATER QUANTITY TRANSMITTER 737-X	BOEING 737-600, -700,-800,	PMA
30136-0105	WATER QUANTITY TRANSMITTER 757	757-200,	PMA
30136-0106	TRANSMITTER ASSY POTABLE WATER	BOEING 737-600,700,800 SERIES,	PMA
30136-0107	WATER QUANTITY TRANSMITTER	BOEING 777-200 SERIES, -300 SERIES,	PMA
30136-0108	WATER QUANTITY TRANSMITTER	BOEING 777-200 SERIES, -300 SERIES,	PMA
30137-0101	WATER QUANTITY SELECTOR ASSY 757 W/KNOB	BOEING 757-200,	PMA
30137-0102	WATER QUANTITY SELECTOR ASSY 757 OPT	BOEING 757-200,	PMA
30142-0101	C-106	HUMS	TSO
30142-0102	HUMS MICRO PROCESSOR	EUROCOPTER FRANCE AS-350B1/B2,	PMA
30142-0103	HUMS MICRO PROCESSOR	EUROCOPTER FRANCE AS-355N,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
30144-01	P/W SIG.COND.	PW120A, 121, 123, 123B, 123C, 123D, 123E,	PMA
30144-03	P/W SIGN COND	PW120A, 121, 123, 123B, 123C, 123D, 123E,	PMA
30145-0101	Proximity Sensor Electronics Unit	Menasco DHC-8 Series	CMM
30145-0201	Proximity Sensor Electronics Unit	Menasco DHC-8 Series	CMM
30148-0000-0101	TRAY,EMI ASSY,MPU	AGUSTA A109K2, EUROCOPTER FRANCE AS-355N,	PMA
30148-0000-0102	MPU TRAY AY	EUROCOPTER FRANCE AS-350B1/B2,	PMA
30149-1301-01	MOUNTING PLATE	EUROCOPTER FRANCE AS-350B1/B2,	PMA
30151-01	HUMS DTU	EUROCOPTER FRANCE AS-350B1/B2,AS-355N,	PMA
30155-0102	BRACKET,HARD LANDING	EUROCOPTER FRANCE AS-350B1/B2,AS-355N,	PMA
30156-0102	BRACKET,COLLECTIV E SWITCH	EUROCOPTER FRANCE AS-350B1/B2; AS-355N,	PMA
30163-01	MD10 PROCESSOR	BOEING MD-10-10F,MD-10-30F,	PMA
30184-0102	Cargo Fire Flight Unit (CFFU)	Boeing 727 - America	CMM
30184-0103	Cargo Fire Flight Unit (CFFU)	McDonnell Douglas MD	CMM
30184-0104	Cargo Fire Flight Unit (CFFU)	Douglas DC-10	CMM
30184-0105	Cargo Fire Flight Unit (CFFU)	Boeing 727 - America	CMM
30184-0202	Cargo Fire Flight Unit (CFFU)	Boeing 727 - America	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
30184-0203	Cargo Fire Flight Unit (CFFU)	McDonnell Douglas MD	CMM
30184-0204	Cargo Fire Flight Unit (CFFU)	Douglas DC-10	CMM
30185-0102	Cargo Fire Maintenance Unit (CFMU)	Boeing 727 - America	CMM
30185-0105	Cargo Fire Maintenance Unit (CFMU)	Douglas DC-10	CMM
30185-0106	Cargo Fire Maintenance Unit (CFMU)	McDonnell Douglas MD	CMM
30185-0107	Cargo Fire Maintenance Unit (CFMU)	McDonnell Douglas MD	CMM
30185-0302	Cargo Fire Maintenance Unit (CFMU)	Boeing 727 - America	CMM
30185-0305	Cargo Fire Maintenance Unit (CFMU)	Douglas DC-10	CMM
30185-0306	Cargo Fire Maintenance Unit (CFMU)	McDonnell Douglas MD	CMM
30185-0307	Cargo Fire Maintenance Unit (CFMU)	McDonnell Douglas MD	CMM
30187-0102	HARD LANDING DETECTOR	EUROCOPTER FRANCE AS-350B1/B2, AS-355N,	PMA
30188-0101	Control Unit	Saab 2000 Ext Range	CMM
30189-0101	737 FUEL QUANTITY PROCESSOR UNIT	BOEING 737-700(IGW),	PMA
30189-0201	FUEL QUANTITY PROCESSOR UNIT	BOEING 737-700(IGW),	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
30189-0301	FUEL QUANTITY PROCESSOR UNIT	BOEING 737-800,	PMA
30191-0101	Signal Conditioning Unit	Saab 2000 Ext Range	CMM
30202-0103	GROUND STRAP	EUROCOPTER FRANCE AS-355N,	PMA
30211-0102	Transient Suppression Device (TSD)	737-300;737-400;737-	CMM
30233-0102	Isolated Fuel Quantity Transmitter (IFQT)	Boeing 747-100, -200	CMM
30244-0101	Isolated Fuel Quantity Transmitter (IFQT)	737-200;737-300;737-	CMM
30244-0201	Isolated Fuel Quantity Transmitter (IFQT)	737-200;737-300;737-	CMM
30251-0101	Isolated Fuel Quantity Transmitter (IFQT)	737-200;737-300;737-	CMM
3600211-01	CAL MODULE	BOEING 727-231,	PMA
380957-0103-1	Performance Management System - TWA	Boeing 727-200	CMM
381046-02147	Tank Unit	Convair 880	CMM
381056-01908	TANK UNIT	LOCKHEED 1329-23A, 23D, 23E,	PMA
381056-02143	Tank Unit	Convair 880	CMM
381056-02144	Tank Unit	Convair 880	CMM
381056-02145	Tank Unit	Convair 880	CMM
381056-02146	Tank Unit	Convair 880	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
381056-02148	Tank Unit	Convair 880	CMM
381056-02149	Tank Unit	Convair 880	CMM
381056-02150	Tank Unit	Convair 880	CMM
381056-02152	Tank Unit	Convair 880	CMM
381056-02207	Tank Unit	Convair 880	CMM
381056-02208	Tank Unit	Convair 880	CMM
381056-02236	Tank Unit	Convair 600	CMM
381056-02237	Tank Unit	Convair 880	CMM
381056-02238	Tank Unit	Convair 880	CMM
381056-02240	Tank Unit	Convair 880	CMM
381056-02241	Tank Unit	Convair 880	CMM
381056-02242	Tank Unit	Convair 880	CMM
381056-02243	Tank Unit	Convair 880	CMM
381056-02244	Tank Unit	Convair 880	CMM
381056-02245	Tank Unit	Convair 600	CMM
381056-02246	Tank Unit	Convair 600	CMM
381056-02265	Tank Unit	Convair 600	CMM
381056-02266	Tank Unit	Convair 600	CMM
381056-02277	Tank Unit	Convair 600	CMM
381056-02278	Tank Unit	Convair 880	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
381056-02279	Tank Unit	Convair 880	CMM
381056-02280	Tank Unit	Convair 880	CMM
381056-02281	Tank Unit	Convair 880	CMM
381056-02282	Tank Unit	Convair 880	CMM
381056-02283	Tank Unit	Convair 880	CMM
381056-02284	Tank Unit	Convair 880	CMM
381056-02286	Tank Unit	Convair 880	CMM
381056-02288	Tank Unit	Convair 880	CMM
381056-02289	Tank Unit	Convair 880	CMM
381056-02290	Tank Unit	Convair 880	CMM
381056-02291	Tank Unit	Convair 880	CMM
381056-02292	Tank Unit	Convair 880	CMM
381056-02293	Tank Unit	Convair 880	CMM
381056-02665	TANK UNIT	LOCKHEED 1329-23A, 23D, 23E,	PMA
381056-02758	Tank Unit	Convair 600	CMM
381056-02760	Tank Unit	Convair 600	CMM
381056-02905	TANK UNIT	LOCKHEED 1329-23A, 23D, 23E,	PMA
381056-02906	TANK UNIT AY LOCKHEED JETSTAR	LOCKHEED 1329-23A, 23D, 23E,	PMA
381056-02907	TANK UNIT AY	LOCKHEED 1329-23A, 23D, 23E,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
381057-06001	Fuel Quantity Transmitter	Bell 205	CMM
381057-06002	Fuel Quantity Transmitter	Bell 205	CMM
381057-06007	Fuel Quantity Transmitter	Bell 205A	CMM
381057-06008	Fuel Quantity Transmitter	Bell 205A	CMM
381057-06475	Fuel Quantity Transmitter	Bell 205	CMM
381057-06806	Fuel Quantity Transmitter	Bell 205	CMM
381057-06807	Fuel Quantity Transmitter	Bell 205	CMM
381058-06214	Fuel Quantity Transmitter	Bell 204	CMM
381058-08001	Fuel Quantity Transmitter	Bell 205	CMM
381058-08005	Fuel Quantity Transmitter	Bell 205	CMM
381058-08006	Fuel Quantity Transmitter	Bell 205A	CMM
381058-08007	Fuel Quantity Transmitter	UH1E	CMM
381058-08474	Fuel Quantity Transmitter	Bell 204	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
381063-01892	Liquid Quantity Transmitter	SE210	CMM
381063-01893	Liquid Quantity Transmitter	SE210	CMM
381063-01895	Liquid Quantity Transmitter	SE210	CMM
381063-01896	Liquid Quantity Transmitter	SE210	CMM
381063-03890	Liquid Quantity Transmitter	SE210	CMM
381063-03894	Liquid Quantity Transmitter	SE210	CMM
381063-05001	Liquid Quantity Transmitter	SE210	CMM
381063-05002	Liquid Quantity Transmitter	SE210	CMM
381063-05890	Liquid Quantity Transmitter	SE210	CMM
381063-05894	Liquid Quantity Transmitter	SE210	CMM
381064-01891	Liquid Quantity Transmitter	SE210	CMM
381064-01897	Liquid Quantity Transmitter	SE210	CMM
381064-05003	Liquid Quantity Transmitter	SE210	CMM
381075-07479	Tank Unit	Boeing/Vertol 107	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
381075-08478	Tank Unit	Boeing/Vertol 107	CMM
381093-02661	TANK UNIT AY	LOCKHEED 1329-23A, 23D, 23E,	PMA
381093-02909	TANK UNIT AY	LOCKHEED 1329-23A, 23D, 23E,	PMA
381094-07049	Tank Unit	H23D	CMM
381094-08050	Tank Unit	H23D	CMM
381096-17643	TANK UNIT ASY	LOCKHEED 1329-23A, 23D, 23E,	PMA
381096-17662	Tank Unit	LOCKHEED 1329-23A, 23D, 23E,	PMA
381096-18129	TANK UNIT ASY	LOCKHEED 1329-23A, 23D, 23E,	PMA
381096-18130	TANK UNIT ASY	LOCKHEED 1329-23A, 23D, 23E,	PMA
381096-18131	TANK UNIT ASY	LOCKHEED 1329-23A, 23D, 23E,	PMA
381096-18644	TANK UNIT ASY	LOCKHEED 1329-23A, 23D, 23E,	PMA
381096-18645	TANK UNIT ASY	LOCKHEED 1329-23A, 23D, 23E,	PMA
381096-18646	TANK UNIT ASY	LOCKHEED 1329-23A, 23D, 23E,	PMA
381096-18647	TANK UNIT ASY	LOCKHEED 1329-23A, 23D, 23E,	PMA
381096-18648	TANK UNIT ASY	LOCKHEED 1329-23A, 23D, 23E,	PMA
381096-18660	TANK UNIT ASY	LOCKHEED 1329-23A, 23D, 23E,	PMA
381096-18663	TANK UNIT ASY	LOCKHEED 1329-23A, 23D, 23E,	PMA
381096-18664	TANK UNIT ASY	LOCKHEED 1329-23A, 23D, 23E,	PMA
382041-001	Dual Amplifier-Bridge Assembly	Convair 880	CMM
382637-	Motor	Boeing 727/737	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
383018-25518	Combined Indicator- Amplifier-Bridge Assy	SE210	CMM
383018-25713	Combined Indicator- Amplifier-Bridge Assy	SE210	CMM
383018-25900	Combined Indicator- Amplifier-Bridge Assy	SE210	CMM
383018-26519	Combined Indicator- Amplifier-Bridge Assy	SE210	CMM
383018-26714	Combined Indicator- Amplifier-Bridge Assy	SE210	CMM
383018-26901	Combined Indicator- Amplifier-Bridge Assy	SE210	CMM
383053-10828	Indicator	HUS1	CMM
383053-10829	Indicator	Convair 600	CMM
383053-10830	Indicator	Convair 600	CMM
383053-12320	Indicator	Convair 600	CMM
383053-12886	Indicator	Convair 600	CMM
383053-12887	Indicator	Convair 600	CMM
383053-12919	Indicator	Convair 880	CMM
383053-12920	Indicator	Convair 880	CMM
383053-12962	Indicator	Convair 600	CMM
383053-12963	Indicator	Convair 600	CMM
383053-13321	Indicator	Convair 600	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
383053-13888	Indicator	Convair 600	CMM
383053-13930	Indicator	Convair 880	CMM
383053-13964	Indicator	Convair 600	CMM
383056-06835	Indicator	Convair 600	CMM
383093-***	Indicator	Convair 660/880	CMM
383093-019	REPEATER IND DEHAVILLAND DHC-7	DEHAVILLAND DHC-7,	PMA
384023-053	Transfer Switch Assembly	Convair 880	CMM
384023-054	Transfer Switch Assembly	Convair 600	CMM
384023-057	Transfer Switch Assembly	Convair 880	CMM
384023-065	Transfer Switch Assembly	Atlantic 1150	CMM
384059-03026	Substitute Capacitance Unit	P840	CMM
384124-020	Control Unit	Boeing/Vertol 107	CMM
384124-031	Control Unit	Atlantic 1150	CMM
384167-01901	Fuel Load Limit Control	SE210	CMM
384167-10224	Fuel Load Limit Control	Vickers Viscount 724	CMM
384167-10225	Fuel Load Limit Control	Vickers Viscount 724	CMM
384167-10519	Fuel Load Limit Control	SE210	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
384167-12597	Fuel Load Limit Control	Vanguard	CMM
384167-12598	Fuel Load Limit Control	Vanguard	CMM
384167-13245	Fuel Load Limit Control	Vanguard	CMM
384178-072	SELECTOR SWITCH FOKKER F-28	FOKKER F28,	PMA
384301-009	CONTROL UNIT FOKKER F-28	FOKKER F28,	PMA
384338-003	Thermistor Safety Device	SE210	CMM
384369-01360	Fuel Load Limit Control	Atlantic 1150	CMM
384369-01361	Fuel Load Limit Control	Atlantic 1150	CMM
384369-01362	Fuel Load Limit Control	Atlantic 1150	CMM
384369-01488	FUEL LOAD CONT FOKKER F-28	FOKKER F28,	PMA
384369-01825	FUEL LOAD CONT FOKKER F-28	FOKKER F28,	PMA
384369-020	FUEL LOAD LIMIT FOKKER F-28	FOKKER F28,	PMA
384369-023	FUEL LOAD LIMIT FOKKER F-28	FOKKER F28,	PMA
384369-05223	FUEL LOAD CONT	BAC 1-11, 203AE, 204AF, 212AR, 215AU,	PMA
384369-05495	CONT FUEL LOAD	BAC 1-11, 212AR,	PMA
384453-001	VOL FIL DEVICE BOEING 737-200	BOEING 727-100/737,	PMA
384463-001	CAPACITOR ASY	BOEING 727-200,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
384486-	N2 Tachometer Transmitter	Boeing 747 Classics,	CMM
391001-153	TANK	LOCKHEED L-1011,	PMA
391001-155	TANK	LOCKHEED L-1011,	PMA
391001-159	TANK	LOCKHEED L-1011,	PMA
391001-161	TANK-PROBE	LOCKHEED L-1011,	PMA
391001-163	TANK	LOCKHEED L-1011,	PMA
391001-167	TANK	LOCKHEED L-1011,	PMA
391001-169	TANK UNIT	LOCKHEED L-1011,	PMA
391001-171	TANK UNIT	LOCKHEED L-1011,	PMA
391001-173	TANK UNIT	LOCKHEED L-1011,	PMA
391001-177	TRANSMITTER	LOCKHEED L-1011,	PMA
391001-179	TANK UNIT	LOCKHEED L-1011,	PMA
391001-181	TANK UNIT	LOCKHEED L-1011,	PMA
391001-183	TANK UNIT	LOCKHEED L-1011,	PMA
391001-185	TANK UNIT	LOCKHEED L-1011,	PMA
391001-187	TANK UNIT	LOCKHEED L-1011,	PMA
391001-189	TANK	LOCKHEED L-1011,	PMA
391001-191	TANK	LOCKHEED L-1011,	PMA
391001-193	TANK	LOCKHEED L-1011,	PMA
391001-343	TANK UNITS	LOCKHEED L-1011,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
391001-344	TANK UNITS	LOCKHEED L-1011,	PMA
391001-345	TANK UNITS	LOCKHEED L-1011,	PMA
391001-346	TANK UNITS	LOCKHEED L-1011,	PMA
391001-347	TANK UNITS	LOCKHEED L-1011,	PMA
391001-348	TANK UNITS	LOCKHEED L-1011,	PMA
391001-349	TANK UNITS	LOCKHEED L-1011,	PMA
391001-350	TANK UNITS	LOCKHEED L-1011,	PMA
391001-351	TANK UNITS	LOCKHEED L-1011,	PMA
391001-352	TANK UNITS	LOCKHEED L-1011,	PMA
391001-353	TANK UNITS	LOCKHEED L-1011,	PMA
391001-354	TANK UNITS	LOCKHEED L-1011,	PMA
391001-355	TANK UNITS	LOCKHEED L-1011,	PMA
391001-356	TANK UNITS	LOCKHEED L-1011,	PMA
391001-357	TANK UNITS	LOCKHEED L-1011,	PMA
391001-358	TANK UNITS	LOCKHEED L-1011,	PMA
391001-359	TANK UNITS	LOCKHEED L-1011,	PMA
391001-360	TANK UNITS	LOCKHEED L-1011,	PMA
391001-398	Fuel Quantity Transmitter	Boeing/Vertol 234LR	CMM
391001-399	Fuel Quantity Transmitter	Boeing/Vertol 234LR	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
391001-501	Liquid Quantity Transmitter	Lockheed L-1011	CMM
391001-503	Liquid Quantity Transmitter	Lockheed L-1011	CMM
391001-643	TANK UNIT	LOCKHEED L1011-385-1,-1-14,-1-15,-385-3,	PMA
391001-644	TANK UNIT	LOCKHEED L1011-385-1,-1-14,-1-15,-385-3,	PMA
391001-645	TANK UNIT	LOCKHEED L1011-385-1,-1-14,-1-15,-385-3,	PMA
391001-646	TANK UNIT	LOCKHEED L1011-385-1,-1-14,-1-15,-385-3,	PMA
391001-647	TANK UNIT	LOCKHEED L1011-385-1,-1-14,-1-15,-385-3,	PMA
391001-648	TANK UNIT	LOCKHEED L1011-385-1,-1-14,-1-15,-385-3,	PMA
391001-649	TANK UNIT	LOCKHEED L1011-385-1,-1-14,-1-15,-385-3,	PMA
391001-650	L1011 PROBE	LOCKHEED L1011-385-1,-1-14,-1-15,-385-3,	PMA
391001-651	TANK UNIT	LOCKHEED L1011-385-1,-1-14,-1-15,-385-3,	PMA
391001-652	TANK UNIT	LOCKHEED L1011-385-1,-1-14,-1-15,-385-3,	PMA
391001-653	TANK UNIT	LOCKHEED L1011-385-1,-1-14,-1-15,-385-3,	PMA
391001-654	TANK UNIT	LOCKHEED L1011-385-1,-1-14,-1-15,-385-3,	PMA
391001-655	TANK UNIT	LOCKHEED L1011-385-1,-1-14,-1-15,-385-3,	PMA
391001-656	TANK UNIT	LOCKHEED L1011-385-1,-1-14,-1-15,-385-3,	PMA
391001-657	TANK UNIT	LOCKHEED L1011-385-1,-1-14,-1-15,-385-3,	PMA
391002-033	TANK UNIT DEHAVILLAND DHC-7	DEHAVILLAND DHC-7-100,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
391002-034	TANK UNIT DEHAVILLAND DHC-7	DEHAVILLAND DHC-7-100, DEHAVILLAND DHC-7	PMA
391002-035	TANK UNIT DEHAVILLAND DHC-7	DEHAVILLAND DHC-7-100, DEHAVILLAND DHC-7	PMA
391002-036	Fuel Quantity Transmitter	DHC7	CMM
391002-037	TANK UNIT DEHAVILLAND DHC-7	DEHAVILLAND DHC-7-100, DEHAVILLAND DHC-7	PMA
391002-038	TANK UNIT DEHAVILLAND DHC-7	DEHAVILLAND DHC-7-100, DEHAVILLAND DHC-7	PMA
391002-039	TANK UNIT DEHAVILLAND DHC-7	DEHAVILLAND DHC-7-100, DEHAVILLAND DHC-7	PMA
391002-040	TANK UNIT DEHAVILLAND DHC-7	DEHAVILLAND DHC-7-100, DEHAVILLAND DHC-7	PMA
391002-041	TANK UNIT DEHAVILLAND DHC-7	DEHAVILLAND DHC-7-100, DEHAVILLAND DHC-7	PMA
391002-042	TANK UNIT DEHAVILAND DHC-7	DEHAVILLAND DHC-7-100, DEHAVILAND DHC-7	PMA
391002-332	C55 - FUEL AND OIL QUANTITY INSTRUMENT	CANADAIR CL-600	TSO

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
391002-333	C55 - FUEL AND OIL QUANTITY INSTRUMENT	CANADAIR CL-600	TSO
391002-334	C55 - FUEL AND OIL QUANTITY INSTRUMENT	CANADAIR CL-600	TSO
391002-417	C55 - FUEL AND OIL QUANTITY INSTRUMENT	CANADAIR CL-600	TSO
391002-418	C55 - FUEL AND OIL QUANTITY INSTRUMENT	CANADAIR CL-600	TSO
391002-419	C55 - FUEL AND OIL QUANTITY INSTRUMENT	CANADAIR CL-600	TSO
391002-420	C55 - FUEL AND OIL QUANTITY INSTRUMENT	CANADAIR CL-600	TSO
391002-421	C55 - FUEL AND OIL QUANTITY INSTRUMENT	CANADAIR CL-600	TSO
391002-422	C55 - FUEL AND OIL QUANTITY INSTRUMENT	CANADAIR CL-600	TSO
391002-424	Fuel Quantity Transmitter	DHC7	CMM
391002-438	C55 - FUEL AND OIL QUANTITY INSTRUMENT	CANADAIR CL-600	TSO

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
391002-439	T/U AUX FWD DHC7- LR	DEHAVILLAND DHC-7LR-100,	PMA
391002-440	T/U AUX AFT DHC- 7LR	DEHAVILLAND DHC-7LR-100,	PMA
391002-446	XMTR FUEL QTY	CANADAIR CL600-1A11, 2A12, 2B16,	PMA
391004-002	TANK UNIT	LOCKHEED 1329-23A, 23D, 23E, 25,	PMA
391012-01001	TANK UNIT BOEING 727/737	BOEING 737/727-100,	PMA
391012-0101	Liquid Quantity Transmitter	BOEING 737/727-100,	PMA
391013-101	Fuel Quantity Transmitter	Lockheed L-1011	CMM
391013-103	Fuel Quantity Transmitter	Lockheed L-1011	CMM
391013-105	TANK UNIT	LOCKHEED L-1011,	PMA
391013-107	TANK UNIT	LOCKHEED L-1011,	PMA
391013-109	TANK UNIT	LOCKHEED L-1011,	PMA
391013-111	TANK UNIT	LOCKHEED L-1011,	PMA
391013-113	TANK UNITS	LOCKHEED L-1011,	PMA
391013-115	TANK UNITS	LOCKHEED L-1011,	PMA
391013-205	TRANSMITTER, LIQUID QUANTITY	LOCKHEED L1011-385-1-15,-385-3,	PMA
391013-207	391013-207	LOCKHEED L1011-385-1-15,-385-3,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
391013-209	TRANSMITTER,LIQUI D QTY	LOCKHEED L1011-385-1-15,-385-3,	PMA
391013-211	TRANSMITTER, LIQUID QUANTITY	LOCKHEED L1011-385-1-15,-385-3,	PMA
391013-213	TRANSMITTER LIQUID QUANTITY	LOCKHEED L1011-385-1-15,	PMA
391013-215	TRANSMITTER LIQID QTY	LOCKHEED L1011-385-1-15,	PMA
391035-01406	Tank Unit	Convair 880	CMM
391035-02580	Tank Unit	Convair 880	CMM
391037-02090	TANK UNIT SIKORSKY S-61	SIKORSKY S61,	PMA
391037-03201	TANK UNIT SIKORSKY S-61	SIKORSKY S61,	PMA
391041-009	COMPENSATOR LIQ BOEING 727	BOEING 727-100,	PMA
391041-020	COMPENSATOR ASY	BOEING 737,	PMA
391041-021	COMPENSATOR ASY	BOEING 727,	PMA
391041-022	COMPENSATOR ASY	BOEING 737,	PMA
391041-023	COMPENSTOR, WIDE GAP	BOEING 737-300, -400,	PMA
391041-024	COMPENSATOR	BOEING 737-100, -200, -300, -400,	PMA
391041-025	COMPENSATOR	BOEING 737-300, -400, -500,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
391041-026	WIDE GAP COMPENSATOR BOEING 737	BOEING 737-300, -400, -500,	PMA
391041-027	COMPENSATOR WIDE GAP BOEING 737	-200 SERIES, -200C SERIES, BOEING 737-300, -400, -500, -100 SERIES,,	PMA
391041-05007	TANK UNIT BOEING 737	BOEING 737,	PMA
391041-06008	TANK UNIT BOEING 727	BOEING 727-100,	PMA
391046-04128	TANK UNIT BOEING 737	BOEING 737,	PMA
391046-04129	TANK UNIT BOEING 737	BOEING 737,	PMA
391046-04130	TANK UNIT BOEING 737	BOEING 737,	PMA
391046-04131	TANK UNIT BOEING 737	BOEING 737,	PMA
391046-04132	TANK UNIT BOEING 737	BOEING 737,	PMA
391046-04133	TANK UNIT BOEING 737	BOEING 737,	PMA
391046-04134	TANK UNIT BOEING 737	BOEING 737,	PMA
391046-04135	TANK UNIT BOEING 737	BOEING 737,	PMA

PARTNO	DESCRIPTION	AIRCRAFT	Source
391046-04136	TANK UNIT BOEING	BOEING 737, 737	PMA
391046-04137	TANK UNIT BOEING	BOEING 737, 737	PMA
391046-04138	TANK UNIT BOEING	BOEING 737, 737	PMA
391046-04159	TRANSMITTER,LIQUI D QUANTITY/TANKUNIT	BOEING 737,	PMA
391046-04160	TANK UNIT	BOEING 737,	PMA
391046-04161	TANK UNIT	BOEING 737,	PMA
391046-04162	TANK UNIT	BOEING 737,	PMA
391046-04165	TANK UNIT	BOEING 737,	PMA
391046-05128	TANK UNIT	BOEING 737-100, -200, -300, -400, -500,	PMA
391046-05129	TANK UNIT	BOEING 737-100, -200, -300, -400, -500,	PMA
391046-05130	TANK UNIT	BOEING 737-100, -200, -300, -400, -500,	PMA
391046-05131	TANK UNIT	BOEING 737-100, -200, -300, -400, -500,	PMA
391046-05132	TANK UNIT	BOEING 737-100, -200, -300, -400,	PMA
391046-05133	TANK UNIT	BOEING 737-100, -200, -300, -400, -500,	PMA
391046-05134	TANK UNIT	BOEING 737-100, -200, -300, -400, -500,	PMA
391046-05135	TANK UNIT	BOEING 737-100, -200, -300, -400,	PMA
391046-05136	TANK UNIT	BOEING 737-100, -200, -300, -400, -500,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
391046-05137	TANK UNIT	BOEING 737-100, -200, -300, -400, -500,	PMA
391046-05138	TANK UNIT	BOEING 737-100, -200, -300, -400, -500,	PMA
391046-085	TRANS LIQ QTY	BOEING 737,	PMA
391046-166	TANK UNIT	BOEING 727,	PMA
391046-167	TANK UNIT	BOEING 727,	PMA
391046-168	TANK UNIT	BOEING 727,	PMA
391046-169	TANK UNIT BOEING	BOEING 727, 727	PMA
391046-170	TANK UNIT	BOEING 727,	PMA
391046-171	TANK UNIT BOEING	BOEING 727, 727	PMA
391046-172	TANK UNIT	BOEING 727,	PMA
391046-173	TANK UNIT	BOEING 727,	PMA
391046-174	TANK UNIT	BOEING 727,	PMA
391046-175	TANK UNIT	BOEING 727,	PMA
391046-176	TANK UNIT	BOEING 727,	PMA
391046-177	TANK UNIT	BOEING 727,	PMA
391046-178	TANK UNIT	BOEING 727,	PMA
391046-179	TANK UNIT	BOEING 727,	PMA
391046-180	TANK UNIT BOEING	BOEING 727, 727	PMA
391046-181	TANK UNIT	BOEING 727,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
391046-182	TANK UNIT	BOEING 727,	PMA
391046-183	TRANS LIQ QTY	BOEING 737,	PMA
391046-184	TRANS LIQ QTY	BOEING 737,	PMA
391046-250	TANK UNIT	BOEING B727,	PMA
391046-251	TANK UNIT	BOEING B727,	PMA
391046-252	TANK UNIT AY	BOEING B727,	PMA
391046-253	TANK UNIT AY	BOEING B727,	PMA
391046-254	TANK UNIT AY	BOEING B727,	PMA
391046-282	TANK UNIT	BOEING 727,	PMA
391046-283	TANK UNIT	BOEING 727,	PMA
391046-284	TANK UNIT	BOEING 727,	PMA
391046-285	TANK UNIT	BOEING 727,	PMA
391046-286	TANK UNIT	BOEING 727,	PMA
391046-287	TANK UNIT	BOEING 727,	PMA
391046-299	TANK UNIT BOEING	BOEING 737, 737	PMA
391046-300	TANK UNIT BOEING	BOEING 737, 737	PMA
391046-331	TANK UNIT	LOCKHEED 1329-23A, 23D, 23E, 25,	PMA
391046-332	TANK UNIT	LOCKHEED 1329-23A, 23D, 23E, 25,	PMA
391046-382	TANK UNIT	LOCKHEED 1329-23A, 23D, 23E,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
391046-383	TANK UNIT	LOCKHEED 1329-23A, 23D, 23E,	PMA
391046-384	TANK UNIT	LOCKHEED 1329-23A, 23D, 23E,	PMA
391046-459	TANK UNIT	CESSNA 500,	PMA
391046-460	TANK UNIT	CESSNA 500,	PMA
391046-461	TANK UNIT	CESSNA 500,	PMA
391046-462	TANK UNIT	CESSNA 500,	PMA
391046-477	TANK UNIT	BOEING 737,	PMA
391046-478	TANKUNIT(TK1&2) BOEING 737-300	BOEING 737,	PMA
391046-479	TANK UNIT BOEING 737	BOEING 737,	PMA
391046-480	TANK UNITS BOEING 737	BOEING 737,	PMA
391046-481	TANK UNIT	BOEING 737-100, -200, -300, -400, -500,	PMA
391046-482	TANK UNIT	BOEING 737-100, -200, -300, -400, -500,	PMA
391046-483	TANK UNIT	BOEING 737-100, -200, -300, -400, -500,	PMA
391046-484	TANK UNIT	BOEING 737-100, -200, -300, -400, -500,	PMA
391046-485	TRANS LIQUID	BOEING 737-100, -200, -300, -400,	PMA
391046-486	TANK UNIT	BOEING 737-100, -200, -300, -400, -500,	PMA
391048-***	Uncompensated Tank Unit	Vanguard	CMM
391049-***	Compensated Tank Unit	Vanguard	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
391057-036	TRANS LIQ QTY	BEEHCRAFT 99, 99A, A99A, B99,	PMA
391057-037	TRANS LIQ QTY	BEEHCRAFT 99, 99A, A99A, B99,	PMA
391057-038	TRANS LIQ QTY	BEEHCRAFT 99, 99A, A99A, B99,	PMA
391057-040	TRANS LIQ QTY	BEEHCRAFT 99, 99A, A99A, B99,	PMA
391057-06092	TANK UNIT FOKKER F-28	FOKKER F28,	PMA
391057-06093	TANK UNIT FOKKER F-28	FOKKER F28,	PMA
391057-06094	TANK UNIT FOKKER F-28	FOKKER F28,	PMA
391057-06095	TANK UNIT FOKKER F-28	FOKKER F28,	PMA
391057-06096	TANK UNIT FOKKER F-28	FOKKER F28,	PMA
391057-06097	TANK UNIT FOKKER F-28	FOKKER F28,	PMA
391057-06098	TANK UNIT FOKKER F-28	FOKKER F28,	PMA
391057-06245	TANK UNIT FOKKER F-28	FOKKER F28,	PMA
391057-06246	TANK UNIT FOKKER F-28	FOKKER F28,	PMA
391057-192	TANK UNIT	LOCKHEED 1329-23A, 23D, 23E,	PMA
391057-193	TANK UNIT	LOCKHEED 1329-23A, 23D, 23E,	PMA
391057-194	TANK UNIT	LOCKHEED 1329-23A, 23D, 23E,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
391057-195	TANK UNIT	LOCKHEED 1329-23A, 23D, 23E,	PMA
391057-196	TANK UNIT	LOCKHEED 1329-23A, 23D, 23E,	PMA
391057-197	TANK UNIT	LOCKHEED 1329-23A, 23D, 23E,	PMA
391057-198	TANK UNIT	LOCKHEED 1329-23A, 23D, 23E,	PMA
391057-199	TANK UNIT LOCKHEED JET STAR II	LOCKHEED 1329-23A, 23D, 23E,	PMA
391057-200	TANK UNIT	LOCKHEED 1329-23A, 23D, 23E,	PMA
391057-201	TANK UNIT	LOCKHEED 1329-23A, 23D, 23E,	PMA
391057-202	TANK UNIT LOCKHEED JET STAR II	LOCKHEED 1329-23A, 23D, 23E,	PMA
391057-203	TANK UNIT LOCKHEED JET STAR II	LOCKHEED 1329-23A, 23D, 23E,	PMA
391057-204	TANK UNIT LOCKHEED JET STAR II	LOCKHEED 1329-23A, 23D, 23E,	PMA
391057-297	C55 - FUEL AND OIL QUANTITY INSTRUMENT	CANADAIR CL-600	TSO
391061-01203	Liquid Quantity Transmitter		CMM
391061-03232	Tank Unit	H23D	CMM
391061-03233	Tank Unit	H23D	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
391063-002	TRANS LIQ QTY	BEEHCRAFT 99, 99A, A99A, B99,	PMA
391063-04003	TANK UNIT	FOKKER F28,	PMA
391063-04003M	TANK UNIT FOKKER F-28	FOKKER F28,	PMA
391067-04679	Tank Unit	LOCKHEED 1329-23A, 23D, 23E,	PMA
391080-01059	Tank Unit	Convair 880	CMM
391080-02550	Tank Unit	Convair 600	CMM
391080-02919	Tank Unit	Convair 880	CMM
391080-08096	REPAIRS	BOEING 727-100,	PMA
391086-01004	TRANSMITTER	BAC-1-11 203AE, 204AF, 212AR, 215AU,	PMA
391086-01005	TRANSMITTER	BAC-1-11 203AE, 204AF, 212AR, 215AU,	PMA
391086-01006	TRANSMITTER	BAC-1-11 203AE, 204AF, 212AR, 215AU,	PMA
391086-01007	TRANSMITTER	BAC-1-11 203AE, 204AF, 212AR, 215AU,	PMA
391086-01008	TRANSMITTER	BAC-1-11 203AE, 204AF, 212AR, 215AU,	PMA
391086-01009	TRANSMITTER	BAC-1-11 203AE, 204AF, 212AR, 215AU,	PMA
391086-01010	Liquid Quantity Transmitter	P840	CMM
391086-01045	Liquid Quantity Transmitter	P840	CMM
391086-01046	Liquid Quantity Transmitter	P840	CMM
391086-01047	Liquid Quantity Transmitter	P840	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
391086-01048	Liquid Quantity Transmitter	P840	CMM
391086-01049	Liquid Quantity Transmitter	P840	CMM
391086-01050	Liquid Quantity Transmitter	P840	CMM
391086-01051	Liquid Quantity Transmitter	P840	CMM
391086-01052	Liquid Quantity Transmitter	P840	CMM
391086-01053	Liquid Quantity Transmitter	P840	CMM
391086-01054	Liquid Quantity Transmitter	P840	CMM
391086-01058	Liquid Quantity Transmitter	P840	CMM
391086-01059	Liquid Quantity Transmitter	P840	CMM
391086-01072	Liquid Quantity Transmitter	P840	CMM
391086-01898	Liquid Quantity Transmitter	P840	CMM
391086-01899	Liquid Quantity Transmitter	P840	CMM
391086-01900	Liquid Quantity Transmitter	P840	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
391086-01902	Liquid Quantity Transmitter	P840	CMM
391086-01903	Liquid Quantity Transmitter	P840	CMM
391086-01904	Liquid Quantity Transmitter	P840	CMM
391086-31072	LQ Transmitter	BAC-1-11 212AR,	PMA
391087-03081	Liquid Quantity Transmitter	Dehavilland DHC6	CMM
391087-03082	Liquid Quantity Transmitter	Dehavilland DHC6	CMM
391087-03083	Liquid Quantity Transmitter	Dehavilland DHC6	CMM
391087-03084	Liquid Quantity Transmitter	Dehavilland DHC6	CMM
391087-03085	Liquid Quantity Transmitter	Dehavilland DHC6	CMM
391087-15016	Liquid Quantity Transmitter	Atlantic 1150	CMM
391087-15017	Liquid Quantity Transmitter	Atlantic 1150	CMM
391087-15018	Liquid Quantity Transmitter	Atlantic 1150	CMM
391087-15019	Liquid Quantity Transmitter	Atlantic 1150	CMM
391087-15021	Liquid Quantity Transmitter	Atlantic 1150	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
391087-15022	Liquid Quantity Transmitter	Atlantic 1150	CMM
391087-15097	Liquid Quantity Transmitter	Atlantic 1150	CMM
391087-17016	Liquid Quantity Transmitter	Atlantic 1150	CMM
391087-17018	Liquid Quantity Transmitter	Atlantic 1150	CMM
391087-31072	Liquid Quantity Transmitter	BAC111	CMM
391088-001	TANK UNIT FOKKER F-28	FOKKER F28,	PMA
391088-002	TANK UNIT	DHC-6-100, 110, 210, 300, 310, 320,	PMA
391088-003	TANK UNIT	DHC-6-100, 110, 210, 300, 310, 320,	PMA
391088-004	TANK UNIT	DHC-6-100, 110, 210, 300, 310, 320,	PMA
391088-005	TANK UNIT	DHC-6-100, 110, 210, 300, 310, 320,	PMA
391088-006	TANK UNIT	DHC-6-100, 110, 210, 300, 310, 320,	PMA
391088-007	Transmitter	FOKKER F28,	PMA
391095-03002	Liquid Quantity Transmitter	Atlantic 1150	CMM
391095-03004	Liquid Quantity Transmitter	Atlantic 1150	CMM
391095-03018	Liquid Quantity Transmitter	Atlantic 1150	CMM
391095-09012	Tank Unit	BAC-1-11 212AR,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
391096-01003	TRANSMITTER	BAC-1-11 203AE, 204AF, 212AR, 215AU,	PMA
391097-16001	Transmitter, Liquid Quantity	BOEING 727-100,	PMA
391097-16002	Transmitter, Liquid Quantity	BOEING 727-100,	PMA
391097-16003	Transmitter, Liquid Quantity	BOEING 727-100,	PMA
391097-16004	Transmitter, Liquid Quantity	BOEING 727-100,	PMA
391097-16005	TANK UNIT	BOEING 727-100,	PMA
391097-16006	Transmitter, Liquid Quantity	BOEING 727-100,	PMA
391097-16007	TANK UNIT	BOEING 727-100,	PMA
391097-16008	Transmitter, Liquid Quantity	BOEING 727-100,	PMA
391097-16009	Transmitter, Liquid Quantity	BOEING 727-100,	PMA
391097-16010	Transmitter, Liquid Quantity	BOEING 727-100,	PMA
391097-16011	TANK UNIT	BOEING 727-100,	PMA
391097-16012	TANK UNIT	BOEING 727-100,	PMA
391097-16013	FUEL PROBE	BOEING 727-100,	PMA
391097-16014	FUEL PROBE	BOEING 727-100,	PMA
391097-16015	TANK UNIT	BOEING 727-100,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
391097-16016	Transmitter, Liquid Quantity	BOEING 727-100,	PMA
391097-16017	Transmitter, Liquid Quantity	BOEING 727-100,	PMA
393000-01412	Indicator	H23D	CMM
393000-01961	Indicator	H23D	CMM
393000-03113	Indicator	Convair 240	CMM
393000-03203	Indicator	P840	CMM
393000-03204	Indicator	P840	CMM
393000-03316	Indicator	P840	CMM
393000-03317	Indicator	P840	CMM
393000-03417	Indicator	P840	CMM
393000-03418	Indicator	P840	CMM
393000-03961	Indicator	H23D	CMM
393000-12365	Indicator	F115	CMM
393000-12366	Indicator	P840-03	CMM
393000-12367	Indicator	P840-03	CMM
393000-12368	Indicator	P840-03	CMM
393000-22412	Indicator	H23D	CMM
393002-007	C55 - FUEL AND OIL QUANTITY INSTRUMENT	CESSNA 500	TSO

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
393002-009	C44A - FUEL FLOWMETERS	CESSNA 500	TSO
393003-05217	Indicator	Boeing/Vertol 107	CMM
393003-07206	INDICATOR FUEL QTY CESSNA A37	LOCKHEED 1329-23A, 23D, 23E,	PMA
393004-01794	INDICATOR FQ SIKORSKY SH-3D	SIKORSKY S61,	PMA
393004-050	INDICATOR LIQ	BEECHCRAFT 99, 99A, A99A, B99,	PMA
393004-060	INDIC FUEL QTY	DHC-6-100, 110, 210, 300, 310,	PMA
393004-061	INDIC FUEL QTY	DHC-6-100, 110, 210, 300, 310, 320,	PMA
393004-06239	INDICATOR	LOCKHEED 1329-23A, 23D, 23E,	PMA
393004-06240	INDICATOR	LOCKHEED 1329-23A, 23D, 23E,	PMA
393004-63405	Indicator	SUD10B	CMM
393004-63406	Indicator	SUD10B	CMM
393004-63421	Indicator	SUD10B	CMM
393004-63950	Indicator	SE210	CMM
393004-63951	Indicator	SE210	CMM
393004-99360	Indicator	Atlantic 1150	CMM
393004-99361	Indicator	Atlantic 1150	CMM
393004-99362	Indicator	Atlantic 1150	CMM
393007-04831	Indicator	Convair 990	CMM
393007-09669	Indicator	Convair 880	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
393007-09670	Indicator	Convair 880	CMM
393008-036	Fuel Quantity Indicator	Bell 212	CMM
393008-037	Fuel Quantity Indicator	Bell 212	CMM
393008-038	Totalizer Indicator	S65	CMM
393008-040	Fuel Quantity Indicator	Bell 212	CMM
393008-042	Fuel Quantity Indicator	Bell 212	CMM
393008-046	Fuel Quantity Indicator	Bell 212	CMM
393008-047	Fuel Quantity Indicator	Bell 212	CMM
393008-053	IND FUEL QTY DEHAVILLAND DHC-7	DEHAVILLAND DHC-7-101, 102, 103, DEHAVILAND DHC-7	PMA
393008-056	Fuel Quantity Indicator	Bell 212	CMM
393008-064	Fuel Quantity Indicator	Bell 212	CMM
393008-074	Fuel Quantity Indicator	Bell 212	CMM
393008-077	Fuel Quantity Indicator	Bell 212	CMM
393008-078	Fuel Quantity Indicator	Bell 212	CMM
393008-082	Fuel Quantity Indicator	Bell 212	CMM
393008-090	IND PRIMARY DHC- 7LR	DEHAVILLAND DHC-7LR-100, 7LR	PMA
393008-35405	Indicator	SUD10	CMM
393008-35950	Indicator	SE210	CMM
393008-36406	Indicator	SUD10B	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
393008-36421	Indicator	SUD12B	CMM
393008-36951	Indicator	SE210	CMM
393008-56405	Indicator	SUD10B	CMM
393008-56406	Indicator	SUD10B	CMM
393008-56421	Indicator	SUD10B	CMM
393012-01642	Indicator	Convair 880	CMM
393012-08642	Indicator	Convair 880	CMM
393013-01643	Indicator	Convair 880	CMM
393013-08643	Indicator	Convair 880	CMM
393015-01597	Indicator	Vanguard	CMM
393015-01598	Indicator	Vanguard	CMM
393020-003	IND OIL QTY GAL BOEING 737	BOEING 737,	PMA
393020-004	IND OIL QTY GAL BOEING 737/200	BOEING 737,	PMA
393020-012	IND OIL QTY BOEING 737	BOEING 737,	PMA
393020-01789	INDICATOR BOEING 727/737	BOEING 727,	PMA
393022-01581	Indicator	Convair 880	CMM
393022-01582	Indicator	Convair 880	CMM
393024-03842	Indicator	Convair 880	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
393026-001	INDICATOR LIQ Q	BOEING 737,	PMA
393026-002	INDICATOR	BOEING 737,	PMA
393026-003	INDICATOR LIQ	BOEING 737,	PMA
393026-006	INDICATOR	BOEING 737,	PMA
393026-01789	Indicator, Liquid Quantity	BOEING 737,	PMA
393026-01837	INDICATOR BOEING	BOEING 737, 737	PMA
393026-01838	INDICATOR	BOEING 737,	PMA
393026-01840	INDICATOR BOEING	BOEING 737, 737	PMA
393026-01841	Indicator, Liquid Quantity	BOEING 737,	PMA
393026-01880	INDICATOR	BOEING 737,	PMA
393026-02839	IND LIQ QTY	BOEING 737,	PMA
393026-02859	IND LIQ QTY	BOEING 737,	PMA
393026-02860	INDICA LIQ QTY	BOEING 737,	PMA
393026-02861	INDIC LIQ QTY	BOEING 737,	PMA
393026-03235	INDICATOR	BOEING 737-100,	PMA
393026-03236	INDICATOR	BOEING 727-100,	PMA
393026-03334	Indicator, Liquid Quantity	BOEING 727-100,	PMA
393026-03335	INDICATOR	BOEING 727-100,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
393026-03508	INDICATOR	BOEING 727-100,	PMA
393026-03569	INDICATOR	BOEING 727-100,	PMA
393026-036	INDICATOR	BOEING 727,	PMA
393026-037	INDICATOR	BOEING 727,	PMA
393026-038	Fuel Quantity Indicator	Boeing 727	CMM
393026-039	INDICATOR	BOEING 727,	PMA
393026-040	IND LIQ QTY	BOEING 727,	PMA
393026-042	IND LIQ QTY	BOEING 727,	PMA
393026-04237	INDICATOR	BOEING 727-100,	PMA
393026-043	INDICATOR, LIQUID QUANTITY	BOEING 727,	PMA
393026-04337	Indicator, Liquid Quantity	BOEING 727-100,	PMA
393026-044	INDICATOR LIQ	BOEING 727,	PMA
393026-04510	INDIC LIQ QTY	BOEING 727-100,	PMA
393026-04568	Indicator, Liquid Quantity	BOEING 727-100,	PMA
393026-047	INDICATOR BOEING 737	BOEING 737,	PMA
393026-048	IND	BOEING 737,	PMA
393026-049	Indicator, Liquid Quantity	BOEING 727,	PMA
393026-050	IND	BOEING 727,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
393026-051	Indicator, Liquid Quantity	BOEING 727,	PMA
393026-052	INDICATOR BOEING	BOEING 737, 737	PMA
393026-053	INDICATOR	BOEING 727,	PMA
393026-054	INDICATOR	BOEING 727,	PMA
393026-063	IND MODEL J	BOEING 727,	PMA
393026-064	INDICATOR	BOEING 727,	PMA
393026-065	INDICATOR	BOEING 737,	PMA
393026-071	IND TOL	BOEING B727,	PMA
393026-072	INDICATOR	BOEING 727,	PMA
393026-073	INDICATOR	BOEING 737,	PMA
393026-074	INDICATOR	BOEING 737,	PMA
393026-075	INDICATOR	BOEING 727,	PMA
393026-076	IND PRE CAL	BOEING BOEING 737, 737	PMA
393026-077	IND PRE CAL	BOEING BOEING 737, 737	PMA
393026-079	IND PRE CAL	BOEING BOEING 727, 727	PMA
393026-080	IND PRE CAL	BOEING BOEING 727, 727	PMA
393026-081	IND 727/200PKG	BOEING 727,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
393026-082	IND 727/200PCKG	BOEING 727,	PMA
393026-083	IND 727/200PCLB	BOEING 727,	PMA
393026-084	IND 727/200PCKG	BOEING 727,	PMA
393026-085	IND 727/200PCLB	BOEING 727,	PMA
393026-086	IND 727/200PCKG	BOEING 727,	PMA
393026-087	IND 727/200PCLB	BOEING 727,	PMA
393026-088	IND 727/200PCKG	BOEING 727,	PMA
393026-089	737 PRE CAL	BOEING 737,	PMA
393026-090	737 PRE CAL	BOEING 737,	PMA
393026-091	737 PRECAL KILO	BOEING 737,	PMA
393026-092	737 PRECAL KILO	BOEING 737,	PMA
393026-093	737 PRE CAL	BOEING 737,	PMA
393026-094	737 PRE CAL	BOEING 737,	PMA
393026-095	IND 737/300 KG	BOEING 737,	PMA
393026-096	IND LB PRE CAL	BOEING 737,	PMA
393027-002	INDICATOR, LIQUID QTY	BOEING 727,	PMA
393027-003	Indicator, Liquid Quantity	BOEING 737,	PMA
393027-007	INDICATOR LIQ	BOEING 727,	PMA
393027-009	IND	BOEING 727,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
393027-010	INDICATOR	BOEING 727,	PMA
393027-012	INDICATOR	BOEING 727,	PMA
393027-04378	INDIC LIQ QTY	BOEING 727-100,	PMA
393028-10645	Hydraulic Oil Quantity Indicator	Convair 880	CMM
393029-010	IND FUEL QTY	DHC-6-100, 110, 210, 300, 310, 320,	PMA
393029-011	IND FUEL QTY	DHC-6-100, 110, 210, 300, 310, 320,	PMA
393032-02892	Indicator	Convair 600	CMM
393032-02902	Indicator	Convair 880	CMM
393032-02929	Indicator	Convair 880	CMM
393072-01146	Indicator	SE210	CMM
393074-01133	Indicator	Convair 880	CMM
393074-01966	Indicator	Convair 880	CMM
393080-051	Dual Total Fuel & V-Reference Indicator	Boeing 737	CMM
393080-103	DUEL TOT FUEL	BOEING 737,	PMA
393080-104	INDICATOR, DUAL TOTAL FUEL & V-REFERENCE	BOEING 737,	PMA
393080-105	IND DUAL TOT	BOEING 737,	PMA
393080-113	IND DUAL TOT FUEL	BOEING 737,	PMA
393080-114	IND DUAL TOT	BOEING 737,	PMA

PARTNO	DESCRIPTION	AIRCRAFT	Source
393080-115	Dual Indicator	BOEING 737,	PMA
393080-116	Dual Indicator	BOEING 737,	PMA
393080-117	INDICATOR V-REF	BOEING 737,	PMA
393080-118	INDICATOR V-REF	BOEING 737,	PMA
393080-121	IND V-REF	BOEING 737,	PMA
393080-122	IND V-REF	BOEING 737	BOEING 737, PMA
393080-123	IND V-REF	BOEING 737-100, -200, 737/200	PMA
393080-203	INDICATOR DUAL	BOEING 737-100, -200,	PMA
393080-204	INDICATOR DUAL	BOEING 737-100, -200,	PMA
393080-205	INDICATOR DUAL	BOEING 737-100, -200,	PMA
393080-213	INDICATOR DUAL	BOEING 737-100, -200,	PMA
393080-214	INDICATOR DUAL	BOEING 737-100, -200,	PMA
393080-215	INDICATOR DUAL	BOEING 737-100, -200,	PMA
393080-216	INDICATOR DUAL	BOEING 737-100, -200,	PMA
393080-217	INDICATOR DUAL	BOEING 737-100, -200,	PMA
393080-218	INDICATOR DUAL	BOEING 737-100, -200,	PMA
393080-221	INDICATOR DUAL	BOEING 737-100, -200,	PMA
393080-222	INDICATOR DUAL	BOEING 737-100, -200,	PMA
393080-223	INDICATOR DUAL	BOEING 737-100, -200,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
393081-103	INDICATOR	LOCKHEED L-1011,	PMA
393081-105	IND TOTALIZER	LOCKHEED L-1011,	PMA
393081-107	INDICATOR TOL	LOCKHEED L-1011,	PMA
393081-109	T INDICATOR	LOCKHEED L-1011,	PMA
393081-111	IND TOT	LOCKHEED L-1011,	PMA
393081-113	IND TOL (KG)	LOCKHEED L-1011,	PMA
393081-115	IND TOL LBS	LOCKHEED L-1011,	PMA
393081-501	Fuel Quantity Totalizer Indicator	Lockheed L-1011	CMM
393081-502	Fuel Quantity Totalizer Indicator	Lockheed L-1011	CMM
393082-101	INDICATOR	LOCKHEED L-1011,	PMA
393082-103	INDICATOR LOCKHEED L-1011	LOCKHEED L-1011,	PMA
393082-105	INDICATOR REPEA	LOCKHEED L-1011,	PMA
393082-107	REPEATER INDICA	LOCKHEED L-1011,	PMA
393082-109	REPEATER INDICA	LOCKHEED L-1011,	PMA
393082-111	IND REPEATER	LOCKHEED L-1011,	PMA
393082-113	IND REPEATER	LOCKHEED L-1011,	PMA
393084-031	INDICATOR FUEL FOKKER F-28	FOKKER F28,	PMA
393084-036	IND FUEL QTY FOKKER F-28	FOKKER F28,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
393084-04359	OIL QTY INDICATOR	BOEING 727-100,	PMA
393084-04408	Liquid Quantity Indicator	Boeing 727	CMM
393084-04596	Liquid Quantity Indicator	Boeing 727	CMM
393084-054	IND FUEL QTY FOKKER F-28	FOKKER F28,	PMA
393084-22488	INDIC FUEL QTY	FOKKER F28,	PMA
393084-22825	INDIC FUEL QTY FOKKER F-28	FOKKER F28,	PMA
393084-63951	Fuel Quantity Indicator	Fokker F28	CMM
393085-19223	Fuel Quantity Indicator	BAC111	CMM
393085-19495	IND FUEL QTY	BAC-1-11 212AR,	PMA
393085-48223	IND FUEL QTY BAC 1-11	BAC 1-11 203AE, 204AF, 212AR, 215AU,	PMA
393086-01235	INDICATOR	BOEING 727-100,	PMA
393086-01236	INDICATOR	BOEING 727-100,	PMA
393086-01334	Indicator, Liquid Quantity	BOEING 727-100,	PMA
393086-01335	Indicator, Liquid Quantity	BOEING 727-100,	PMA
393086-01508	IND LIQ QTY	BOEING 727-100,	PMA
393086-01569	Fuel Quantity Indicator	Boeing 727	CMM
393086-02237	Fuel Quantity Indicator	Boeing 727	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
393086-02337	Indicator, Liquid Quantity	BOEING 727-100,	PMA
393086-02510	INDICATOR	BOEING 727-100,	PMA
393086-02568	Indicator, Liquid Quantity	BOEING 727-100,	PMA
393090-101	INDICATOR	LOCKHEED L-1011,	PMA
393090-103	INDICATOR	LOCKHEED L-1011,	PMA
393090-105	INDICATOR FQ LOCKHEED L-1011	LOCKHEED L-1011,	PMA
393090-107	INDICATOR	LOCKHEED L-1011,	PMA
393090-109	INDICATOR PRIMA	LOCKHEED L-1011,	PMA
393090-111	PRIMARY INDICAT	LOCKHEED L-1011,	PMA
393090-113	PRIMARY INDICAT	LOCKHEED L-1011,	PMA
393090-115	IND PRIMARY	LOCKHEED L-1011,	PMA
393090-117	IND PRIMARY	LOCKHEED L-1011,	PMA
393090-501	Primary Fuel Quantity Indicator	Lockheed L-1011	CMM
393090-503	Primary Fuel Quantity Indicator	Lockheed L-1011	CMM
393093-02378	Indicator, LQ	BOEING 727-100,	PMA
393103-001	Indicator, EPR	LOCKHEED L-1011,	PMA
393103-002	INDICATOR	LOCKHEED L-1011,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
393103-105	Engine Pressure Ratio Indicator	Lockheed L-1011	CMM
393103-107	Indicator, EPR	LOCKHEED L-1011,	PMA
393103-109	INDICATOR EPR	LOCKHEED L-1011,	PMA
393103-111	IND EPR	LOCKHEED L-1011,	PMA
393510-	Gear Box Subassemblies	Boeing 727	CMM
393751-	Gear Box Subassemblies	Boeing 727	CMM
393842-	Gear Box Subassemblies	Boeing 727	CMM
394473-101	TRIMMER ASSY	LOCKHEED L-1011,	PMA
394473-113	Signal Conditioner	LOCKHEED L-1011,	PMA
394473-115	Signal Conditioner	LOCKHEED L-1011,	PMA
394473-117	Signal Conditioner	LOCKHEED L-1011,	PMA
394473-119	Signal Conditioner	LOCKHEED L-1011,	PMA
394473-121	L1011 SIGNAL CONDITIONER	LOCKHEED L-1011,	PMA
394473-123	Signal Conditioner	LOCKHEED L-1011,	PMA
394473-125	Signal Conditioner	LOCKHEED L-1011,	PMA
394473-127	SIGNAL COND	LOCKHEED L-1011,	PMA
394473-129	L-1011 SIGNAL COND	LOCKHEED L-1011,	PMA
394473-131	TRIMMER ASSY	LOCKHEED L-1011,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
394473-133	Signal Conditioner Assembly	Lockheed L-1011	CMM
394473-135	Signal Conditioner Assembly	Lockheed L-1011	CMM
394473-137	SIGNAL COND	LOCKHEED L-1011,	PMA
394473-139	SIGNAL COND	LOCKHEED L-1011,	PMA
394473-141	SIGNAL COND	LOCKHEED L-1011,	PMA
394473-143	SIGNAL COND	LOCKHEED L-1011,	PMA
394473-145	SIGNAL COND	LOCKHEED L-1011,	PMA
394473-147	Signal Conditioner Assembly	Lockheed L-1011	CMM
394473-149	SIGNAL COND LOCKHEED L1011	LOCKHEED L-1011,	PMA
394473-151	SIGNAL COND	LOCKHEED L-1011,	PMA
394473-153	SIGNAL COND	LOCKHEED L-1011,	PMA
394473-155	SIGNAL COND	LOCKHEED L-1011,	PMA
397141-	Gear Box Subassemblies	Boeing 727	CMM
397398-	Motor	Boeing 737	CMM
397528-1	Gear Box Subassemblies	Boeing 727	CMM
397528-2	Gear Box Subassemblies	Boeing 727	CMM
397729-01235	Speed Decreaser Gear Assemblies	Boeing 727	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
397729-01236	Speed Decreaser Gear Assemblies	Boeing 727	CMM
397729-01335	Speed Decreaser Gear Assemblies	Boeing 727	CMM
397729-01508	Speed Decreaser Gear Assemblies	Boeing 727	CMM
397729-01569	Speed Decreaser Gear Assemblies	Boeing 727	CMM
397729-02237	Speed Decreaser Gear Assemblies	Boeing 727	CMM
397729-02378	Speed Decreaser Gear Assemblies	Boeing 727	CMM
397729-02510	Speed Decreaser Gear Assemblies	Boeing 727	CMM
397729-02568	Speed Decreaser Gear Assemblies	Boeing 727	CMM
397993-	Gear Box Subassemblies	Boeing 727	CMM
40002-0000-05	TORQUE SENSOR P & PWC PW118, 118A, 120, 120A, 121, W 100		PMA
40006-0000-05	SPEED SENSOR P & W 2037		PW2037, PMA
40007-0000-0101	TANK UNIT SAAB	SAAB SF340A, SF340	PMA
40007-0000-0102	TANK UNIT SAAB	SAAB SF340A, SF340	PMA
40007-0000-0103	TANK UNIT SAAB	SAAB SF340A, SF340	PMA

PARTNO	DESCRIPTION	AIRCRAFT	Source
40008-0000-0101	TANK UNIT SAAB SF340	SAAB SF340A,	PMA
40008-0000-0102	TANK UNIT SAAB SF340	SAAB SF340A,	PMA
40008-0000-0103	TANK UNIT SAAB SF340	SAAB SF340A,	PMA
40028-0000-03	TORQUE SENSOR PRATT & WHITNEY CANADA	PWC PW124B, 125B, 126A,	PMA
40056-0000-02	TORQUE SENSOR	PWC PW123,	PMA
4006018-	Hydraulic Oil Quantity Indicator	Boeing 737	CMM
4006019	Indicator	BOEING 707,	PMA
4006019-	Hydraulic Oil Quantity Indicator	Boeing 737	CMM
4006020	Tank Unit Assembly	BOEING 707,	PMA
4006020-	Hydraulic Oil Quantity Tank Unit	Boeing 727	CMM
4006092	LOW LEVEL SWITCH	DEHAVILLAND DHC-7-100,	PMA
4006240	INDICATOR ASSEMBLY		BOEING 727, PMA
4006240-	Hydraulic Oil Quantity Indicator	Boeing 707,727,737	CMM
4006452-	Hydraulic Oil Quantity Tank Unit	Boeing 707	CMM
4006454	TRANSMITTER	BOEING 737,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
4006454-	Liquid Quantity Transmitter	Boeing 737-300,-400,	CMM
4006534	Liquid Quantity Transmitter	BOEING 727,	PMA
4006534-	Liquid Quantity Transmitter	Boeing 737-300,-400,	CMM
40108-01	TARGET, DOWN LOCK	DOUGLAS DC-9-31, -32, 34,	PMA
463138-	Gear Box Subassemblies	Boeing 727	CMM
472015-	Flow Meter Transmitter	Cessna 500	CMM
472016-	Flow Meter Compensator	Cessna 500	CMM
472017	C43 - TEMPERATURE INSTRUMENTS	CESSNA 500	TSO
472017-	Interturbine Temperature Indicator	Cessna 500	CMM
472018	C49A - TACHOMETER INDICATORS	CESSNA 500	TSO
472018-	Turbine Speed Indicator	Cessna 500	CMM
472019	C49A - TACHOMETER INDICATORS	CESSNA 500	TSO
472019-	Fan Speed Indicator	Cessna 500	CMM
472020	C43 - TEMPERATURE INSTRUMENTS	CESSNA 500	TSO

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
472020-	Oil Temperature Indicator	Cessna 500	CMM
472021	C47 - PRESSURE INSTRUMENTS - FUEL, OIL, HYDRAULIC	CESSNA 500	TSO
472021-	Oil Pressure Indicator	Cessna 500	CMM
472054-105	Harness	Lockheed L-1011	CMM
472054-107	Harness	Lockheed L-1011	CMM
472054-109	Harness	Lockheed L-1011	CMM
472054-111	HARNES ASSY	LOCKHEED L-1011,	PMA
472054-113	HARNES ASSY	LOCKHEED L-1011,	PMA
472054-115	HARNES ASSY	LOCKHEED L-1011,	PMA
472074	TEMP COMP	LOCKHEED L-1011,	PMA
472074-	Temperature Compensator		Lockheed L-1011 CMM
472085-107	Asymmetry Comparator	LOCKHEED L-1011,	PMA
472085-111	ASYMMETRY COMPARATOR	LOCKHEED L-1011,	PMA
472085-115	COMPARATOR	LOCKHEED L-1011, LOCKHEED L-1011	PMA
472085-117	ASYMMETRY COMPARATOR	L-1011-385-1-14, L-1011-385-1-15, LOCKHEED L-1011-385-1,,	PMA
472085-119	ASYMMETRY COMPARATOR	L-1011-385-1-14, L-1011-385-1-15, LOCKHEED L-1011-385-1,,	PMA

PARTNO	DESCRIPTION	AIRCRAFT	Source
472086-111	XDUCER	LOCKHEED L-1011,	PMA
472086-113	ROTARY TRANS	LOCKHEED L-1011,	PMA
472086-115	TRANSDUCER ROTARY		LOCKHEED L-1011, PMA
472086-119	ROTARY TRANS	LOCKHEED L-1011,	PMA
472094	EPR COMPUTER	LOCKHEED L-1011,	PMA
472094-103	Computer	LOCKHEED L-1011,	PMA
472094-111	COMPUTER	LOCKHEED L-1011,	PMA
472094-113	COMPUTER	LOCKHEED L-1011,	PMA
472094-117	COMPUTER	LOCKHEED L-1011,	PMA
472094-119	EPR COMPUTER	LOCKHEED L-1011,	PMA
472094-121	COMPUTER	LOCKHEED L-1011,	PMA
472094-123	EPR COMPUTER	LOCKHEED L-1011,	PMA
472096	PANEL CONTROL	LOCKHEED L-1011,	PMA
472096-	Control Panel	Lockheed L-1011	CMM
472096-103	CONTROL PAN	LOCKHEED L-1011,	PMA
472123-	Fan Speed Sensor	Airbus A300 (G.E. di	CMM
472183	N2 TACHOMETER	BOEING 747,	PMA
472183-	N2 Tachometer Transmitter	Boeing 747 Classics,	CMM
472222-	CF-6 Speed	Boeing 747 (Distribu	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
472222-	Fan Speed Sensor	Boeing 747 (Distribu	CMM
472222-	CF-6 Speed	Airbus A300 (G.E. di	CMM
472222-	Fan Speed Sensor	Airbus A300 (G.E. di	CMM
472331-	CF-6 Speed	Boeing 747 (Distribu	CMM
472331-	Fan Speed Sensor	Boeing 747 (Distribu	CMM
472331-	CF-6 Speed	Airbus A300 (G.E. di	CMM
472331-	Fan Speed Sensor	Airbus A300 (G.E. di	CMM
472332	FAN SPD SENSOR	GE CF6-6D, D1:-50A,	PMA
472332-	CF-6 Speed	Boeing 747 (Distribu	CMM
472332-	Fan Speed Sensor	Boeing 747 (Distribu	CMM
472332-	CF-6 Speed	Airbus A300 (G.E. di	CMM
472332-	Fan Speed Sensor	Airbus A300 (G.E. di	CMM
472404	N2 TACH XMTR BOEING 747	BOEING 747, 767-200, -300,	PMA
472404-	N2 Tachometer Transmitter	Boeing 747 Classics,	CMM
472511-103	EPR Panel	LOCKHEED L-1011,	PMA
472511-105	EPR Panel	LOCKHEED L-1011,	PMA
472511-107	CONTROL PANEL	LOCKHEED L-1011,	PMA
472511-109	CONTROL PANEL	LOCKHEED L-1011,	PMA
472511-111	CONTROL PANEL	LOCKHEED L-1011,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
472511-113	CONTROL PANEL	LOCKHEED L-1011,	PMA
472710-101	CABLE HARNESS	LOCKHEED L-1011,	PMA
472710-103	HARNESS ASSY	LOCKHEED L-1011,	PMA
472710-105	Harness	Lockheed L-1011	CMM
472710-107	HARNESS ASSY TANK 1A & 3A	LOCKHEED L-1011,	PMA
472711-101	LEVEL SENSOR	LOCKHEED L-1011,	PMA
472950-101	HARNESS ASSY	LOCKHEED L-1011,	PMA
473046	TACHOMETER	BOEING 747,	PMA
473048	SUMMATION UNIT BOEING 737	BOEING 737,	PMA
473048-	Fuel Summation Unit	Boeing 727,737	CMM
473049	SUMMATION UNIT BOEING 727	BOEING 727,	PMA
473049-	Fuel Summation Unit	Boeing 727,737	CMM
473073-101	SS EPR/TAT IND	LOCKHEED L-1011-385-1, -15,	PMA
473155-01-01	Display Unit	BOEING 727-231,	PMA
473155-05-01	DISPLAY UNIT	BOEING 727-231,	PMA
473156-01-01	CONTROL UNIT	BOEING 727-231,	PMA
473157-F-01	Performance Mgmt System		TWA 727 CMM
473158-01	Performance Mgmt System - Power Supply	TWA 727	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
473196-F-01-01	Processor	BOEING 727-231,	PMA
473196F-0103-01	PROCESSOR UNIT	BOEING 727-231,	PMA
473215-001	Fuel Qty and Level Sensing Signal Cond.	Bell 222	CMM
473271	SPEED SENSOR	GE CF6	GE CF6-50/-45, PMA
473271-	Fan Speed Sensor	Boeing 747 (Distribu	CMM
473271-	CF-6 Speed	Boeing 747 (Distribu	CMM
473271-	Fan Speed Sensor	Airbus A300 (G.E. di	CMM
473271-	CF-6 Speed	Airbus A300 (G.E. di	CMM
473286-	Fuel Quantity Indicator	Boeing/Vertol 234LR	CMM
473286-001	Fuel Quantity Indicator	Boeing/Vertol 234LR	CMM
473287-	Fuel Quantity Totalizer Indicator	Boeing/Vertol 234LR	CMM
473287-001	Fuel Quantity Totalizer Indicator	Boeing/Vertol 234LR	CMM
473288-	Fuel Quantity Signal Conditioner	Boeing/Vertol 234LR	CMM
473288-002	Fuel Quantity Signal Conditioner	Boeing/Vertol 234LR	CMM
473382	C55 - FUEL AND OIL QUANTITY INSTRUMENT	CANADAIR CL-600	TSO
473382-01	SIGCONDFUELQTY	CANADAIR CL600-1A11, -2A12, -2B16,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
473383	SUMMATION UNIT	BOEING 737,	PMA
473383-	Fuel Summation Unit	Boeing 727,737	CMM
50016-0000-01	CABLE HARNESS SAAB SF-340	SAAB SF340A,	PMA
50017-0000-01	CABLE HARNESS SAAB SF-340	SAAB SF340A,	PMA
50037-0000-0101	Harness Assembly	LOCKHEED 382G,	PMA
50038-0000-0101	Harness Assembly	LOCKHEED 382G,	PMA
50040-0000-01	HARNESS AY INBD EMBRAER EMB-120	EMBRAER EMB-120,	PMA
50046-0000-02	Torque Test Set	Pratt & Whitney Cana	CMM
50046-0000-03	Torque Test Set	Pratt & Whitney Cana	CMM
50063-0000-03	CAP TRIMMER	737-100, -200, BOEING 727,-727C, 727-100, -100C, -200, -200F,;	PMA
50063-0000-04	TRIMMER ASSY	BOEING 737-100, -200,	PMA
50063-0000-05	TRIMMER ASSY	BOEING 737-100, -200,	PMA
50063-0000-07	TRIMMER ASSY	BOEING 737-100, -200,	PMA
50063-1002-03	BRKT & HARDW AY	BOEING 727, 727C, 727-100, -100C, -200, -200F,	PMA
50063-1003-03	MTG ASSY	BOEING 737-100, -200,	PMA
50076-0000-01	CAP TRIMMER BOEING 737-300	BOEING 737,	PMA
50076-0000-02	CAP TRIMMER UNI	BOEING 737-200,	PMA
50140-0000-01	HARNESS	BOEING 737-100, -200,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
50150-0110	HARNESS	AIRBUS A340, -211, -311, -212, -312,	PMA
50150-0111	HARNESS	A330/A340 AIRBUS A340, -211, -311, -212, -312,	PMA
50150-0112	HARNESS	A330/A340 AIRBUS A330-301,	PMA
50150-0113	HARNESS	A330/A340 AIRBUS A330-301,	PMA
50150-0114	HARNESS	A330/A340 AIRBUS A330-301,	PMA
50150-0161	WIRING HARNESS	AIRBUS A330-301,	PMA
50150-0162	WIRING HARNESS	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
50150-0167	WIRING HARNESS	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
50150-0168	WIRING HARNESS	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
50150-0169	WIRING HARNESS	AIRBUS A330-301,	PMA
50150-0173	WIRING HARNESS	AIRBUS A340, -211, -311, -212, -312, A330-301, A330/A340	PMA
50150-0174	WIRING HARNESS	AIRBUS A340, -211, -311, -212, -312, A330-301, A330/A340	PMA
50150-0175	WIRING HARNESS	AIRBUS A340, -211, -311, -212, -312, A330-301, A330/A340	PMA
50150-0176	WIRING HARNESS	AIRBUS A340, -211, -311, -212, -312, A330-301, A330/A340	PMA
50150-0179	WIRING HARNESS	AIRBUS A340, -211, -311, -212, -312, A330/A340	PMA
50150-0180	WIRING HARNESS	AIRBUS A340, -211, -212, -311, -312, A330-301,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
50150-0209	WIRING HARNESS A330/A340	AIRBUS A330-301,	PMA
50150-0210	WIRING HARNESS A330/A340	AIRBUS A340, -211, -311, -212, -312,	PMA
50150-0211	WIRING HARNESS A330/A340	AIRBUS A340, -211, -311, -212, -312,	PMA
50150-0212	WIRING HARNESS A330/A340	AIRBUS A330-301,	PMA
50150-0213	WIRING HARNESS A330/A340	AIRBUS A330-301,	PMA
50150-0214	WIRING HARNESS A330/A340	AIRBUS A330-301,	PMA
50150-0271	WIRING HARNESS A330/A340	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
50150-0272	WIRING HARNESS A330/A340	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
50150-0273	WIRING HARNESS A330/A340	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
50150-0274	WIRING HARNESS A330/A340	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
50150-0275	WIRING HARNESS A330/A340	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
50150-0276	WIRING HARNESS A330/A340	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
50150-0277	WIRING HARNESS A330/A340	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
50150-0278	WIRING HARNESS A330/A340	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
50150-0279	WIRING HARNESS A330/A340	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
50150-0309	WIRING HARNESS A330/A340	AIRBUS A330-301,	PMA
50150-0310	WIRING HARNESS A330 PMA		AIRBUS A340-211, -311, -212, - 312,
50150-0312	WIRING HARNESS	AIRBUS A330-301,	PMA
50150-0313	WIRING HARNESS	AIRBUS A330-301,	PMA
50150-0314	WIRING HARNESS A330 119QT	AIRBUS A330-301,	PMA
50150-0371	WIRING HARNESS	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
50150-0372	Harness	Airbus A330/A340	CMM
50150-0373	WIRING HARNESS	A330-301, A340-211,-212,-311,-312,	PMA
50150-0374	WIRING HARNESS	A330-301, A340-211,-212,-311,-312,	PMA
50150-0375	WIRING HARNESS	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
50150-0376	WIRING HARNESS	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
50150-0377	Harness	Airbus A330/A340	CMM
50150-0378	WIRING HARNESS	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
50150-0405	WIRING HARNESS A330/A340	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
50150-0406	WIRING HARNESS A330/A340	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
50150-0407	WIRING HARNESS A330/A340	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
50150-0408	WIRING HARNESS A330/A340	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
50150-0409	WIRING HARNESS A330 104QT	AIRBUS A330-301,	PMA
50150-0412	WIRING HARNESS A330 103QT	AIRBUS A330-301,	PMA
50150-0413	WIRING HARNESS A330 118QT	AIRBUS A330-301,	PMA
50150-0472	WIRING HARNESS	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
50150-0474	WIRING HARNESS	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
50150-0501	Harness	Airbus A330/A340	CMM
50150-0502	Harness	Airbus A330/A340	CMM
50150-0503	WIRING HARNESS A330/A340	AIRBUS A340, -211, -311, -212, -312,	PMA
50150-0504	WIRING HARNESS A330/A340	AIRBUS A340, -211, -311, -212, -312,	PMA
50150-0505	WIRING HARNESS A330/A340	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
50150-0506	WIRING HARNESS A330/A340	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
50150-0507	WIRING HARNESS A330/A340	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA
50150-0508	WIRING HARNESS A330A/A340	AIRBUS A340, -211, -311, -212, -312, A330-301,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
50150-0601	WIRING HARNESS A330/A340	AIRBUS A340, -211, -311, -212, -312,	PMA
50150-0602	WIRING HARNESS A330/A340	AIRBUS A340, -211, -311, -212, -312,	PMA
50150-0603	WIRING HARNESS A330/A340	AIRBUS A340, -211, -311, -212, -312,	PMA
50150-0604	WIRING HARNESS A330/A340	AIRBUS A340, -211, -311, -212, -312,	PMA
50150-0606	WIRING HARNESS A330/A340	AIRBUS A340-211, -311, A330-301,	PMA
50150-0702	WIRING HARNESS A330/A340	AIRBUS A340-311,	PMA
50150-0703	WIRING HARNESS A330 PMA		AIRBUS A340, -211, -311, -212, -312,
50150-0704	WIRING HARNESS A330 PMA		AIRBUS A340, -211, -311, -212, -312,
50150-1501	WIRING HARNESS A330/A340	AIRBUS A340, -211, -311, -212, -312,	PMA
50150-1502	WIRING HARNESS A330/A340	AIRBUS A340, -211, -311, -212, -312,	PMA
50181-0000-0105	HARNESS & MTG PLATE ASSY	-200C, -200F, -300, BOEING 747-100, -100B, -100B SUD, -200B,,	PMA
50181-0000-0106	HARNESS & MTG PLATE ASSY (L/R)	-200B, -200C, -200F, -300, BOEING 747-100, -100B, -100B SUD,,	PMA
50192-0000-0101	WING	BOEING 727, 727C, 727-100, -100C, -200, -200F,	PMA
50192-0000-0102	INTEGRAL CTR	BOEING 727, 727C, 727-100, -100C, -200, -200F,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
50192-0000-0103	HARNESS & MTG PLATE ASSY	BOEING 727, 727C, 727-100, -100C, -200, -200F,	PMA
50192-0000-0401	WING TK	BOEING 727,727C,727-100,-100C,-200,-200F,	PMA
50192-0000-0402	INTEGRAL CTR TK	BOEING 727,727C,727-100,-100C,-200,-200F,	PMA
50192-0000-0403	BLADDER CTR TK	BOEING 727,727C,727-100,-100C,-200,-200F,	PMA
50192-2109	PARALLEL ADAPTER	BOEING 727, 727C, 727-100, -100C, -200, -200F,	PMA
50203-2109	PARALLELING ADAPTER	727,727C,-200,-100,-100C,-200,-200C, BOEING 737-100, -200, -300, -400, -500,,	PMA
50203-4109	Paralleling Adapter	Boeing 727,737	CMM
50208-01	CABLE ASSEMBLY	BOEING 727, 727C, 727-100, -100C, -200, -200F,	PMA
50209-01	HARNESS L-1011 FQIS	L-1011-385-1-14, -385-1-15, -385-3, LOCKHEED L-1011-385-1,,	PMA
50209-02	HARNESS L-1011 FQIS	L-1011-385-1-14, -385-1-15, -385-3, LOCKHEED L-1011-385-1,,	PMA
50209-03	HARNESS L-1011 FQIS	L-1011-385-1-14, -385-1-15, -385-3, LOCKHEED L-1011-385-1,,	PMA
50209-04	HARNESS L-1011 FQIS	L-1011-385-1-14, -385-1-15, -385-3, LOCKHEED L-1011-385-1,,	PMA
50209-05	HARNESS L-1011 FQIS	L-1011-385-1-14, -385-1-15, -385-3, LOCKHEED L-1011-385-1,,	PMA
50218-01	FUSELAGE WIRING HARNESS	DOUGLAS DC-9, -31, -32, -34,	PMA
50219-12	ADAPTER CABLE 737-X		BOEING 737-700, -800, PMA

PARTNO	DESCRIPTION	AIRCRAFT	Source
50219-13	ADAPTER CABLE 737-X		BOEING 737-600,-700, PMA
50219-14	ADAPTER CABLE 737-X		BOEING 737-700, -800, 737X
BUSINESS JET,	PMA		
50219-15	ADAPTER CABLE	BOEING 737-700,-800, 737X BUSINESS JET,	PMA
50239-01	PESU HARNESS	DOUGLAS DC-9, -31, -32, -34,	PMA
50301-0101	HARN ASSY, AUXILARY TANK W/O COMPENSATOR	BOEING 737-700(IGW),	PMA
50301-0102	HARN ASSY, AUXILARY TANK WITH COMPENSATOR	BOEING 737-700(IGW),	PMA
50931-0101	Operators Manual for the Wire Diagnostics Inspection Tool		CMM
530151-8	CONTACT	-300 SEVEN AND NINE TANK CONFIGURATIONS, BOEING 747-100,- 100B,-100B SUD,-200B,-200C,-200F,,	PMA
7825D-	Densitometer	Airbus A330/A340	CMM
7825E-	Densitometer	Airbus A330/A340	CMM
94-077	MASTER KIT LIST B747		BOEING 747-100, -200, -300 (7
TANK),	PMA		
94-079	MASTER KIT LIST	BOEING 747-100, -200, -300 (9 TANK), B747 9 TANK	PMA
AC1223	Cargo Door Drive System	Fokker F-60	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
AC1223-1	Cargo Door Drive System	Fokker F-60	CMM
AL1326M2-1	Remote Positioning System Linear Actuators	Boeing Vertol	CMM
AL1326M28-2	Linear Actuator	Lockheed L-1011	CMM
AL1326M28-3	Linear Actuator	Lockheed L-1011	CMM
AL1326M28-4	Linear Actuator	Lockheed L-1011	CMM
AL1326M28-5	Actuator	LOCKHEED L1011-385 SERIES,	PMA
AL1326M28-6	Actuator	LOCKHEED L1011-385 SERIES,	PMA
AL1326M28-7	Linear Actuator	Lockheed L-1011	CMM
AL1326M2L-1	Remote Positioning System Linear Actuators	Boeing Vertol	CMM
AL1326M3-1	Remote Positioning System Linear Actuators	Boeing Vertol	CMM
AL1632M8-1	Linear Actuator	Lockheed L-1011	CMM
AL1632M8-2	Linear Actuator	Lockheed L-1011	CMM
AL1632M8-3	Linear Actuator	Lockheed L-1011	CMM
AL1632M8-4	Linear Actuator	LOCKHEED L1011-385 SERIES,	PMA
AL1632M8-5	ACTUATOR,E-M,LINEAR,A.C.	LOCKHEED L1011-385 SERIES,	PMA
AL1632M8-6	ACTUATOR,LINEAR	LOCKHEED L1011-385-1,385-1-14,385-1-15,	PMA
AR6460M1	ACTUATOR,ROTARY	BOEING 737-200,	PMA
AR6460M1MOD1	Rotary Actuator	Boeing 737-300	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
AR6460M1MOD2	Rotary Actuator	Boeing 737-300	CMM
AR6460M2	ACTUATOR,ROTOAR Y	BOEING 737-300/400/500,	PMA
AR6460M2MOD1	Rotary Actuator	Boeing 737-300	CMM
AR6460M2MOD2	Rotary Actuator	Boeing 737-300	CMM
AR6460M2MOD3	Rotary Actuator	Boeing 737-300	CMM
AR7077M1MOD1	Rotary Actuator	Boeing 737-300, -400	CMM
AR7077M1MOD2	Rotary Actuator	Boeing 737-300, -400	CMM
AR7077M1MOD3	Rotary Actuator	Boeing 737-300, -400	CMM
AR7077M2	ACTUATOR,MECHAN ICAL	BOEING 737-300,400,500,	PMA
AR7077M2MOD1	Rotary Actuator	Boeing 737-300, -400	CMM
AR7077M2MOD2	ACTUTOR,ELECROM ECHANICAL ROTARY	BOEING 737-300,400,500,	PMA
AR7077M2MOD3	ACTUATOR,ELECTRO MECHANICAL ROTARY	BOEING 737-300,400,500,	PMA
AR7077M2MOD4	CLUTCH ASSEMBLY, ELECTRIC	BOEING 737-300,400,500,	PMA
AR7077M2MOD5	Rotary Actuator	Boeing 737-300, -400	CMM
AR7077M2MOD6	ACTAUTOR, ELECTRO- MECHANICAL ROTARY	BOEING 737-300,400,500,	PMA

PARTNO	DESCRIPTION	AIRCRAFT	Source
AR7077M2MOD7	ACTUATOR,ELECTRO -MECHANICAL ROTARY	BOEING 737-300,400,500,	PMA
AR7077M2MOD8	ACTUATOR,ELECTRO -MECHANICAL ROTARY	BOEING 737-300,400,500,	PMA
AR7077M3	ACTUATOR,ROTARY	BOEING 737-300,400,500,	PMA
AR7077M3MOD1	ACTUATOR,ELECTRO -MECHANICAL ROTARY	BOEING 737-300,400,500,	PMA
B1047-1	Control Unit	BOEING 727,	PMA
B1077-1	Engine Oil Quantity Indicator	Douglas DC-8	CMM
B1077-2	Engine Oil Quantity Indicator	Douglas DC-8	CMM
B1077-3	INDICATOR	DC-8F-55, DOUGLAS DC-8-11,-43,-51,-52,-53,-55,-61,DC-8F-54,,	PMA
B1077-3W	INDICATOR,POWER UNIT	DOUGLAS DC-8-53,-55,-61,-61F,DC-8F-55,	PMA
B1077-4	Engine Oil Quantity Indicator	Douglas DC-8	CMM
B1175-3069	FUEL PROBE	-32, -33F, -34F, -34, 32F, -41, -51, DOUGLAS DC-9-11, -14, -15, -15F, -21, -31,,	PMA
B1175-3069M	Liquid Quantity Transmitter	Douglas DC-9	CMM
B1175-3076	TANK UNIT	-32, -33F, -34F, -34, 32F, -41, -51, DOUGLAS DC-9-14, -15, 15F, -21, -31,,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
B1175-3076M	Liquid Quantity Transmitter	Douglas DC-9	CMM
B1175-3589	Liquid Quantity Transmitter	Douglas DC-9	CMM
B1176-3070	TRANSMITTER	-32, -33F, -34F, -34, 32F, -41, -51, DOUGLAS DC-9-11, -14, -15, -15F, -21, -31,, PMA	
B1176-3070M	TANK UNITS	-14, -15, -15F, -21, -31, -32,, -32F, -33F, -34, -34F, -41, -51, MCDONNELL DOUGLAS DC-9, -11, -12, -13,, PMA	
B1177-3071	FUEL QTY TRANSM.	-32, -33F, -34F, -34, 32F, -41, -51, DOUGLAS DC-9-11, -14, -15, -15F, -21, -31,, PMA	
B1177-3071M	Liquid Quantity Transmitter	Douglas DC-9	CMM
B1177-3072	TRANSMITTER	-32, -33F, -34F, -34, 32F, -41, -51, DOUGLAS DC-9-11, -14, -15, -15F, -21, -31,, PMA	
B1177-3072M	Liquid Quantity Transmitter	Douglas DC-9	CMM
B1177-3073	TRANSMITTER	-32, -33F, -34F, -34, 32F, -41, -51, DOUGLAS DC-9-11, -14, -15, -15F, -21, -31,, PMA	
B1177-3073M	Liquid Quantity Transmitter	Douglas DC-9	CMM
B1177-3074	TANK UNIT	-32, -33F, -34F, -34, 32F, -41, -51, DOUGLAS DC-9-11, -14, -15, -15F, -21, -31,, PMA	
B1177-3074M	Liquid Quantity Transmitter	Douglas DC-9	CMM
B1177-3075	TANK UNIT	-32, -33F, -34F, -34, 32F, -41, -51, DOUGLAS DC-9-11, -14, -15, -15F, -21, -31,, PMA	

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
B1177-3075M	Liquid Quantity Transmitter	Douglas DC-9	CMM
B1177-3400	Liquid Quantity Transmitter	DOUGLAS DC-8-62,-62F,-63,-63F,DC-8-55,	PMA
B1177-3401	TANK UNIT	DOUGLAS DC-8-62,-62F,-63,-63F,DC-8-55,	PMA
B1177-3405	Liquid Quantity Transmitter	DOUGLAS DC-8-62,-62F,-63,-63F,	PMA
B1177-3410	TANK UNIT	DOUGLAS DC-8-55F,-62,-62F,-63,-63F,	PMA
B1177-3411	Liquid Quantity Transmitter	DOUGLAS DC-8-55F,-62,-62F,-63,-63F,	PMA
B1177-3412	Liquid Quantity Transmitter	DOUGLAS DC-8-55F,-62,-62F,-63,-63F,	PMA
B1177-3413	TANK UNIT	DOUGLAS DC-8-62,-62F,-63,-63F,DC-8-55,	PMA
B1177-3414	Liquid Quantity Transmitter	DOUGLAS DC-8-62,-62F,-63,-63F,DC-8F-55,	PMA
B1177-3415	Liquid Quantity Transmitter	DOUGLAS DC-8-62,-62F,-63,-63F,DC-8-55,	PMA
B1177-3416	Liquid Quantity Transmitter	DOUGLAS DC-8-62,-62F,-63,-63F,DC-8F-55,	PMA
B1177-3417	Liquid Quantity Transmitter	DOUGLAS DC-8-62,-62F,-63,-63F,DC-8F-55,	PMA
B1177-3418	Liquid Quantity Transmitter	DOUGLAS DC-8-62,-62F,-63,-63F,DC-8F-55,	PMA
B1177-3419	Liquid Quantity Transmitter	DOUGLAS DC-8-62,-62F,-63,-63F,	PMA

PARTNO	DESCRIPTION	AIRCRAFT	Source
B1177-3420	Liquid Quantity Transmitter	DOUGLAS DC-8-62, -62F, -63, -63F,	PMA
B1177-3421	Liquid Quantity Transmitter	DOUGLAS DC-8-62,-62F,-63,-63F,	PMA
B1177-3422	Liquid Quantity Transmitter	DOUGLAS DC-8-62,-62F,-63,-63F,	PMA
B1177-3423	Liquid Quantity Transmitter	DOUGLAS DC-8-62,-62F,-63,-63F,	PMA
B1177-3424	Liquid Quantity Transmitter	DOUGLAS DC-8-62,-62F,-63,-63F,	PMA
B1177-3426	Liquid Quantity Transmitter	DOUGLAS DC-8-62,-62F,-63,-63F,	PMA
B1177-3427	Liquid Quantity Transmitter	DOUGLAS DC-8-62,-62F,-63,-63F,	PMA
B1177-3428	Liquid Quantity Transmitter	DOUGLAS DC-8-62,-62F,-63,-63F,	PMA
B1177-3429	Liquid Quantity Transmitter	DOUGLAS DC-8-62,-62F,-63,-63F,	PMA
B1177-3430	Liquid Quantity Transmitter	DOUGLAS DC-8-62,-62F,-63,-63F,	PMA
B1177-3431	Liquid Quantity Transmitter	DOUGLAS DC-8-62,-62F,-63,-63F,	PMA
B1177-3670	Liquid Quantity Transmitter	DOUGLAS DC-8-62,-62F,-63,-63F,	PMA
B1177-3671	PROBE	DC-8-62,-62F,-63,-63F,	PMA
B1178-3078	TANK UNIT	-32, -33F, -34F, -34, 32F, -41, -51, DOUGLAS DC-9-11, -14, -15, -15F, -21, -31,, PMA	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
B1178-3078M	Liquid Quantity Transmitter	Douglas DC-9	CMM
B1178-3402	TANK UNIT	DOUGLAS DC-8-62,-62F,-63,-63F,	PMA
B1178-3418	Transmitter	Douglas DC-8	CMM
B1178-3425	XMTR ASSY	DOUGLAS DC-8-62,-62F,-63,-63F,	PMA
B1178-3432	Transmitter Assembly	DOUGLAS DC-8-62,-62F,-63,-63F,	PMA
B1178-3552	TRANSMITTER	DOUGLAS DC-9-31, -32, -33F, -34F, -34, -41, -51,	PMA
B1178-3552M	Liquid Quantity Transmitter	Douglas DC-9	CMM
B1178-3591	TRANSMITTER	DOUGLAS DC-9-15, -32, -32F, -34,	PMA
B1178-3591M	Liquid Quantity Transmitter	Douglas DC-9	CMM
B1178-3592	TRANSMITTER	DOUGLAS DC-9-15, -32, -32F,	PMA
B1178-3592M	Liquid Quantity Transmitter	Douglas DC-9	CMM
B1178-3606	TRANSMITTER	DOUGLAS DC-9-15, -32, -32F,	PMA
B1178-3606M	Liquid Quantity Transmitter	Douglas DC-9	CMM
B1178-3637	TRANSMITTER	DOUGLAS DC-9-15, -32, -32F,	PMA
B1178-3637M	Liquid Quantity Transmitter	Douglas DC-9	CMM
B1178-3672	XMTR ASSY	DOUGLAS DC-8-62,-62F,-63,-63F,	PMA
B118-101	Liquid Quantity Indicator	DOUGLAS DC-8-41,-43,-53,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
B118-101X	Liquid Quantity Indicator	DOUGLAS DC-8-54,	PMA
B118-101XW	Liquid Quantity Indicator	DOUGLAS DC-8-53,	PMA
B118-124	Liquid Quantity Indicator	DOUGLAS DC-8-32,-33,-43,	PMA
B118-125	Liquid Quantity Indicator	DOUGLAS DC-8-41,-43,	PMA
B118-126	Liquid Quantity Indicator	DOUGLAS DC-8-32,-33,-42,-43,-53,	PMA
B118-143	Liquid Quantity Indicator	DOUGLAS DC-8-43,-52,-53,-55,DC-8F-54,DC-8F-55,	PMA
B118-143W	Liquid Quantity Indicator	DOUGLAS DC-61F,-71,-73,	PMA
B118-143X	Liquid Quantity Indicator	DOUGLAS DC-8F-54,	PMA
B118-143XW	Fuel Quantity Indicator	Douglas DC-8	CMM
B118-144	INDICATOR AY	DOUGLAS DC-8-61,	PMA
B118-145	Liquid Quantity Indicator	DOUGLAS DC-8-43,	PMA
B118-145X	Liquid Quantity Indicator	DOUGLAS DC-8F-54,	PMA
B118-145XW	Liquid Quantity Indicator	DOUGLAS DC-8-53,	PMA
B118-244	INDICATOR	DC-9-10 THRU -50,	PMA
B118-264	Liquid Quantity Indicator	-33F, -41, -51, DOUGLAS DC-9-14, 15, -21, -31, -32, -32F,,	PMA
B118-312	Liquid Quantity Indicator	DOUGLAS DC-8-51,-52,DC-8F-54,	PMA
B118-312W	INDICATOR	DOUGLAS DC-8-51,-52,DC-8F-54,	PMA
B118-312XW	Fuel Quantity Indicator	Douglas DC-8	CMM
B118-313	Liquid Quantity Indicator	DOUGLAS DC-8-51,-52,DC-8F-54,	PMA
B118-313W	INDICATOR	DOUGLAS DC-8-32,-33,-53,-55,-61,DC-8F-55,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
B118-313XW	Fuel Quantity Indicator	Douglas DC-8	CMM
B118-314	Liquid Quantity Indicator	DOUGLAS DC-8-51,-52,DC-8F-54,	PMA
B118-314W	INDICATOR	DOUGLAS DC-8-32,-33,-53,-55,-61,DC-8F-55,	PMA
B118-314XW	Fuel Quantity Indicator	Douglas DC-8	CMM
B118-315	Liquid Quantity Indicator	DOUGLAS DC-8-51,-52,DC-8F-54,	PMA
B118-315W	INDICATOR	DOUGLAS DC-8-32,-33,-53,-55,-61,DC-8F-55,	PMA
B118-315XW	Fuel Quantity Indicator	Douglas DC-8	CMM
B118-316	Liquid Quantity Indicator	DOUGLAS DC-8-51,-52,DC-8F-54,	PMA
B118-316W	Liquid Quantity Indicator	DOUGLAS DC-8-32,-33,-53,-55,-61,DC-8F-55,	PMA
B118-316XW	Fuel Quantity Indicator	Douglas DC-8	CMM
B118-317	Fuel Quantity Indicator	Douglas DC-8	CMM
B118-324	Fuel Quantity Indicator	Douglas DC-8	CMM
B118-324W	Liquid Qty Indicator	DOUGLAS DC-8-53,-55,DC-8F-55,	PMA
B118-324XW	Fuel Quantity Indicator	Douglas DC-8	CMM
B118-336	Fuel Quantity Indicator	Douglas DC-8	CMM
B118-337	Fuel Quantity Indicator	Douglas DC-8	CMM
B118-338	Fuel Quantity Indicator	Douglas DC-8	CMM
B118-339	Fuel Quantity Indicator	Douglas DC-8	CMM
B118-340	Fuel Quantity Indicator	Douglas DC-8	CMM
B118-341	Fuel Quantity Indicator	Douglas DC-8	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
B118-342	Fuel Quantity Indicator	Douglas DC-8	CMM
B118-356	Fuel Quantity Indicator	Douglas DC-8	CMM
B118-357	Fuel Quantity Indicator	Douglas DC-8	CMM
B118-58	Fuel Quantity Indicator	DC-8-11, -12, -21,	PMA
B118-59	Fuel Quantity Indicator	C-8F-54,DC-8F-55, DC-8-11, -12,-21,-32,-33,-41,-43,-51,-52,-53,-55,D,	PMA
B118-59W	Fuel Quantity Indicator	DC-8-61,-61F,-71,-73,	PMA
B118-59X	Fuel Quantity Indicator	DC-8F-54,	PMA
B118-59XW	Fuel Quantity Indicator	DC-8-61,	PMA
B118-60	Fuel Quantity Indicator	-8F-54,DC-8F-55, DC-8-11,-23,-21,-32.-33,-41,-43,-51,-52,-53,-55,DC,	PMA
B118-60W	Fuel Quantity Indicator	DC-8-61,-61F,-71,-73,	PMA
B118-60X	Fuel Quantity Indicator	DC-8F-54,	PMA
B118-60XW	Fuel Quantity Indicator	DC-8-61,	PMA
B118-61	Fuel Quantity Indicator	53, -555,-DC-8F-54, DC-8F-55, DC-8-11, -12, -21, -32, -33, -41, -43, -51, -52, -, PMA	PMA
B118-61W	Fuel Quantity Indicator	DOUGLAS DC-8-61,-61F,-71,-73,	PMA
B118-61X	Fuel Quantity Indicator	DOUGLAS DC-8-54,	PMA
B118-61XW	Fuel Quantity Indicator	DOUGLAS DC-8-61,	PMA
B118-62	Fuel Quantity Indicator	-8F-55, DOUGLAS DC-8-32,-33,-41,43,-52,-53,-55,DC-8F-54,DC,	PMA
B118-62W	Fuel Quantity Indicator	DOUGLAS DC-8-61F,-71,-73,	PMA
B118-62X	Fuel Quantity Indicator	DOUGLAS DC-8F-54,	PMA
B118-62XW	Fuel Quantity Indicator	DOUGLAS DC-8-61,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
B118-63	Fuel Quantity Indicator	Douglas DC-8	CMM
B118-64	Fuel Quantity Indicator	DOUGLAS DC-8-32,-33,-42,-43,-53,-55,-63,DC-8F-55,	PMA
B118-65	Fuel Quantity Indicator	DOUGLAS DC-8-32,-33,-42,-43,-53,-55,-63,DC-8F-55,	PMA
B118-66	Fuel Quantity Indicator	DC-8F-55, DOUGLAS DC-8-32, -33, -42, -43, -53, -55, -63,,	PMA
B118-67	Fuel Quantity Indicator	DOUGLAS DC-8-32,-33,-42,-43,-53,-55,-63,DC-8F-55,	PMA
B118-68	Fuel Quantity Indicator	DOUGLAS DC-8-43,	PMA
B118-69	Fuel Quantity Indicator	DOUGLAS DC-8-41,-43,-53,	PMA
B118-69X	Fuel Quantity Indicator	DOUGLAS DC-8F-54,	PMA
B118-69XW	Fuel Quantity Indicator	DOUGLAS DC-8-53,	PMA
B118-70	Fuel Quantity Indicator	DOUGLAS DC-8-41,-43,-53,	PMA
B118-70X	Fuel Quantity Indicator	DOUGLAS DC-8F-54,	PMA
B118-70XW	Fuel Quantity Indicator	DOUGLAS DC-8-53,	PMA
B118-71	Fuel Qty Indicator - Power Unit	Douglas DC-8	CMM
B118-71X	Fuel Quantity Indicator	DOUGLAS DC-8F-54,	PMA
B118-71XW	Fuel Quantity Indicator	DOUGLAS DC-8-53,	PMA
B118-72	Fuel Quantity Indicator	DOUGLAS DC-8-41,-43,	PMA
B118-72X	Fuel Quantity Indicator	DOUGLAS DC-8F-54,	PMA
B118-72XW	Fuel Quantity Indicator	DOUGLAS DC-8-53,	PMA
B118-95	Fuel Quantity Indicator	DC-8F-54,-55, DOUGLAS DC-8-11,-32,-33,-41,-43,-51,-52,-53,-55,,	PMA
B118-95W	Fuel Quantity Indicator	DOUGLAS DC-8-61, -61F,-71,-73,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
B118-95X	Fuel Quantity Indicator	DOUGLAS DC-8F-54,	PMA
B118-95XW	Fuel Quantity Indicator	DOUGLAS DC-8-61,	PMA
B118-97	Fuel Quantity Indicator	DOUGLAS DC-8-32,-33,-42,-53,-55,-63,-43, DC-8F-55,	PMA
B118-XW	Fuel Quantity Indicator	DC-8-61,	PMA
B1239-3196	DL TRANSMITTER	MCDONNELL DOUGLAS DC-8, -51, -61,	PMA
B1279-	APU Oil Level Transmitter	Boeing 737-300	CMM
B1279-3	TRANSMITTER	BOEING 737,	PMA
B1404-1	Dual Liquid Quantity Indicator	VC10	CMM
B1404-2	Dual Liquid Quantity Indicator	VC10	CMM
B1404-3	IND ASSY	BAC 1-11-400, 475, -500,	PMA
B1404-4	IND ASSY	BAC 1-11-400, 475, -500,	PMA
B1425-1	LOAD LIMIT	DOUGLAS DC-9-14, -21, -32,	PMA
B1425-5	LOAD LIMIT	DOUGLAS DC-9-14, -21, -32, -33F, -41,	PMA
B1436-1	DIAL BEZL MTG	DOUGLAS DC-9-14, -15,,	PMA
B1436-10	Dial Bezel	DOUGLAS DC-9-51,	PMA
B1436-11	Dial Bezel	DOUGLAS DC-9-21,	PMA
B1436-12	DIAL BEZEL MTD	DOUGLAS DC-9-33F,	PMA
B1436-13	Dial Bezel	DOUGLAS DC-9-31, -32,	PMA
B1436-3	DIAL BEZEL	DOUGLAS DC-9-31, -32,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
B1436-6	Dial Bezel	DOUGLAS DC-9-32, 33F,	PMA
B1436-7	Dial Bezel	DOUGLAS DC-9-21, 32, 32F, -33F, -41, -51,	PMA
B175-12	Power Indicator	DOUGLAS DC-8-52,-53,-55,DC-8F-54,DC-8F-55,	PMA
B175-12W	Power Indicator	DOUGLAS DC-8-53,-55,-61,-61F,-71F,-73F,DC-8F-55,	PMA
B175-14	IND POWER UNIT	DOUGLAS DC-8-32,-42,-43,-53,-55,DC-8F-55,	PMA
B175-16	Power Indicator	DOUGLAS DC-9-11, -14, -15, -15F, -31, -32,	PMA
B175-17	Power Indicator	DOUGLAS DC-9-14, 15, -31, -32, -32F, -33F,	PMA
B175-21W	INDICATOR AY	DOUGLAS DC-8-62,-62F,-63,-63F,	PMA
B175-22W	Fuel Quantity Indicator Assembly	Douglas DC-9	CMM
B175-24W	Fuel Quantity Indicator Assembly	Douglas DC-9	CMM
B175-25W	INDICATOR	DOUGLAS DC-8-62,-62F,-63,-63F,	PMA
B175-26W	Power Indicator	DOUGLAS DC-62,-62F,-63,-63F,	PMA
B175-27W	Power Indicator	DOUGLAS DC-8-62,-62F,-63,-63F,-72F,	PMA
B175-28W	Power Indicator	DOUGLAS DC-8-62,-62F,-63,-63F,	PMA
B175-29W	Power Indicator	DOUGLAS DC-8-62,-62F,-63,	PMA
B175-30	IND TOTALIZER	-33F, -34F, -41,, DOUGLAS DC-9-15, -34, -31, -32, -32F,,	PMA
B175-31	Power Indicator	DOUGLAS DC-9-32, -30, -33F, -34,	PMA
B175-6	INDICATOR	DOUGLAS DC-8-32,-33,-42,-43,-53,	PMA
B175-7	Power Indicator	DOUGLAS DC-8-32,-52,-53,DC-8F-55,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
B175-7M	Liquid Quantity Totalizer Indicator	Douglas DC-8	CMM
B175-8	Power Indicator	DOUGLAS DC-8-11,-32,-33,-51,-53,-55,DC-8F-55,	PMA
B175-9	Liquid Quantity Totalizer Indicator	Douglas DC-8	CMM
B175-9M	Power Indicator	DOUGLAS DC-832,-33,-53,-55,DC-8F-55,	PMA
B175-9MW	Liquid Quantity Totalizer Indicator	Douglas DC-8	CMM
B222-35	Indicator Totalizer	DC-9-14, -15, -31, -32, -33F,	PMA
B222-38	IND TOTALIZER	DC-9-21, -32, -33F,	PMA
B222-39	Indicator Totalizer	DC-9-32, -33F, -41,	PMA
B222-40	INDICATOR, TOT	DC-9-51,	PMA
B231-1	IND AY	BOEING B707,	PMA
B231-1-1	Indicator Assembly	BOEING B707,	PMA
B233-1	SENSOR AY	BOEING 707,	PMA
B233-1M	SENSOR WATER	BOEING B707,	PMA
B242-2	Liquidensitometer	Douglas DC-8	CMM
B267-42	Selector Switch	IAI, 1121, 1121A, 1121B, 1123,	PMA
B274-13W	Indicator	DOUGLAS DC-8-63,	PMA
B274G-1	Liquid Quantity Transmitter	Douglas DC-8	CMM
B274G-10	Liquid Quantity Transmitter	Douglas DC-8	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
B274G-12	Liquid Quantity Transmitter	Douglas DC-8	CMM
B274G-12W	Indicator Totalizer	DOUGLAS DC-8-53,-61,DC-8F-54,	PMA
B274G-5	Liquid Quantity Transmitter	Douglas DC-8	CMM
B274G-6	Indicator Totalizer	DOUGLAS DC-8-11,-12,-21,	PMA
B274G-9	Liquid Quantity Transmitter	Douglas DC-8	CMM
B277-1555	Tank Unit	DOUGLAS DC-8-11,-12,-21,	PMA
B277-1556	TANK UNIT	2,-53,-55,-61,-61F,DC-8F-54,DC-8F-55, DOUGLAS DC-8-11,-12,-21,-32,-33,-41,-42,-43,-51,-5,	PMA
B277-1557	TANK UNIT B277 TYPE DC-8	2,-53,-61,-61F,DC-8F-54,DC-8F-55, DOUGLAS DC-8-11,-12,-21,-32,-33,-41,-42,-43,-51,-5,	PMA
B277-1558	TANK UNIT B277 TYPE DC-8	-53,-55,-61,-61F,DC-8F-54,DC-8F-55, DOUGLAS DC-8-11,-12,-21,-32,-33,-42,-43,-51,-52,,	PMA
B277-1559	TANK UNIT	3,-55,-61,-61F,DC-8F-54,DC-8F-55, DOUGLAS DC-8-11,-12,-21,-32,-33,-42,-43,-51,-52,-5,	PMA
B277-1560	TANK UNIT B277 TYPE	3,-55,-61,-61F,DC-8F-54,DC-8F-55, DOUGLAS DC-8-11,-12,-21,-32,-33,-42,-43,-51,-52,-5,	PMA
B277-1561	TANK UNIT	3,-55,-61,-61F,DC-8F-54,DC-8F-55, DOUGLAS DC-8-11,-12,-21,-32,-33,-42,-43,-51,-52,-5,	PMA
B277-1562	Liquid Quantity Transmitter	Douglas DC-8	CMM
B277-1563	TANK UNIT B277 TYPE	-53,-61,-61F,-55,DC-8F-54,DC-8F-55, DOUGLAS DC-8-11,-12,-21,-32,-33,42,-43,-51,-52,,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
B277-1564	TANK UNIT	3,-55,-61,-61F,DC-8F-54,DC-8F-55, DOUGLAS DC-8-11,-12,-21,-32,-33,-42,-43,-51,-52,-5,	PMA
B277-1565	TANK UNIT B277 TYPE	,-55,-61,-61F,DC-8F-54,DC-8F-55, DOUGLAS DC-8-11,-12,-21,32,-33,-42,-43,-51,-52,-53,	PMA
B277-1566	TANK UNIT B277 TYPE	3,-55,-61,-61F,DC-8F-54,DC-8F-55, DOUGLAS DC-8-11,-12,-21,-32,-33,-42,-43,-51,-52,-5,	PMA
B277-1567	TANK UNIT B277 TYPE DC-8	-53,-55,-61,-61F,DC-8F-54,DC-8F-55, DOUGLAS DC-8-11,-12,-21,-32,-33,-42,-43,-51,-52,,	PMA
B277-1568	TANK UNIT B277 TYPE	3,-55,-61,-61F,DC-8F-54,DC-8F-55, DOUGLAS DC-8-11,-12,-21,-32,-33,-42,-43,-51,-52,-5,	PMA
B277-1569	TANK UNIT B277 TYPE DC-8	3,-55,-61,-61F,DC-8F-54,DC-8F-55, DOUGLAS DC-8-11,-12,-21,-32,-33,-42,-43,-51,-52,-5,	PMA
B277-1570	TANK UNIT B277 TYPE	3,-55,-61,-61F,DC-8F-54,DC-8F-55, DOUGLAS DC-8-11,-12,-21,-32,-33,-42,-43,-51,-52,-5,	PMA
B277-1571	TANK UNIT	3,-55,61,-61F,DC-8F-54,DC-8-55, DOUGLAS DC-8-11,-12,-21,-32,-33,-42,-43,-51,-52,-5,	PMA
B277-1572	TANK UNIT B277 TYPE	-53,-55,-61,-61F,DC-8F-54,DC-8F-55, DOUGLAS DC-8-11,-12,-21,-32,-33,-42,-43,-51,-52,,	PMA
B277-1573	TANK UNIT B277 TYPE	, -52, -53, -55, -61, -61F, DC-8F-54, DC-8F-55, DOUGLAS DC-8-11, -12, -21, -32, -33, -42, -43, -51,	PMA
B277-1574	TANK UNIT	3,-55,-61,-61F,DC-8F-54,DC-8F-55, DOUGLAS DC-8-11,-12,-21,-32,-33,-42,-43,-51,-52,-5,	PMA
B277-1575	TANK UNIT B277 TYPE	,-61,-61F,DC-8F-54,DC-8F-55, DOUGLAS DC-8-32,-33,-42,-43,-51,-52,-53,	PMA
B277-1576	TANK UNIT B277 TYPE DC-8	-53,-55,-61,-61F,DC-8F-54,DEC-8F-55, DOUGLAS DC-8-32,-33,-42,-43,-51,-52,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
B277-1667	Liquid Quantity Transmitter	Douglas DC-8	CMM
B277-1947	TANK UNIT B277 TYPE DC-8	1,-61F,-11,DC-8F-54,DC-8F-55, DOUGLAS DC-8-32,-33,-41,-51,-42,-43,-52,-53,-55,-6,	PMA
B277-1969	TANK UNIT B277 TYPE DC-8	5,-61,-61F,DC-8F-54,DC-8F-55, DOUGLAS DC-8-11,-32,-33,-41,-42,-43,-51,-52,-53,-5,	PMA
B277-2075	TANK UNIT	DOUGLAS DC-8-32,-33,-42,-43,	PMA
B277-2077	TANK UNIT	DOUGLAS DC-8-32,-33,-42,-43,	PMA
B277-2197	TANK UNIT B277 TYPE	,DC-8F-55, DOUGLAS DC-8-32,-33,-43,-52,-55,-61,-61F,DC-8F-54,	PMA
B277-2198	TANK UNIT B277 TYPE	DC-8F-55, DOUGLAS DC-8-32,-43,-52,-53,-55,-61,-61F,DC-8F-54,,	PMA
B277STI-1556	Fuel Probe Modified	DC8-61, -71	FAA approved Eng. Data
B277STI-1557	Fuel Probe Modified	DC8-61, -71	FAA approved Eng. Data
B277STI-1558	Fuel Probe Modified	DC8-61, -71	FAA approved Eng. Data
B277STI-1559	Fuel Probe Modified	DC8-61, -71	FAA approved Eng. Data
B277STI-1560	Fuel Probe Modified	DC8-61, -71	FAA approved Eng. Data
B277STI-1561	Fuel Probe Modified	DC8-61, -71	FAA approved Eng. Data
B277STI-1562	Fuel Probe Modified	DC8-61, -71	FAA approved Eng. Data
B277STI-1563	Fuel Probe Modified	DC8-61, -71	FAA approved Eng. Data
B277STI-1564	Fuel Probe Modified	DC8-61, -71	FAA approved Eng. Data
B277STI-1565	Fuel Probe Modified	DC8-61, -71	FAA approved Eng. Data
B277STI-1566	Fuel Probe Modified	DC8-61, -71	FAA approved Eng. Data

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
B277STI-1567	Fuel Probe Modified	DC8-61, -71	FAA approved Eng. Data
B277STI-1568	Fuel Probe Modified	DC8-61, -71	FAA approved Eng. Data
B277STI-1569	Fuel Probe Modified	DC8-61, -71	FAA approved Eng. Data
B277STI-1570	Fuel Probe Modified	DC8-61, -71	FAA approved Eng. Data
B277STI-1571	Fuel Probe Modified	DC8-61, -71	FAA approved Eng. Data
B277STI-1572	Fuel Probe Modified	DC8-61, -71	FAA approved Eng. Data
B277STI-1573	Fuel Probe Modified	DC8-61, -71	FAA approved Eng. Data
B277STI-1574	Fuel Probe Modified	DC8-61, -71	FAA approved Eng. Data
B277STI-1575	Fuel Probe Modified	DC8-61, -71	FAA approved Eng. Data
B277STI-1576	Fuel Probe Modified	DC8-61, -71	FAA approved Eng. Data
B277STI-1947	Fuel Probe Modified	DC8-61, -71	FAA approved Eng. Data
B277STI-1969	Fuel Probe Modified	DC8-61, -71	FAA approved Eng. Data
B294C-1	Indicator	DOUGLAS DC-8-11,-12,	PMA
B294C-2	Indicator	DOUGLAS DC-8-11,-21,-31,-32,-33,	PMA
B294C-3	Indicator	DOUGLAS DC-8-11, -53,	PMA
B328-1	Reference Condenser	DOUGLAS DC-8-11,-12,-41,-21,-P51,DC-8-54,	PMA
B328-1A	REF. CONDENSER	3,-55,-61,-61F,-21,DC-8F-54,DC-8F-55, DOUGLAS DC-8-11,-12,-32,-33,-41,- 42,-43,-51,-52,-5,	PMA
B328-2	Reference Condenser	DOUGLAS DC-8-11,-12,-21,-41,-51,DC-8F-54,	PMA
B328-2A	CONDENSER ASSY	2,-53,-55,-61,-61F,DC-8F-54,DC-8F-55, DOUGLAS DC-8-11,-12,-21,-32,-33,- 41,-42,-43,-51,-5,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
B353-18	IND REP	-33F, -34, -41, -51-15F, 34F, DOUGLAS DC-9-14, 15, -21, -31, -32, -32F,, PMA	
B353-19	IND REP	DOUGLAS DC-9-14, -15, -31, -32, -32F, -33F, -41,	PMA
B372-1	Fuel Qty Gage - Junction Box	Douglas DC-8	CMM
B372-2	Junction Box	1,-52,DC-8F-54, DOUGLAS DC-8-11,-12,-21,-31,-32,-33,-41,-42,-43,-5,	PMA
B372-3	Junction Box	-52, -51,DC-8F-54, DOUGLAS DC-8-11,-12,-21,-31,-32,-33,-41,-42,-43,,	PMA
B372-4	Junction Box	-51,-52,-53,-55,-61,-61F,-62,-62F,-63,DC-8-54,DC-8, -55, DOUGLAS DC-8-11,-12,-21,-31,-32,-33,-41,-42,-43,,	PMA
B452-1	Junction Box	1,-61,-61F,-62,-62F,-63,DC-8F-54,DC-8F-55, DOUGLAS DC-8-11,-12,-21,-31,-32,-33,-41,-42,-43,-5,	PMA
B477-1	Reference Condenser	C-8F-54,DC-8F-55, DOUGLAS DC-8-32,-33,-42,-43,-52,-53,-55,-61,-61F,D,	PMA
B572-4	Force Measuring Indicator Power Unit	Boeing/Vertol 107	CMM
B572-7	Force Measuring Indicator Power Unit	Boeing/Vertol 107	CMM
B635-1	Force Measuring Control Unit	Boeing/Vertol 107	CMM
B699-2440	D/L TRANSMITTER	FOKKER F-27,	PMA
B699-3688	DIRECT LIST TRANS.	FOKKER F-27,	PMA
B701-1	INDICATOR ASSEMBLY		BOEING 727, PMA
B706-1	INDICATOR	BOEING 727,	PMA
B706-2	INDICATOR	BOEING 727,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
B706-3	INDICATOR	BOEING 737,	PMA
B711-1	INDICATOR, HYDRAULIC OIL QUANTITY	BOEING 727,	PMA
B711-1-1	INDICATOR	BOEING 727, 727C, 727-100, -100C, -200, -200F,	PMA
B711-3	IND HYD OIL QTY	BOEING 737,	PMA
B711-4	INDICATOR	BOEING 707,	PMA
B711-5	Hydraulic Oil Indicator	BOEING 707,	PMA
B711-6	INDICATOR	BOEING 737,	PMA
B711-7	Hydraulic Oil Quantity Indicator	Boeing 707,727,737	CMM
B712-1	Hydraulic Oil Indicator	BOEING 727,	PMA
B712-2	INDICATOR	BOEING 727,	PMA
B712-4	INDICATOR ASSY	BOEING 727,	PMA
B712-6R	Liquid Quantity Indicator	Douglas DC-8	CMM
B712-6W	Hydraulic Oil Indicator	DOUGLAS DC-8-61,-62,-62F,-63,-63F,	PMA
B712-7W	INDICATOR	DOUGLAS DC-8-61,-62,-62F,-63,-63F-71,-73,-61F,-53,	PMA
B712-8W	Hydraulic Oil Indicator	DOUGLAS DC-8-61,-62,-63,-71,-72,	PMA
B758-10B	XDCR Temp	IAI, 1121, 1121A, 1121B, 1123,	PMA
B820-3605	XMTR	IAI, 1121, 1121A, 1121B, 1123,	PMA
B820-5	XMTR	IAI, 1121, 1121A, 1121B, 1123,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
B820-6	XMTR	IAI, 1121, 1121A, 1121B, 1123,	PMA
B820-9	XMTR	IAI, 1121, 1121A, 1121B, 1123,	PMA
D-3278	DRAWING LIST FOR CAMS AS350B1/B2 HUMS	EUROCOPTER AS350B1, AS350B2,	PMA
D-3377	CAMS AS355N	EUROCOPTER AS355N,	PMA
DL1020M159	ACTUATOR-SERVICE REPAIR	BOEING 747-100/200,	PMA
DL1020M159-2	ACTUATOR	BOEING 747-100/200,	PMA
DL1020M186-1	Nose Gear Rudder Pedal Steering Interconnect Actuator	Boeing 747-100	CMM
DL1020M186-2	Nose Gear Rudder Pedal Steering Interconnect Actuator	Boeing 747-100	CMM
DL1020M186-4	Nose Gear Rudder Pedal Steering Interconnect Actuator	Boeing 747-100	CMM
DL1020M186-5	LINEAR ACTUATOR	BOEING 747-200,	PMA
DL1020M186-6	Linear Actuator	BOEING 747-100,	PMA
DL1020M186-7	Actuator, Linear, Nose Gear Rudder	BOEING 747-100/200,	PMA
DL1020M199-10	Linear Actuator	LOCKHEED L1011-385 SERIES,	PMA
DL1020M199-11	ACTUATOR,LINEAR	LOCKHEED L1011-385 SERIES,	PMA
DL1020M199-12	ACTUATOR,LINEAR	LOCKHEED L1011-385-3,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
DL1020M199-4	Linear Actuator	Lockheed L-1011	CMM
DL1020M199-5	Linear Actuator	Lockheed L-1011	CMM
DL1020M199-6	Linear Actuator	Lockheed L-1011	CMM
DL1020M199-7	Linear Actuator	Lockheed L-1011	CMM
DL1020M199-8	Linear Actuator	Lockheed L-1011	CMM
DL1020M199-9	Linear Actuator	Lockheed L-1011	CMM
DL1020M324	ACTUATOR,LINEAR	EMBRAER EMB-120,	PMA
DL1028M60	Rudder Trim Actuator	de Havilland Dash-8	CMM
DL1028M60-1	ACTUATOR,LINEAR	DEHAVILLAND DHC-8-100/300,	PMA
DL1028M61-3	ACTUATOR,LINEAR	SAAB SF340A, 340B,	PMA
DL1326M119	ACTUATOR, LINEAR	BOEING 747-100/200,	PMA
DL1326M119-2	ACTUATOR,ELEC- MECH.	BOEING 747-100/200,	PMA
DL1326M167	ACTUATOR,LINEAR	BOEING 747-200,	PMA
DL1326M167-2	ACTUATOR-NO STRUCTURE	BOEING 747-100/200,	PMA
DL1326M182	ACTUATOR LINEAR	EMBRAER EMB-110,	PMA
DL1326M185-1	Engine Control Fuel Shutoff Actuator Assembly	Boeing 747	CMM
DL1326M185-2	Engine Control Fuel Shutoff Actuator Assembly	Boeing 747	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
DL1326M185-3	Engine Control Fuel Shutoff Actuator Assembly	Boeing 747	CMM
DL1326M185-4	ACTUATOR,LINEAR	BOEING 747-100/200,	PMA
DL1326M99	ACTUATOR	BOEING 747-100/200,	PMA
DL1326M99-2	ACTUATOR	BOEING 747-100/200, 767-200,	PMA
DL1632M23-1B	APU Air Inlet Door Actuator Assembly	Boeing 747	CMM
DL1632M23-4	Linear Actuator	BOEING 747-100,	PMA
DL1632M23-5	Linear Actuator	BOEING 747-100/200,	PMA
DL1724M11-1	Linear Actuator Assembly	Boeing Vertol - Mode	CMM
DL1835M3	Ice Separator Actuator	de Havilland Dash-7	CMM
DL1835M4	Ice Separator Actuator	de Havilland Dash-7	CMM
DL1835M5	ACTUATOR,LINEAR	DEHAVILLAND DHC-7 SERIES 100,	PMA
DL2033M2	ACTUATOR, LINEAR BRAKE	BOEING 747-100/200,	PMA
DL2033M2-2	ACTUATOR,LINEAR	BOEING 747-100/200,	PMA
DL2033M4	ACTUATOR-NO STRUCTURE	BOEING 747-100/200,	PMA
DL2033M4-1	ACTUATOR-NO STRUCTURE	BOEING 747-100/200,	PMA
DL2033M4-2	ACTUATOR, LINEAR	BOEING 747-100/200,	PMA
DL2033M4-3	ACTUATOR	BOEING 747-100/200,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
DL2050M4	ACTUATOR,LINEAR	MBB BO105,	PMA
DL2233M1	Linear Actuator	Bombardier BD-100 (R	CMM
DL2233M1-1	Linear Actuator	Bombardier BD-100 (R	CMM
DL2233M1-1MOD2	Linear Actuator	Bombardier BD-100 (R	CMM
DL2233M1-1MOD3	Linear Actuator	Bombardier BD-100 (R	CMM
DL2233M2	Linear Actuator	Bombardier BD-100 (R	CMM
DL2233M2MOD2	Linear Actuator	Bombardier BD-100 (R	CMM
DL2233M4	Linear Actuator	Bombardier BD-100 (R	CMM
DL2233M4MOD1	Linear Actuator	Bombardier BD-100 (R	CMM
DL2428M2	Linear Actuator	Bombardier CL600	CMM
DL2428M4	CANADAIR ACTUATOR	CANADAIR CL600-2B19 REGIONAL JET SERIES 100,	PMA
DL2428M4MOD1	Linear Actuator	Bombardier CL600	CMM
DL2428M4MOD2	Linear Actuator	Bombardier CL600	CMM
DL2428M5	Electromechanical Linear Actuator	Parker Hannifin Glob	CMM
DL2428M7	Electromechanical Linear Actuator	Parker Hannifin Glob	CMM
DL2428M8	Electromechanical Linear Actuator	Parker Hannifin Glob	CMM
DL2428M9	ACTUATOR,ELECTRO MECHANICAL,LINEA R	BOMBARDIER CL-600-2C10, REGIONAL JET SERIES 700,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
DL3025M1MOD3	Actuator	717-200,	PMA
DL3827M1-11	Trim Tab Actuator	Saab SF340	CMM
DL3827M1-17	Trim Tab Actuator	Saab SF340	CMM
DL3827M1-31	ACTUATOR, ELECTRO- MECHANICAL	SAAB SF340A, 340B,	PMA
DL3827M1-37	ACTUATOR,LINEAR	SAAB SF340A, 340B,	PMA
DL3827M1-57	ACTUATOR,ELEC- MECH	SAAB 340,	PMA
DL3922M2-11MOD1	Linear Actuator	CASA CN235 Aircraft	CMM
DL3933M1-1	ACTUATOR,LINEAR	CASA CN-235, CN-235-100,	PMA
DL3933M2-10	ACTUATOR,LINEAR	CASA CN-235, CN-235-100,	PMA
DL3933M2-10MOD1	Linear Actuator	CASA CN235 Aircraft	CMM
DL3933M2-11	ACTUATOR,LINEAR	CASA CN-235, CN-235-100,	PMA
DL3933M2-13	ACTUATOR, ELEC- MECH LINEAR	CASA CN-235-300,	PMA
DL3933M3-1	ACTUATOR,LINEAR	CASA CN-235, CN-235-100,	PMA
DL4528M1MOD5	Trim Actuator	717-200,	PMA
DL4528M1MOD6		BOEING 717-200,	PMA
DL4528M1MOD7		BOEING 717-200,	PMA
DL5040M2-4	Linear Actuator		CMM
DL5040M5	Pitch Trim Linear Actuator		CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
DL5040M5MOD2	Actuator	SA227-TT, SA227-AT, SA227-AC, SA227-BC, FAIRCHILD SA226-T, SA226-T(B), SA226-AT, SA226-TC,,	PMA
DL5040M6	Pitch Trim Linear Actuator		CMM
DL5040M8	ACTUATOR	SA227-AT, SA227-TT, SA227-AC, SA227-BC, SA227-CC,, SA227-DC, FAIRCHILD SA226-T, SA226-AT, SA226-T(B), SA226-TC,,	PMA
DR1730M11	Rotary Actuator	Vapor Corp./Hamilton	CMM
DR1730M19	Rotary Actuator	Vapor Corp./Hamilton	CMM
DR3231M1	Electromechanical Trim Rotary Actuator	Douglas MD900 Explor	CMM
DR3231M1MOD3	Electromechanical Trim Rotary Actuator	Douglas MD900 Explor	CMM
DR3231M2	Electromechanical Trim Rotary Actuator	Douglas MD900 Explor	CMM
DR3231M3	Electromechanical Trim Rotary Actuator	Douglas MD900 Explor	CMM
E1493-1MOD2		BOEING 717-200,	PMA
E1493-1MOD3	CONTROLLER B717 ]	717-200,	PMA
EA100ANH-134H	INDICATOR	BOEING 707,	PMA
EA100ANH-141H	Indicator	BOEING 707,	PMA
EA100ANH-153H	INDICATOR ASSY	BOEING 727,	PMA
EA100ANH-153H-1	Indicator	BOEING 727, 727C, 727-100, -100C, -200, -200F,	PMA
EA102ANH	Water Methanol Gaging System	Fokker F27	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
EA102ANH-135H	Enging Oil Quantity Indicator	Electra	CMM
EA102ANH-149H	INDICATOR	BOEING 727,	PMA
EA102ANH-166H	Indicator	DC-8-61, -62, 62F, 63, 63F, 71, 72, 73,	PMA
EA102ANH-D147H	Water Methanol Gaging System	Fokker F27	CMM
EA102ANH-D156H	Water Methanol Gaging System	Fokker F27	CMM
EA102ANH-D157H	Water Methanol Gaging System	Fokker F27	CMM
EA102ANH-D159H	Water Methanol Gaging System	Fokker F27	CMM
EA102ANH-D163H	Water Methanol Gaging System	Fokker F27	CMM
EA1065A-1615	TANK UNIT	BOEING 707,	PMA
EA1065A-2371	TANK UNIT	BOEING 727,	PMA
EA1065A-2371M	TANK UNIT ASSY	BOEING 727,	PMA
EA1065A-2406	TANK UNIT ASSY	BOEING 727,	PMA
EA1065A-2441M	Liquid Quantity Transmitter	BAC111/VT10	CMM
EA1065A-2721	TANK UNIT ASSY	BOEING 727,	PMA
EA1065A-2745	TANK UNIT ASSY	BOEING 707,	PMA
EA1065A-3377L/R	Liquid Quantity Transmitter	Fokker F27	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
EA1065A-3554	TRANS, LIQUID QUANTITY	BOEING DC-8-61, -62, -62F, -63, -63F,	PMA
EA1065A-3675	TANK UNIT	BOEING 727,	PMA
EA1065AW-2865	Tank Unit	BOEING 727,	PMA
EA1066A-1620	Tank Unit	1,-52,-53, DOUGLAS DC-8-11,-12,-21,-31,-32,-33,-41,-42,-43,-5,	PMA
EA1066A-2183	Hydraulic Oil Quantity Tank Unit	Douglas DC-8	CMM
EA1066AW-2183	TRANSMITTER HYDRAULIC	DOUGLAS DC-8-53,-61,-62,-62F,-63F;DC-8F-55,	PMA
EA1068A-1907	Tank Unit	Lockheed L188	CMM
EA1069A-1908	Tank Unit	Lockheed L188	CMM
EA1091A-1626	Tank Unit	Lockheed L188	CMM
EA1091A-1628	Tank Unit	Lockheed L188	CMM
EA1092A-2407	TANK UNIT	BOEING 727,	PMA
EA1093A-2408	TANK UNIT	BOEING 727,	PMA
EA1093A-2408-1	TANK UNIT	BOEING 727, 727C, 727-100, -100C, -200, -200F,	PMA
EA1093A-3544	Tank Unit	BOEING 737,	PMA
EA1093A-3679	TRANSMITTER, HYD	BOEING 737,	PMA
EA1093AW-2865	Hydraulic Oil Quantity Tank Unit	Boeing 727	CMM
EA1093AW-3679	Liquid Quantity Transmitter	Boeing 737-300,-400,	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
EA148ANH	Water Methanol Gaging System	Fokker F27	CMM
EA148ANH-131H	Liquid Quantity Transmitter	BAC111	CMM
EA148ANH-132H	Liquid Quantity Transmitter	BAC111	CMM
EA148ANH-92H	Engine Oil Quantity Indicator	Electra	CMM
EA148ANH-93H	Engine Oil Quantity Indicator	Electra	CMM
EA148ANH-D111H	Hydraulic Oil Indicator	FOKKER F-27,	PMA
EA148ANH-D119H	Hydraulic Oil Indicator	FOKKER F-27,	PMA
EA148ANH-D120H	Hydraulic Oil Indicator	FOKKER F-27,	PMA
EA148ANH-D126H	INDICATOR, TOTALIZING, LIQUID QTY	FOKKER F-27,	PMA
EA148ANH-D129H	INDICATOR.TOTALIZ IG,LIQUID QTY	FOKKER F-27,	PMA
EA401-1	Hydraulic Oil Quantity Indicator	Douglas DC-8	CMM
EA401-2	Hydraulic Oil Quantity Indicator	Douglas DC-8	CMM
EA401-3	Hydraulic Oil Quantity Indicator	Douglas DC-8	CMM
EA401-4	Hydraulic Oil Quantity Indicator	Douglas DC-8	CMM

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
EA401-6	Liquid Quantity Indicator	Douglas DC-8	CMM
EA401-7	Oil Quantity Indicator	-52,-53,-55,-61,-71,-71F,DC-8F-54,-55, DOUGLAS DC-8-11,-12,-21,-31,-32,-33,-41,-43,-51,,	PMA
EA401-8	INDICATOR, OIL QUANTITY	52,-53,-55,-61,-71,-71F,DC-8F-32,-33,-53,-55,, DC-8F-55, DOUGLAS DC-8--11,-21,-42,-31,-32,-33,-41,-43,-51,-,	PMA
EA401-8W	INDICATOR, OIL QUANTITY	DOUGLAS DC-8-32,-33,-53,-55,DC-8F-55,	PMA
EA5241-14	SLEEVE	-41, -51, DOUGLAS DC-9-31, 32, 32F, 33F, -34, 34F,,	PMA
EA5241-14-2	SLEEVE	DC-9-31,-32,-33F,-34,-41,-51,-81,-82,-83,-87,, MD-88,	PMA
EA5241-20	SLEEVE	DC-9-31, -32, -32F, -33, -34, -34F, -41, -51,	PMA
EA5241-21	SLEEVE	DC-9-31, -32, -32F, -33F, -34, -41, -51,	PMA
EA585A-1320L/R	TANK UNIT ASY	DC-6A,	PMA
EA805FGP-1618	Engine Oil Quantity Tank Unit	Douglas DC-8	CMM
EA805GP-1618	Tank Unit	5,-61,-61F;DC-8F-54,-55, DOUGLAS DC-8-11,-12,-21,-31,-32,-33,-51,-52,-53,-5,	PMA
EA818-3406	Transmitter	Douglas DC-8	CMM
EDL5040M2-4	Actuator	SA227-TT, SA227-AC, FAIRCHILD SA226-T, SA226-T(B), SA226-AT, SA226-TC,,	PMA
EDL5040M2-6	Actuator	FAIRCHILD SA227-TT,	PMA
G17-0000-01	SP-4210 Avionics Certification Test System		CMM
IDL95-110	Drawing List	AGUSTA A109K2,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
LA14-002	Linear Actuator	Bombardier BD-100 (R	CMM
LA14-002M1	Linear Actuator	Bombardier BD-100 (R	CMM
LA14-002M1MOD2	Linear Actuator	Bombardier BD-100 (R	CMM
LA14-002M1MOD3	Linear Actuator	Bombardier BD-100 (R	CMM
PL300498-001-2		-200F, -300, -747SP, BOEING 747-100, -100B,-100B SUD, -200B, -200C,	PMA
PL300498-002-2		-200F, -300, -747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
PL300498-003-2		-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,	PMA
PL300498-007-2		-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
PL300498-008-2		-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
PL300498-011-2		-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
PL300498-013-2		-200F, -300, 747SP, BOEING 747-100, -100B,-100B SUD, -200B, -200C,,	PMA
PL300498-014-2		-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
PL300498-015-2		-200F, -300, 747SP, BOEING 747-100, -100B, -100B SUD, -200B, -200C,,	PMA
S275-2	RECEPTACLE BULKHEAD	-32F, -33F, -34, -34F, -41, -51, DC-8-62,-62F,-63,-63F,DC-8-54,DC-8-55, DOUGLAS DC-9-11, -14, -15, -15F, -21, -31, -32,,	PMA
S285-1	LINE PLUG- ISOLATED GROUND	-33F, -34, -34F, -41, -51, DOUGLAS DC-9-14, -15, 15F, -21, -31, -32, 32F,,	PMA
S62PA-4	CONNECTOR COAX PLUG	DOUGLAS DC-8-62,-62F,-63,-63F,DC-8F-55,	PMA
S62PE-4	CONNECTOR, PLUG, ELECTRICAL	8F-55, DOUGOLAS DC-8-51,-52,-53,-55,-61,-61F,DC-8F-54,DC-	PMA
S62PH-11	CONNECTOR, PLUG, ELECTRICAL	-55, DOUGLAS DC-8-51,-52,-53,-55,61,-61F,DC-8F-54,DC-8F,	PMA

<b>PARTNO</b>	<b>DESCRIPTION</b>	<b>AIRCRAFT</b>	<b>Source</b>
S62PH-4	CONN, PLUG	DC-9-31,-32,-32F,-33F,-34,-34F,-41,-51,	PMA
S73EA	CONNECTOR, PLUG, ELEC	2,-53,-55,-61,-61F,DC-8F-54,DC-8F-55, DOUGLAS DC-8-11,-12,-21,-32,-33,- 41,-42,-43,-51,-5,	PMA
S73EH	CONNECTOR, PLUG, ELECTRICAL, ELBOW TYPE	2,-53,-55,-61,-61F,DC-8F-54,DC-8F-55, DOUGLAS DC-8-11,-12,-21,-32,-33,- 41,-42,-43,-51,-5,	PMA